

# MS-98E2

***(v1.x) Industrial Computer Board***



## Copyright Notice

The material in this document is the intellectual property of **MICRO-STAR INTERNATIONAL**. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

## Trademarks

All trademarks are the properties of their respective owners.

## Revision History

Revision	Date
V1.0	2017/03

## Technical Support

If a problem arises with your system and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit the MSI website for technical guide, BIOS updates, driver updates and other information, or contact our technical staff via <http://www.msi.com/support/>

# Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. **DO NOT COVER THE OPENINGS.**
- Make sure the voltage of the power source and adjust properly 110/220V before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always Unplug the Power Cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that could damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the equipment.
  - The equipment has been exposed to moisture.
  - The equipment does not work well or you can not get it work according to User's Manual.
  - The equipment has dropped and damaged.
  - The equipment has obvious sign of breakage.
- **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT UNCONDITIONED, STORAGE TEMPERATURE ABOVE 60°C (140°F), IT MAY DAMAGE THE EQUIPMENT.**

## Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

[http://www.msi.com/html/popup/csr/evmtrptt\\_pcm.html](http://www.msi.com/html/popup/csr/evmtrptt_pcm.html)

## Battery Information

---



European Union:

Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

---



廢電池請回收

Taiwan:

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

---



California, USA:

The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California.

For further information please visit:

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

---

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.

---

## CE Conformity

Hereby, Micro-Star International CO., LTD declares that this device is in compliance with the essential safety requirements and other relevant provisions set out in the European Directive.



## FCC-B Radio Frequency Interference Statement



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

## WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



# CONTENTS

Copyright Notice.....	ii
Trademarks .....	ii
Revision History .....	ii
Technical Support.....	ii
Safety Instructions.....	iii
Chemical Substances Information .....	iv
Battery Information.....	iv
CE Conformity.....	v
FCC-B Radio Frequency Interference Statement .....	v
WEEE Statement .....	v
<b>1 Overview.....</b>	<b>1-1</b>
Motherboard Specifications.....	1-2
Motherboard Layout.....	1-5
<b>2 Hardware Setup .....</b>	<b>2-1</b>
CPU (Central Processing Unit) .....	2-4
Memory .....	2-6
Power Supply .....	2-7
Rear Panel I/O .....	2-8
Connector.....	2-11
Jumper .....	2-18
Slot.....	2-20
<b>3 BIOS Setup.....</b>	<b>3-1</b>
Entering Setup .....	3-2
The Menu Bar .....	3-4
Main .....	3-5
Advanced .....	3-7
Boot.....	3-12
Security .....	3-13
Chipset .....	3-19
Power.....	3-21
Save & Exit.....	3-22
<b>Appendix WDT &amp; GPIO .....</b>	<b>A-1</b>
WDT Sample Code .....	A-2
GPIO Sample Code .....	A-3

# 1 Overview

Thank you for choosing the MS-98E2, an excellent industrial computer board.

Based on the innovative Intel® C236 / H110 chipset for optimal system efficiency, the MS-98E2 accommodates the Intel® Desktop Kaby Lake-S/ Skylake-S processor and supports up to 4 / 2 DDR4 2133MHz / 2400MHz (7th Gen) U-DIMM slots to provide the maximum of 64 / 32GB memory capacity.

Designed to withstand harsh industrial conditions, the MS-98E2 is engineered to provide reliable performance for a wide variety of industrial applications.

# Motherboard Specifications

## Processor

- 7th/6th Gen Intel® Desktop Kaby Lake-S/Skylake-S Core™ i7/i5/i3/Pentium®/Celeron® Series Processor, Max 95W

## Chipset

- SKU1: Intel® C236
- SKU2: Intel® H110

## Memory

- Dual channel DDR4, up to 2133MHz / 2400MHz (7th Gen)
- SKU1: 4 x U-DIMM slots, up to 64GB, ECC
- SKU2: 2 x U-DIMM slots, up to 32GB, Non ECC

## Network

- 1 x Intel® I210-AT GbE LAN (Co-lay I211-AT)
- 1 x Intel® I219-LM GbE LAN PHY

## Storage

- SKU1:C236
  - 6 x SATA 6Gb/s (RAID 0, 1, 5, 10)
  - 1 x mSATA
  - 1 x M.2
- SKU2:H110
  - 3 x SATA 6Gb/s
  - 1 x mSATA

## Expansion Slot

- SKU1:C236
  - 1 x PCIe x16 slot
  - 1 x PCIe x1 slot
  - 1 x PCIe x8 slot (signal x4)
  - 1 x PCI slot
  - 1 x M.2 slot (M Key, PCIe x4, SATA 6Gb/s)
  - 1 x full-size Mini-PCIe slot (Support PCIe, SATA 6Gb/s, USB2.0)
- SKU2:H110
  - 1 x PCIe x16 slot
  - 1 x PCIe x1 slot
  - 1 x PCIe x8 slot (signal x1)
  - 1 x PCI slot
  - 1 x full-size Mini-PCIe slot (SATA 6Gb/s)



## Internal I/O

- 1 x 8-pin power connector
- 1 x 24-pin power connector
- 3 x System fan connectors
- 1 x CPU fan connector
- 2 x USB2.0 connectors (4 ports)
- 1 x USB3.0 port (2 ports) (SKU1:C236)
- 5 x RS-232 COM port connectors (0V/5V/12V)(COM2~COM6)
- 1 x RS-232 COM port header (COM7~COM10) (SKU1:C236)
- 5 x COM port jumpers
- 1 x GPIO header
- 1 x Front panel header
- 1 x S/PDIF connector
- 1 x Amplifier header
- 1 x TPM header
- 1 x LVDS connector (SKU1:C236)
- 1 x LVDS inverter connector (SKU1:C236)
- 1 x LVDS power jumpers (SKU1:C236)
- 1 x PCI power jumper
- 1 x Front audio header
- 1 x Chassis intrusion header
- 1 x Clear CMOS jumper
- 1 x AT/ATX select jumper
- 1 x ME jumper
- 1 x LAN configure jumper
- 1 x SMBus connector
- 1 x Buzzer header

## Rear I/O

- 1 x PS/2 mouse/keyboard combo port
- 2 x USB2.0 ports
- 1 x RS-232/422/485 serial port (0V/5V/12V)
- 1 x DisplayPort
- 1 x VGA port
- 1 x DVI-D port
- 2 x RJ45 GbE LAN ports
- 4 x USB3.0 ports
- 3 x Audio jacks (Line-In, Line-Out, Mic-In)

## Graphics

- Integrated Intel® HD Graphics
  - 1 x VGA (Max resolution 1920 x 1200)
  - 1 x DVI-D (Max resolution 1920 x 1200)
  - 1 x DisplayPort (Max resolution 3840 x 2160)
  - 1 x LVDS (18/24 bit, Dual Channel)(SKU1:C236)
- SKU1 C236: Up to 3 independent displays (VGA+DVI-D+DP, VGA+DVI-D+LVDS, DVI-D+DP+LVDS)
- SKU2 H110: Up to 2 independent displays (VGA+DVI-D, VGA+DP, DVI-D+DP)

## Audio

- Realtek® ALC887/888S HD Audio Codec
- 1 x Amplifier header
- 1 x Front audio header
- 1 x S/PDIF connector
- 3 x Audio jacks (Line-In, Line-Out, Mic-In)

## Environment

- Operating Temperature: -10 ~ 60°C
- Storage Temperature: -20 ~ 80°C
- Humidity: 5 ~ 95% RH, non-condensing

## Form Factor

- Micro-ATX: 244mmx244mm

## Certification



- CE, FCC, BSMI, VCCI, RCM

## SKU Comparison



Features \ SKUs	SKU1:C236	SKU2:H110
PCH	C236	H110
Memory	DDR4, support ECC	DDR4, non-ECC
SATA	6 x SATA 6Gb/s	3 x SATA 6Gb/s
M.2	Yes	No

# Motherboard Layout

SKU1:C236

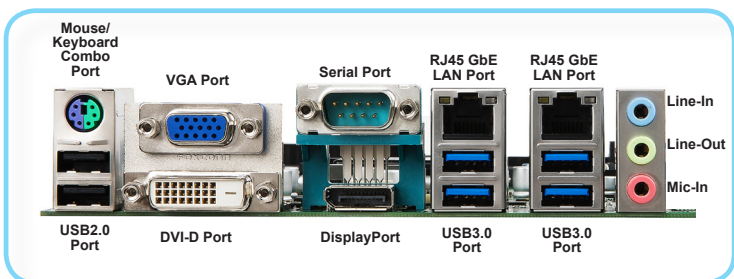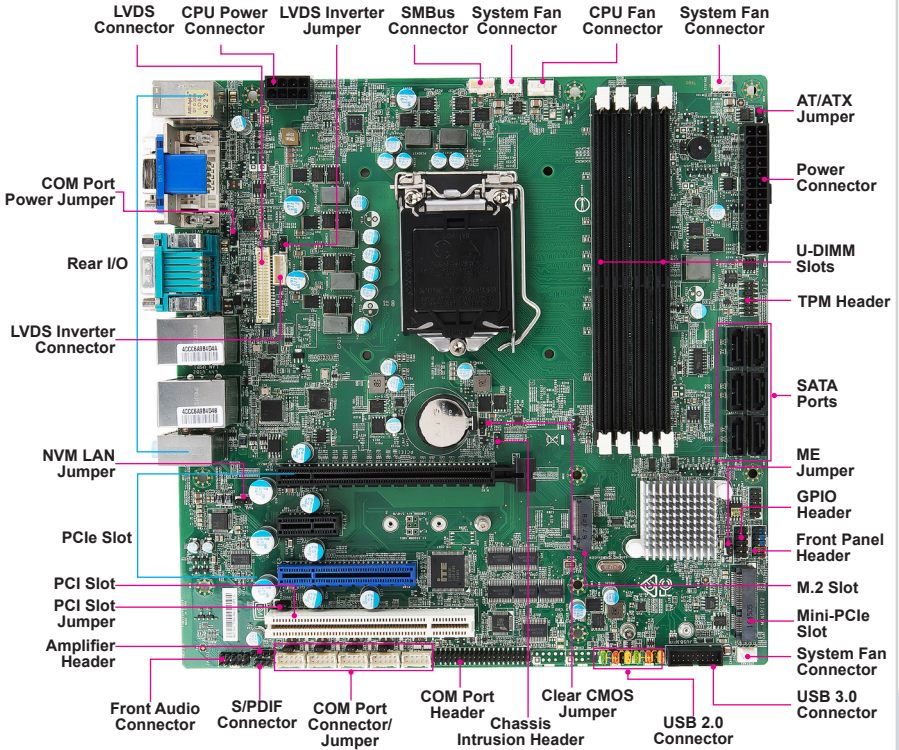

SKU2:H110

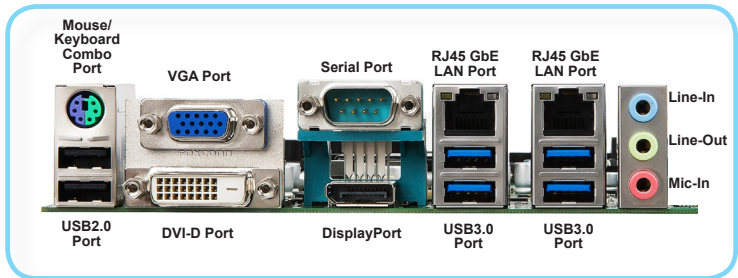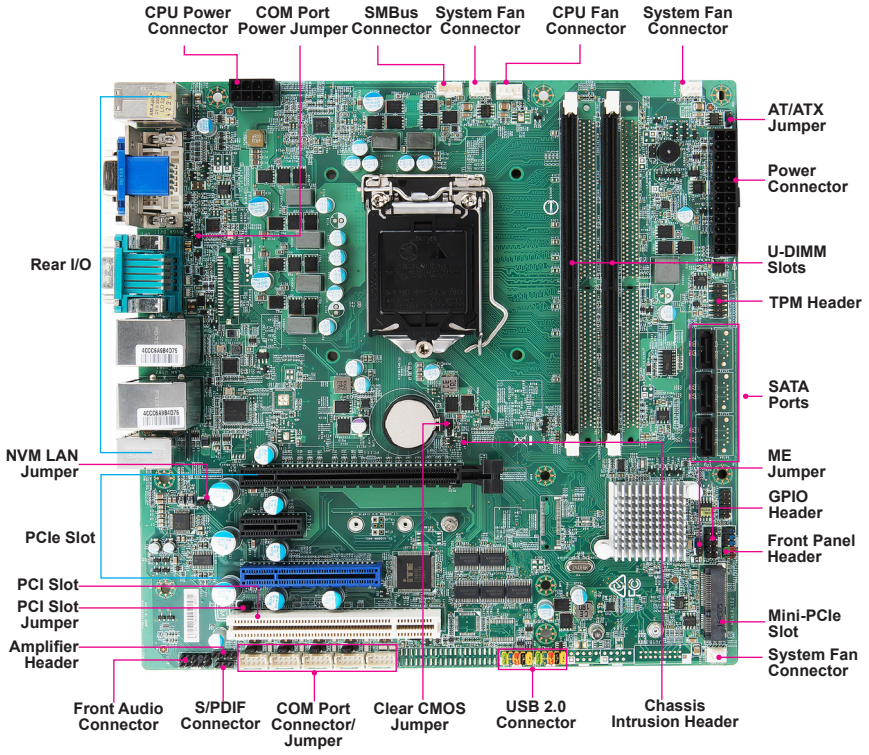

# 2 Hardware Setup



This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.

Use a grounded wrist strap before handling computer components. Static electricity may damage the components.

# Components Reference Guide

<b>CPU (Central Processing Unit)</b> .....	<b>2-4</b>
Introduction to LGA 115x CPU .....	2-4
CPU Installation .....	2-5
<b>Memory</b> .....	<b>2-6</b>
Dual-Channel Mode .....	2-6
Recommended Memory Population.....	2-6
Installing Memory Modules .....	2-6
<b>Power Supply</b> .....	<b>2-7</b>
System Power Connector: PWRCONN1 .....	2-7
CPU Power Connector: JPWR1.....	2-7
<b>Rear Panel I/O</b> .....	<b>2-8</b>
<b>Connector</b> .....	<b>2-11</b>
Fan Power Connector: CPUFAN1, SYSFAN1~3 .....	2-11
Serial ATA Connector: SATA1~6 (SATA 6Gb/s for SKU1:C236) .....	2-11
Serial ATA Connector: SATA1~3 (SATA 6Gb/s for SKU2:H110).....	2-11
Chassis Intrusion Header: J4 .....	2-12
GPIO Connector: JGPIO1.....	2-12
USB2.0 Connector: JUSB1, JUSB4 (SKU1:C236) .....	2-12
USB2.0 Connector: JUSB6, JUSB7 (SKU2:H110).....	2-12
Audio Amplifier Connector: JAMP1 .....	2-13
Front Panel Header: JFP1 .....	2-13
I2C Bus Connector: JSMB1 .....	2-13
LVDS Inverter Connector: JINVT1 (SKU1:C236).....	2-14
LVDS Connector: JLVDS1 (SKU1:C236).....	2-14
RS-232 COM Port Header: COM7~COM10 (SKU1:C236).....	2-15
LPC Debug Port Connector: JTPM1 ( <i>With TPM Support</i> ) .....	<b>2-15</b>
RS232 Serial Port Connector: JCOM2~JCOM6 .....	2-16
USB 3.0 Connector: JUSB3 (SKU1:C236).....	2-16
Front Audio Connector: JAUD1.....	2-17
S/PDIF Pinheader: JSPD11 .....	2-17

<b>Jumper</b> .....	<b>2-18</b>
NVM LAN Jumper: JNVM1 .....	2-18
Clear CMOS Jumper: J_CMOS1 .....	2-18
AT/ATX Select Jumper: JAT1 .....	2-18
COM Port Power Jumper: JCOMP7 ( <i>for JCOM1</i> ), JCOMP3~6 ( <i>for JCOM3~6</i> ) .....	2-19
LVDS Power Jumper: JVDD1 (SKU1:C236) .....	2-19
PCI Slot Power Jumper: JVDD2 .....	2-19
ME Jumper: ME_DIS1 .....	2-19
<b>Slot</b> .....	<b>2-20</b>
PCIe (Peripheral Component Interconnect Express) Slot.....	2-20
Mini-PCIe (Peripheral Component Interconnect Express) Slot.....	2-20
M.2 Slot (SKU1:C236).....	2-20
PCI (Peripheral Component Interconnect) Slot.....	2-21

## CPU (Central Processing Unit)

When installing the CPU, make sure that you install the cooler to prevent overheating. If you do not have the CPU cooler, consult your dealer before turning on the computer.

### **Important!**

#### **Overheating**


*Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.*

#### **Replacing the CPU**

*While replacing the CPU, always turn off the power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.*

### **Introduction to LGA 115x CPU**

The surface of LGA 115x CPU. Remember to apply some thermal paste on it for better heat dispersion.


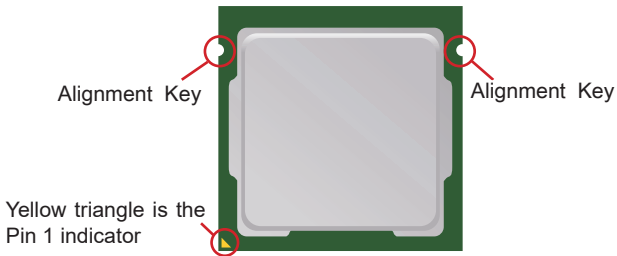






## CPU Installation

When you are installing the CPU, make sure the CPU has a cooler attached on the top to prevent overheating. Meanwhile, do not forget to apply some thermal paste on CPU before installing the heat sink/cooler fan for better heat dispersion.

1. Open the load lever and remove the plastic cap.
2. Lift the load lever up to fully open position.

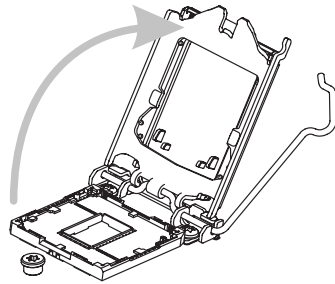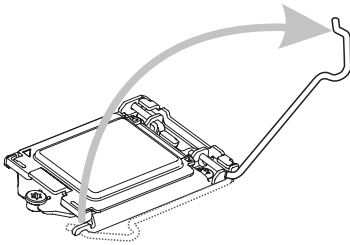

3. After confirming the CPU direction for correct mating, put down the CPU in the socket housing frame. Be sure to grasp on the edge of the CPU base. Note that the alignment keys are matched.
4. Engage the load lever while pressing down lightly onto the load plate.

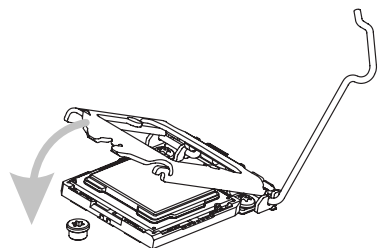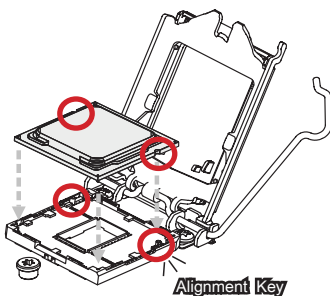

### **Important**

Visually inspect if the CPU is seated well into the socket. If not, take out the CPU with pure vertical motion and reinstall.

# Memory

## Dual-Channel Mode

In Dual-Channel mode, make sure that you install memory modules of the **same type and density** in different channel DIMM slots.

## Recommended Memory Population

### SKU1:C236

Number of DIMMs installed	1	2	3	4
DIMM1 (ch A)	V	V	V	V
DIMM2 (ch A)			V	V
DIMM3 (ch B)		V	V	V
DIMM4 (ch B)				V

### SKU2:H110

Number of DIMMs installed	1	2
DIMM1 (ch A)	V	V
DIMM3 (ch B)		V

### **Important**

- "V" indicates a populated DIMM slot.
- Paired memory installation for Max performance.
- Populate the same DIMM type in each channel, specifically: 1. Use the same DIMM size; 2. Use the same number of ranks per DIMM.

## Installing Memory Modules

1. Unlock the DIMM slot by flipping open its side clips.
2. Vertically insert the DIMM into the slot. The DIMM has an off-center notch at the bottom that will only allow it to fit one way into the slot. Push the DIMM deeply into the slot. The side clips of the slot will automatically close when the DIMM is properly seated and an audible click should be heard.
3. Manually check if the DIMM has been locked in place by the slot's side clips.


### **Important**

You can barely see the golden finger if the DIMM is properly inserted in the DIMM slot.

# Power Supply


## System Power Connector: PWRCONN1

This connector allows you to connect a power supply. To connect to the power supply, make sure the plug of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector.

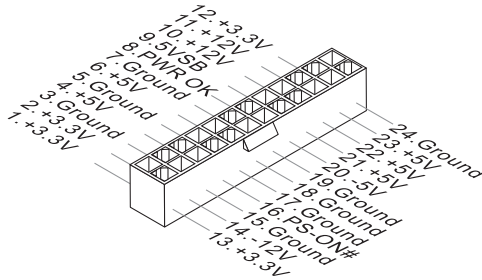

## CPU Power Connector: JPWR1


This connector is used to provide power to the CPU.

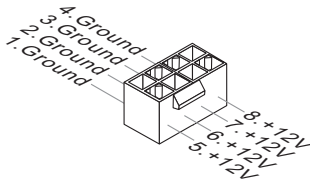

### **Important**

*Make sure that all power connectors are connected to the power supply to ensure stable operation of the motherboard.*

## Rear Panel I/O

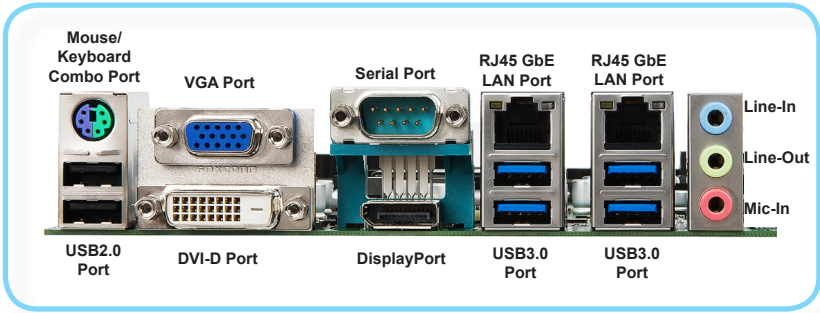

### ➤ Mouse / Keyboard Combo Port

The standard PS/2® mouse/keyboard DIN connector is for a PS/2® mouse/keyboard.

### ➤ USB2.0 Port

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices.

### ➤ VGA Port


The DB15-pin female connector is provided for monitor.

### ➤ DVI-D Port

The DVI-D (Digital Visual Interface-Digital) connector allows you to connect an LCD monitor. It provides a high-speed digital interconnection between the computer and its display device. To connect an LCD monitor, simply plug your monitor cable into the DVI connector, and make sure that the other end of the cable is properly connected to your monitor (refer to your monitor manual for more information.)

### ➤ RS-232/422/485 Serial Port: JCOM1 (0V/5V/12V)

The serial port is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. With Auto-Flow Control and RI Function Support, it supports barcode scanners, barcode printers, bill printers, credit card machine, etc.



**RS-232**

PIN	SIGNAL	DESCRIPTION
1	NDCD	Data Carrier Detect
2	NSIN	Signal In
3	NSOUT	Signal Out
4	NDTR	Data Terminal Ready
5	GND	Signal Ground
6	NDSR	Data Set Ready
7	NRTS	Request To Send
8	NCTS	Clear To Send
9	VCC	5V or 12V selected by jumper

**RS-422**

PIN	SIGNAL	DESCRIPTION
1	422 TXD-	Transmit Data, Negative
2	422 TXD+	Transmit Data, Positive
3	422 RXD+	Receive Data, Positive
4	422 RXD-	Receive Data, Negative
5	GND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

**RS-485**


PIN	SIGNAL	DESCRIPTION
1	485 TXD-	Transmit Data, Negative
2	485 TXD+	Transmit Data, Positive
3	NC	No Connection
4	NC	No Connection
5	GND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

**► DisplayPort**

DisplayPort is a digital display interface standard. This connector is used to connect a monitor with DisplayPort inputs.

### ➤ RJ45 GbE LAN Port

The standard single RJ45 LAN jack is provided for connection to the Local Area Network (LAN). You can connect a network cable to it.

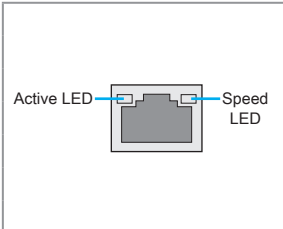	LED	LED Status	Description
	Active LED	Off	No link
		Yellow	Linked
		Blinking	Data activity
	Speed LED	Off	10 Mbps connection
		Green	100 Mbps connection
Orange		1 Gbps connection	

### ➤ USB3.0 Port

The USB 3.0 port is backward-compatible with USB 2.0 devices and supports data transfer rate up to 5 Gbit/s (SuperSpeed).

### ➤ Line-In Jack

For external CD player, tapeplayer or other audio devices.

### ➤ Line-Out Jack

For speakers or headphones.


### ➤ Mic-In Jack

For microphones.

## Connector

### Fan Power Connector: CPUFAN1, SYSFAN1~3

The fan power connectors support system cooling fan with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND. If the motherboard has a System Hardware Monitor chipset onboard, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

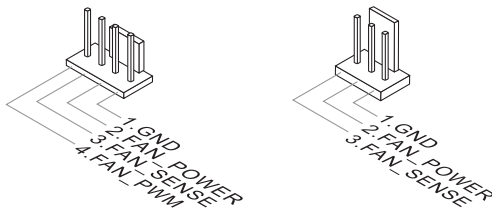


#### **Important**

- Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.
- Fan cooler sets with 3- or 4-pin power connector are both available.

### Serial ATA Connector: SATA1~6 (SATA 6Gb/s for SKU1:C236)

### Serial ATA Connector: SATA1~3 (SATA 6Gb/s for SKU2:H110)

This connector is a high-speed Serial ATA interface port. Each connector can connect to one Serial ATA device.




#### **Important**

Please do not fold the SATA cable into a 90-degree angle. Otherwise, data loss may occur during transmission.


## Chassis Intrusion Header: J4

This connector connects to the chassis intrusion switch cable. If the computer case is opened, the chassis intrusion mechanism will be activated. The system will record this intrusion and a warning message will flash on screen. To clear the warning, you must enter the BIOS utility and clear the record.

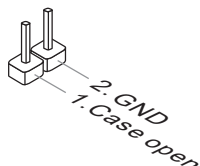

## GPIO Connector: JGPIO1


This connector is provided for the General-Purpose Input/Output (GPIO) peripheral module.

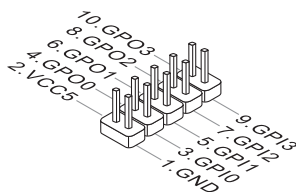

## USB2.0 Connector: JUSB1, JUSB4 (SKU1:C236)

## USB2.0 Connector: JUSB6, JUSB7 (SKU2:H110)

This connector, compliant with Intel I/O Connectivity Design Guide, is ideal for connecting high-speed USB interface peripherals such as USB HDD, digital cameras, MP3 players, printers, modems and the like.

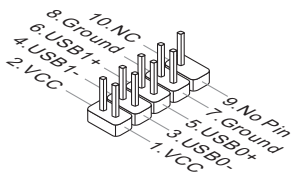


### **Important**

Note that the pins of VCC and GND must be connected correctly to avoid possible damage.




## Audio Amplifier Connector: JAMP1

The connector is used to connect audio amplifiers to enhance audio performance.

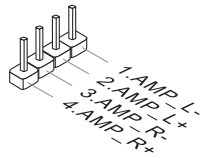


## Front Panel Header: JFP1

This front panel connector is provided for electrical connection to the front panel switches & LEDs and is compliant with Intel Front Panel I/O Connectivity Design Guide.

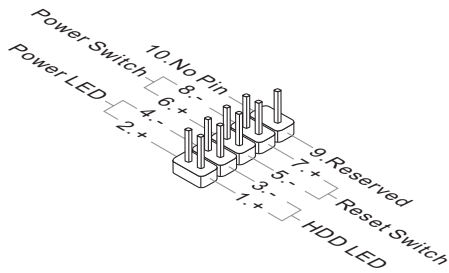


## I2C Bus Connector: JSMB1

This connector, known as I2C, is for users to connect System Management Bus (SMBus) interface.

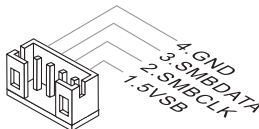


## LVDS Inverter Connector: JINVT1 (SKU1:C236)

The connector is provided for LCD backlight options.

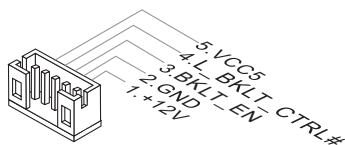

## LVDS Connector: JLVDS1 (SKU1:C236)

The LVDS (Low Voltage Differential Signal) connector provides a digital interface typically used with flat panels. After connecting an LVDS interface flat panel to the JLVDS1, be sure to check the panel datasheet and set the LVDS jumper to proper power voltage.

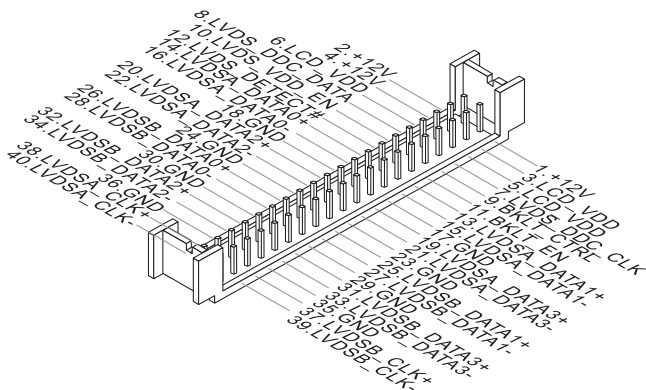


### Important

Pin 12 is a detect pin. When using a customized LVDS cable, pin 12 should be a signal ground with a low impedance. Otherwise, LVDS will not function.


## RS-232 COM Port Header: COM7~COM10 (SKU1:C236)

This connector is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach serial devices to it through the optional serial port bracket.

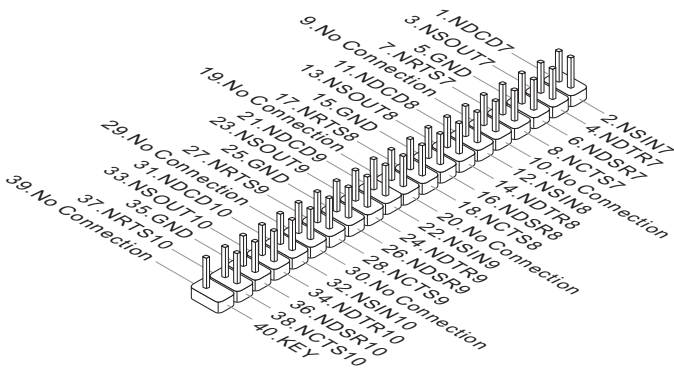


## LPC Debug Port Connector: JTPM1 (With TPM Support)

This connector works as LPC debug port and supports TPM modules.

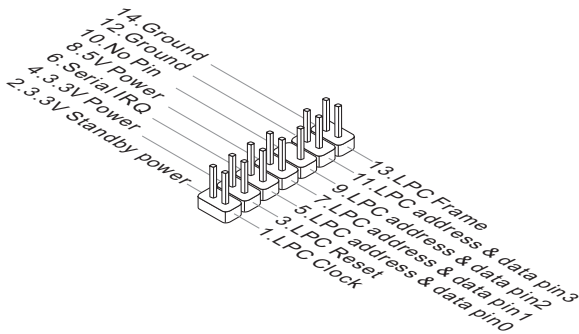

## RS232 Serial Port Connector: JCOM2~JCOM6


This connector is a 16550A high speed communications port that sends/receives 16 bytes FIFOs. You can attach serial devices to it through the optional serial port bracket.

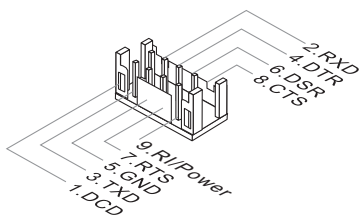

PIN	SIGNAL	DESCRIPTION
1	DCD	Data Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	RI/POWER	Ring / Power

## USB 3.0 Connector: JUSB3 (SKU1:C236)

The USB 3.0 port is backwards compatible with USB 2.0 devices. It supports data transfer rates up to 5Gbits/s (SuperSpeed).

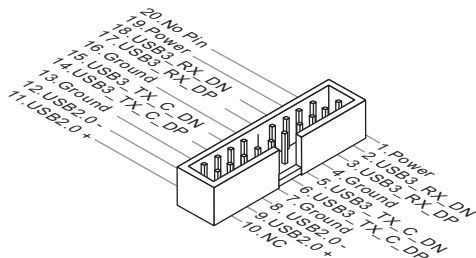


### **Important**

- Note that the VCC and GND pins must be connected correctly to avoid possible damage.
- To use a USB 3.0 device, you must connect the device to a USB 3.0 port through an optional USB 3.0 compliant cable.


## Front Audio Connector: JAUD1

This connector allows you to connect the front panel audio and is compliant with Intel Front Panel I/O Connectivity Design Guide.

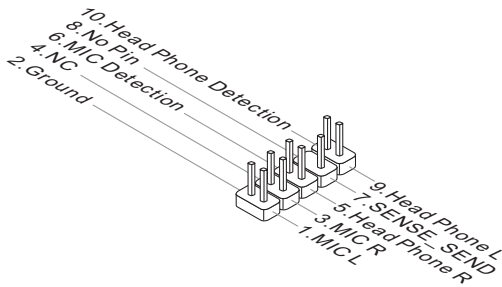

## S/PDIF Pinheader: JSPD11

This pinheader is used to connect S/PDIF (Sony & Philips Digital Interconnect Format) interface for digital audio transmission.

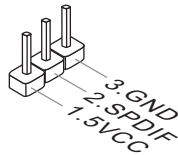

# Jumper

## **Important**

Avoid adjusting jumpers when the system is on; it will damage the motherboard.

### **NVM LAN Jumper: JNVM1**

Use this jumper to specify the operation of LAN.



On: Enable security and the INVM lock



Off: Disable security and the INVM lock (Non-secure mode)

### **Clear CMOS Jumper: J\_CMOS1**

There is a CMOS RAM onboard that has a power supply from an external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, set the jumper to clear data.



Normal



Clear CMOS

## **Important**

You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the motherboard.

### **AT/ATX Select Jumper: JAT1**

This jumper allows users to select between AT and ATX power.




ATX



AT

## COM Port Power Jumper: JCOMP7 (for JCOM1), JCOMP3~6 (for JCOM3~6)

These jumpers specify the operation voltage of the onboard serial ports.

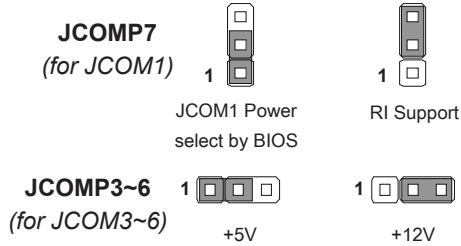


## LVDS Power Jumper: JVDD1 (SKU1:C236)

Use this jumper to specify the operation voltage of the LVDS display.



## PCI Slot Power Jumper: JVDD2

Use this jumper to specify the power for PCI slot.



## ME Jumper: ME\_DIS1


This jumper enables/disables ME.




## Slot

### PCIe (Peripheral Component Interconnect Express) Slot

The PCI Express slot supports PCIe interface expansion cards.

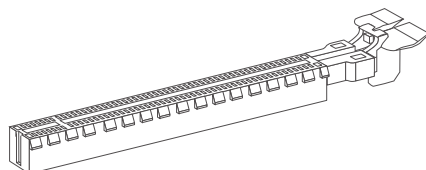

PCIe x16 slot




PCIe x8 slot

---

### Mini-PCIe (Peripheral Component Interconnect Express) Slot

The Mini-PCIe slot is provided for wireless LAN cards, TV tuner cards, Robson NAND Flash cards and other Mini-PCIe cards.

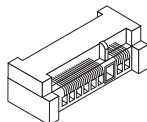

The MINIPCI-E2 is also shared to be mSATA slot. The mSATA slot is for mSATA interface solid state drives (SSD).


#### ***Important***

*Support PCIe, SATA 6Gb/s, USB2.0 for SKU1, support SATA 6Gb/s for SKU2*

---

### M.2 Slot (SKU1:C236)


The M.2 slot is provided for M.2 interface device.





## PCI (Peripheral Component Interconnect) Slot

The PCI slot supports PCI interface expansion cards.

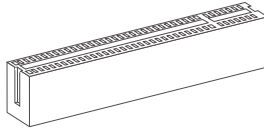

### **Important**

*When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.*



# 3 BIOS Setup

This chapter provides information on the BIOS Setup program and allows users to configure the system for optimal use.

Users may need to run the Setup program when:

- An error message appears on the screen at system startup and requests users to run SETUP.
- Users want to change the default settings for customized features.

## **Important**

- *Please note that BIOS update assumes technician-level experience.*
- *As the system BIOS is under continuous update for better system performance, the illustrations in this chapter should be held for reference only.*

## Entering Setup

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press <DEL> or <F2> key to enter Setup.

Press <DEL> or <F2> to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it OFF and On or pressing the RESET button. You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

### **Important**

*The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.*

## Control Keys

← →	Select Screen
↑ ↓	Select Item
Enter	Select
+ -	Change Option
F1	General Help
F7	Previous Values
F9	Optimized Defaults
F10	Save & Reset
Esc	Exit

## Getting Help

After entering the Setup menu, the first menu you will see is the Main Menu.

### Main Menu

The main menu lists the setup functions you can make changes to. You can use the arrow keys ( ↑ ↓ ) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.


### Sub-Menu

If you find a right pointer symbol appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use arrow keys ( ↑ ↓ ) to highlight the field and press <Enter> to call up the sub-menu. Then you can use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the <Esc >.

### General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

# The Menu Bar

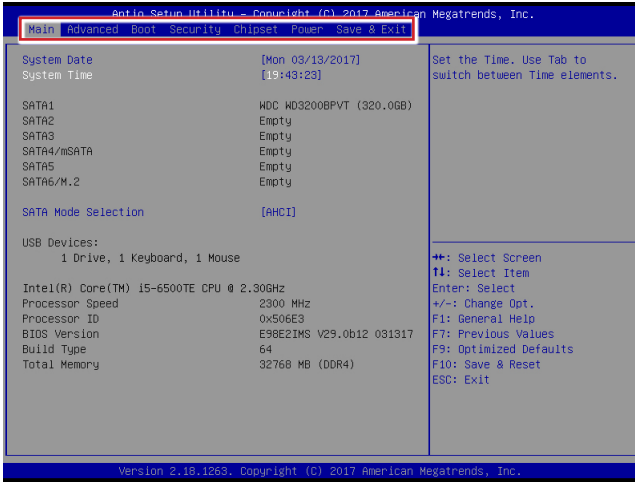

## ► Main

Use this menu for basic system configurations, such as time, date, etc.

## ► Advanced

Use this menu to set up the items of special enhanced features.

## ► Boot

Use this menu to specify the priority of boot devices.

## ► Security

Use this menu to set supervisor and user passwords.

## ► Chipset

This menu controls the advanced features of the onboard chipsets.

## ► Power


Use this menu to specify your settings for power management.

## ► Save & Exit


This menu allows you to load the BIOS default values or factory default settings into the BIOS and exit the BIOS setup utility with or without changes.

# Main

(SKU1:C236)

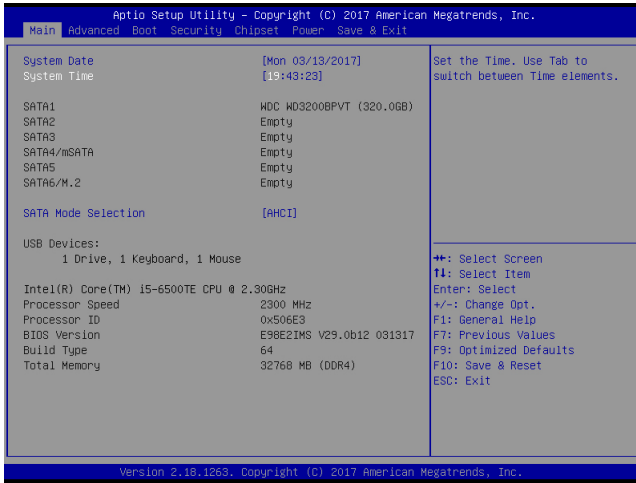

(SKU2:H110)

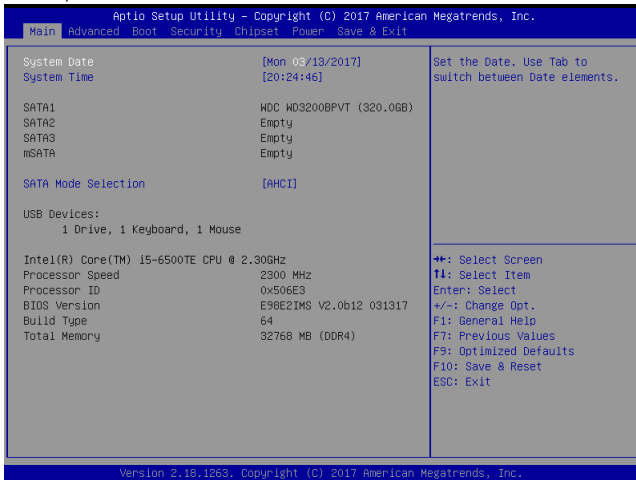

## ► System Date

This setting allows you to set the system date. The date format is <Day>, <Month> <Date> <Year>.

► **System Time**


This setting allows you to set the system time. The time format is <Hour> <Minute> <Second>.

► **SATA Mode Selection**

This setting specifies the SATA controller mode.



# Advanced

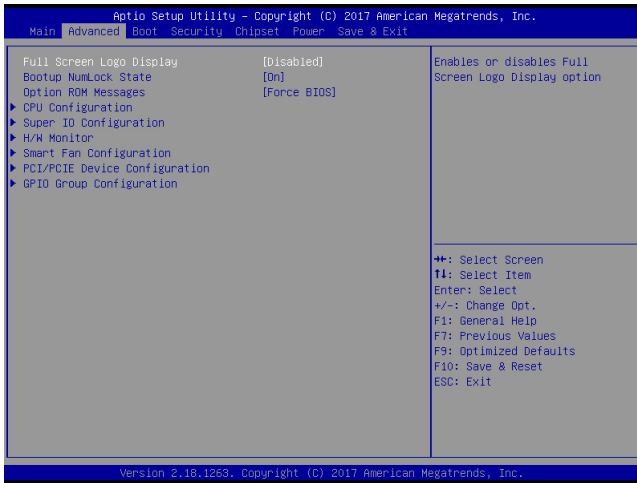

## ► Full Screen Logo Display

This BIOS feature determines if the BIOS should hide the normal POST messages with the motherboard or system manufacturer's full-screen logo.

When it is enabled, the BIOS will display the full-screen logo during the boot-up sequence, hiding normal POST messages.

When it is disabled, the BIOS will display the normal POST messages, instead of the full-screen logo.

Please note that enabling this BIOS feature often adds 2-3 seconds of delay to the booting sequence. This delay ensures that the logo is displayed for a sufficient amount of time. Therefore, it is recommended that you disable this BIOS feature for a faster boot-up time.


## ► Bootup NumLock State

This setting is to set the Num Lock status when the system is powered on. Setting to [On] will turn on the Num Lock key when the system is powered on. Setting to [Off] will allow users to use the arrow keys on the numeric keypad.

## ► Option ROM Messages

This item is used to determine the display mode when an optional ROM is initialized during POST. When set to [Force BIOS], the display mode used by AMI BIOS is used. Select [Keep Current] if you want to use the display mode of optional ROM.

## ► CPU Configuration

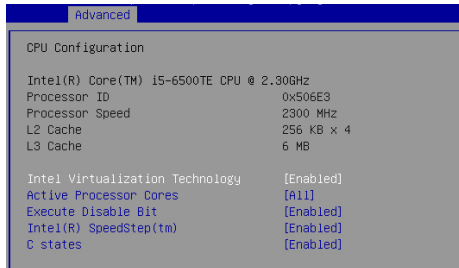

### ► Intel Virtualization Technology

Virtualization enhanced by Intel Virtualization Technology will allow a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple "Virtual" systems.

### ► Active Processor Cores

This setting specifies the number of active processor cores.

### ► Execute Disable Bit

Intel's Execute Disable Bit functionality can prevent certain classes of malicious "buffer overflow" attacks when combined with a supporting operating system. This functionality allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation.


### ► Intel(R) SpeedStep(TM)

EIST (Enhanced Intel SpeedStep Technology) allows the system to dynamically adjust processor voltage and core frequency, which can result in decreased average power consumption and decreased average heat production. When disabled, the processor will return the actual maximum CPUID input value of the processor when queried.

### ► C States

This setting controls the C-States (CPU Power states).

## ► Super IO Configuration

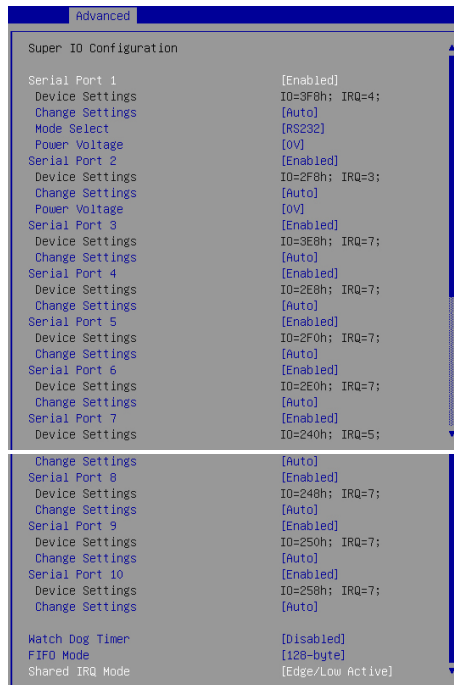

### ► Serial Port 1/ 2/ 3/ 4/ 5 /6 /7 /8 /9 /10 (SKU1:C236)

### ► Serial Port 1/ 2/ 3/ 4/ 5 /6 (SKU2:H110)

This setting enables/disables the specified serial port.

#### ► Change Settings

This setting is used to change the address & IRQ settings of the specified serial port.

#### ► Mode Select

Select an operation mode for Serial Port 1.

#### ► Power Voltage

Select the power voltage for Serial Port 1.

### ► Watch Dog Timer

You can enable the system watch-dog timer, a hardware timer that generates a reset when the software that it monitors does not respond as expected each time the watch dog polls it.

### ► FIFO Mode

This setting controls the FIFO data transfer mode.

### ► Shared IRQ Mode

This setting provides the system with the ability to share interrupts among its serial ports.

### ► H/W Monitor

These items display the current status of all monitored hardware devices/ components such as voltages, temperatures and all fans' speeds.

Advanced	
PC Health Status	
CPU temperature	: +27 C
System temperature	: +25 C
CPUFAN1	: 5454 RPM
SYSFAN1	: N/A
SYSFAN2	: N/A
SYSFAN3	: N/A
VCC_CORE	: +0.960 V
VCC3	: +3.288 V
VCC5	: +5.087 V
+12V	: +12.232 V
VCC3V	: +3.312 V
VSB3V	: +3.312 V
VSB5V	: +4.992 V
VBAT	: +3.216 V

### ► Smart Fan Configuration

Advanced	
Configuration Smart FAN	
CPUFAN1	[Disabled]
SYSFAN1	[Disabled]
SYSFAN2	[Disabled]
SYSFAN3	[Disabled]

### ► CPUFAN1, SYSFAN1/ 2/ 3

These settings enable/disable the Smart Fan function. Smart Fan is an excellent feature which will adjust the CPU/system fan speed automatically depending on the current CPU/system temperature, avoiding the overheating to damage your system.

### ► PCI / PCIE Device Configuration

Advanced	
Legacy USB Support	[Enabled]
Audio Controller	[Enabled]
Launch OnBoard Lan OpRom	[Disabled]
Launch OnBoard Lan OpRom	[Disabled]

#### ► Legacy USB Support

Set to [Enabled] if you need to use any USB 1.1/2.0 device in the operating system that does not support or have any USB 1.1/2.0 driver installed, such as DOS and SCO Unix.

#### ► Audio Controller

This setting enables/disables the onboard audio controller.

#### ► Launch OnBoard LAN OpROM

These settings enable/disable the initialization of the onboard/onchip LAN Boot ROM during bootup. Selecting [Disabled] will speed up the boot process.


### ► GPIO Group Configuration

Advanced	
GPIO Group Configuration	
GPD0	[Low]
GPD1	[Low]
GPD2	[Low]
GPD3	[Low]

#### ► GPO0 ~ GPO3 Data

These settings control the operation mode of the specified GPIO.

# Boot

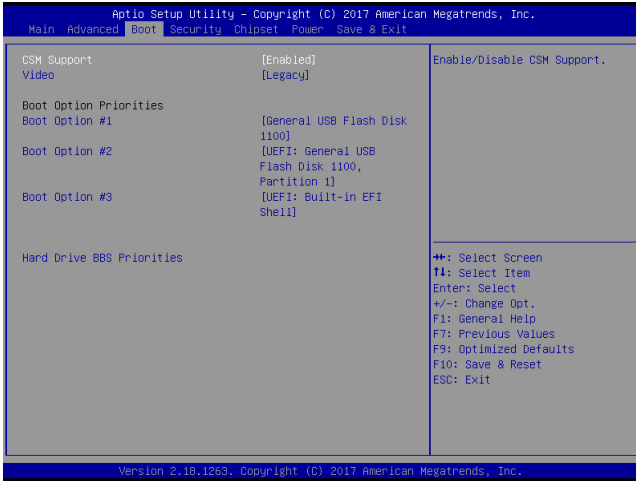

## ► CSM Support

This setting enables/disables the support for Compatibility Support Module, a part of the Intel Platform Innovation Framework for EFI providing the capability to support legacy BIOS interfaces.

### Important

*If the Operating System is going to boot in UEFI mode, disable CSM Support to speed up the boot process.*

## ► Video

This setting controls the execution of UEFI and Legacy Video OpROM.

## ► Boot Option Priorities


This setting allows users to set the sequence of boot devices where BIOS attempts to load the disk operating system.

## ► Hard Drive BBS Priorities


This setting allows users to set the priority of the specified devices. First press <Enter> to enter the sub-menu. Then you may use the arrow keys (↑↓) to select the desired device, then press <+>, <-> or <PageUp>, <PageDown> key to move it up/down in the priority list.

# Security

(SKU1:C236)

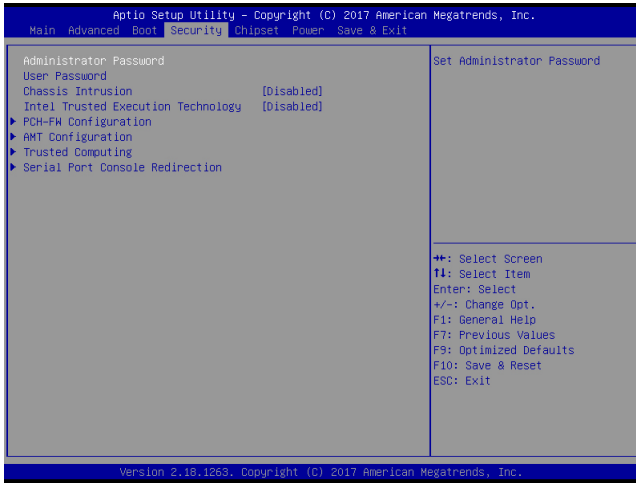

(SKU2:H110)

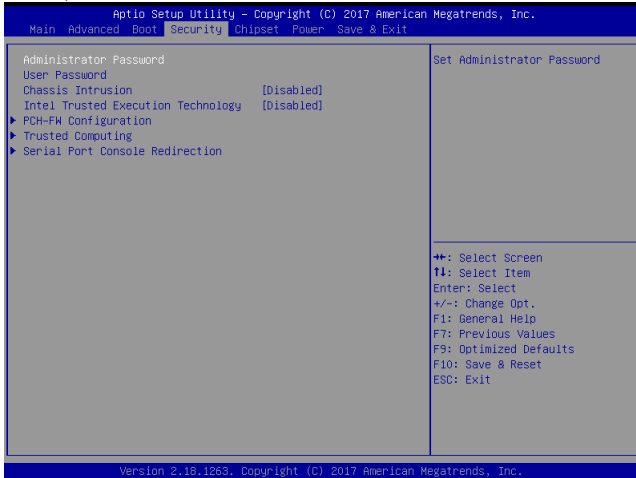

► **Administrator Password**

Administrator Password controls access to the BIOS Setup utility.

► **User Password**

User Password controls access to the system at boot and to the BIOS Setup utility.

► **Chassis Intrusion**


The field enables or disables the feature of recording the chassis intrusion status and issuing a warning message if the chassis is once opened.

► **Intel Trusted Execution Technology**


Intel Trusted Execution Technology provides highly scalable platform security in physical and virtual infrastructures.

► **PCH-FW Configuration**

(SKU1:C236)

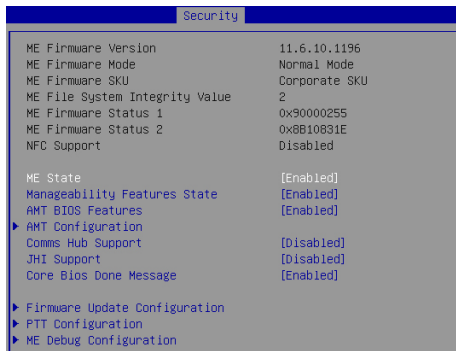

(SKU2:H110)

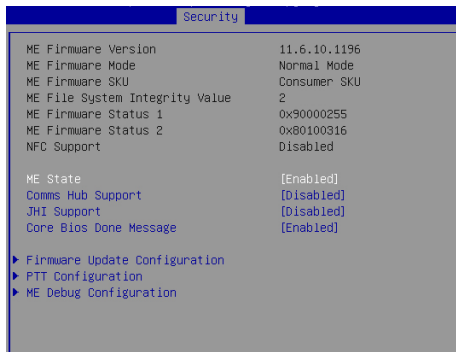



► **ME Firmware Version, ME Firmware Mode, ME Firmware SKU, System Integrity Value, ME Firmware Status 1, ME Firmware Status 2, NFC Support**

These settings show the firmware information of the Intel ME (Management Engine).

► **ME State**

This setting specifies the Intel Management Engine state.

► **Manageability Features State(SKU1:C236)**


This setting specifies the Intel ME Manageability Features.

► **AMT BIOS Features(SKU1:C236)**

This setting specifies the AMT BIOS Features.

► **AMT Configuration(SKU1:C236)**

Intel Active Management Technology (AMT) is hardware-based technology for remotely managing and securing PCs out-of-band.

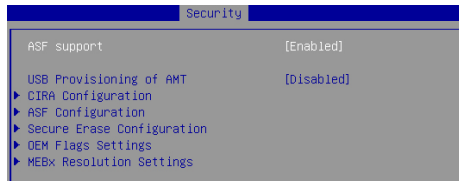

► **Comms Hub Support**

This setting enables/disables Comms Hub Support.


► **JHI Support**

This setting enables/disables JHI Support.

► **Core BIOS Done Message**

This setting enables/disables the Core BIOS Done Message.

► **Firmware Update Configuration**




► **ME FW Image Re-Flash**


This setting enables/disables the ME FW image reflash.

► **PTT Configuration**


Intel Platform Trust Technology (PTT) is a platform functionality for credential storage and key management used by Microsoft Windows.

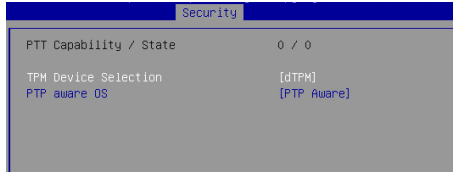

► **ME Debug Configuration**

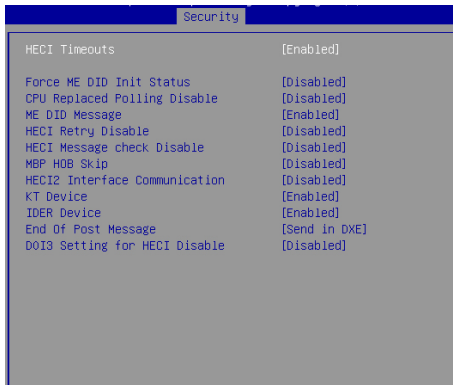


► **Trusted Computing**



► **Security Device Support**

This setting enables/disables BIOS support for security device. When set to [Disable], the OS will not show security device. TCG EFI protocol and INT1A interface will not be available.


## ► Serial Port Console Redirection

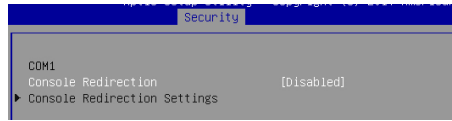

### ► Console Redirection

Console Redirection operates in host systems that do not have a monitor and keyboard attached. This setting enables/disables the operation of console redirection. When set to [Enabled], BIOS redirects and sends all contents that should be displayed on the screen to the serial COM port for display on the terminal screen. Besides, all data received from the serial port is interpreted as keystrokes from a local keyboard.

### ► Console Redirection Settings

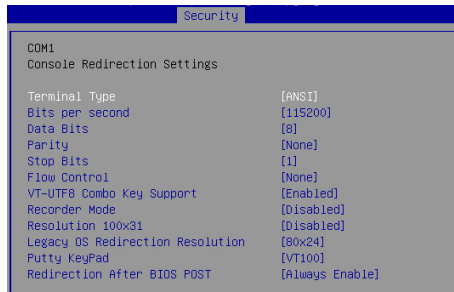

### ► Terminal Type

To operate the system's console redirection, you need a terminal supporting ANSI terminal protocol and a RS-232 null modem cable connected between the host system and terminal(s). This setting specifies the type of terminal device for console redirection.

### ► Bits per second, Data Bits, Parity, Stop Bits

This setting specifies the transfer rate (bits per second, data bits, parity, stop bits) of Console Redirection.

### ► Flow Control

Flow control is the process of managing the rate of data transmission between two nodes. It's the process of adjusting the flow of data from one device to another to ensure that the receiving device can handle all of the incoming data. This is particularly important where the sending device is capable of sending data much faster than the receiving device can receive it.

► **VT-UTF8 Combo Key Support**

This setting enables/disables the VT-UTF8 combination key support for ANSI/VT100 terminals.

► **Recorder Mode, Resolution 100x31**

These settings enable/disable the recorder mode and the resolution 100x31.

► **Legacy OS Redirection Resolution**

This setting specifies the redirection resolution of legacy OS.

► **Putty Keypad**


PuTTY is a terminal emulator for Windows. This setting controls the numeric keypad for use in PuTTY.

► **Redirection After BIOS POST**

This setting determines whether or not to keep terminals' console redirection running after the BIOS POST has booted.

# Chipset

(SKU1:C236)

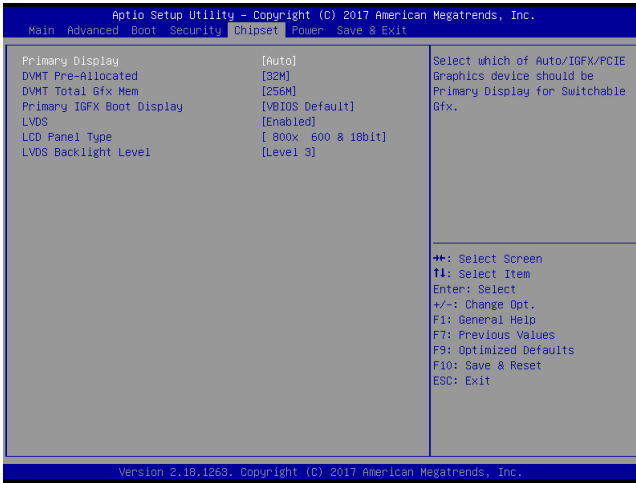

(SKU2:H110)



► **Primary Display**

This setting specifies which is your primary graphics adapter.

► **DVMT Pre-Allocated**

This setting defines the DVMT pre-allocated memory. Pre-allocated memory is the small amount of system memory made available at boot time by the system BIOS for video. Pre-allocated memory is also known as locked memory. This is because it is "locked" for video use only and as such, is invisible and unable to be used by the operating system.

► **DVMT Total Gfx Mem**

This setting specifies the memory size for DVMT.

► **Primary IGFX Boot Display**

Use the field to select the type of device you want to use as the display(s) of the system.

► **LVDS(SKU1:C236)**

This setting enables/disables LVDS.


► **LCD Panel Type(SKU1:C236)**

This setting allows you to select the LCD display type.

► **LVDS Backlight Level(SKU1:C236)**

This setting controls the LVDS backlight.

# Power

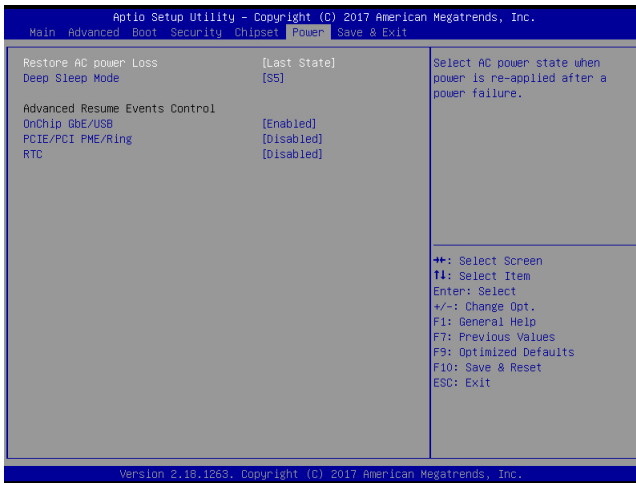

## ► Restore AC Power Loss

This setting specifies whether your system will reboot after a power failure or interrupt occurs. Available settings are:

[Power Off]	Leaves the computer in the power off state.
[Power On]	Leaves the computer in the power on state.
[Last State]	Restores the system to the previous status before power failure or interrupt occurred.

## ► Deep Sleep Mode

The setting specifies the deep sleep mode.

## \*\* Advanced Resume Events Control \*\*

### ► OnChip GbE/USB

The item allows the activity of the OnChip GbE/USB device to wake up the system from S3/S4 sleep state.


### ► PCIE PME/Ring

This field specifies whether the system will be awakened from power saving modes when activity or input signal of onboard PCIE PME/Ring is detected.

### ► RTC

When [Enabled], you can set the date and time at which the RTC (real-time clock) alarm awakens the system from suspend mode.

# Save & Exit

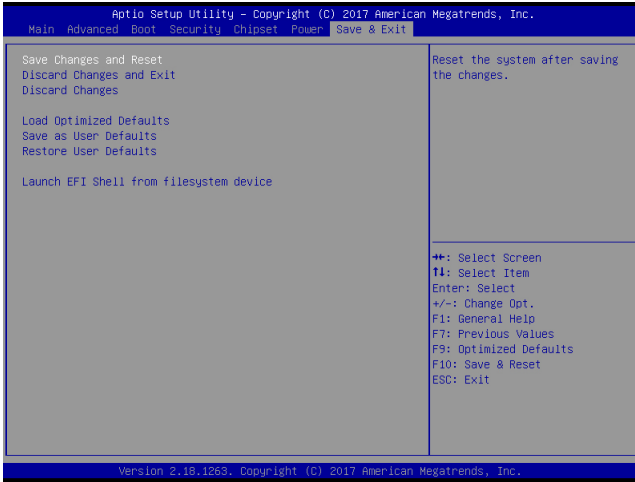

## ► Save Changes and Reset

Save changes to CMOS and reset the system.

## ► Discard Changes and Exit

Abandon all changes and exit the Setup Utility.

## ► Discard Changes

Abandon all changes.

## ► Load Optimized Defaults

Use this menu to load the default values set by the motherboard manufacturer specifically for optimal performance of the motherboard.

## ► Save as User Defaults

Save changes as the user's default profile.

## ► Restore User Defaults

Restore the user's default profile.

## ► Launch EFI Shell from filesystem device

This setting helps to launch the EFI Shell application from one of the available file system devices.



# *Appendix*

# WDT & GPIO



This appendix provides the sample codes of WDT (Watch Dog Timer) and GPIO (General Purpose Input/ Output).

## WDT Sample Code

```

SIO_INDEX_Port    equ 04Eh
SIO_DATA_Port     equ 04Fh
SIO_UnLock_Value  equ 087h
SIO_Lock_Value    equ 0AAh
WatchDog_LDN      equ 007h
WDT_UNIT          equ 60h    ;60h=second, 68h=minute, 40h=Disabled watchdog timer
WDT_Timer         equ 30     ;ex. 30 seconds

```

Sample code:

```

;Enable config mode
mov    dx, SIO_INDEX_Port
mov    al, SIO_UnLock_Value
out    dx, al
jmp    short $+2          ;Io_delay
jmp    short $+2          ;Io_delay
out    dx, al
;Change to WDT
mov    dx, SIO_INDEX_Port
mov    al, 07h
out    dx, al
mov    dx, SIO_DATA_Port
mov    al, WatchDog_LDN
out    dx, al
;Active WDT
mov    dx, SIO_INDEX_Port
mov    al, 30h
out    dx, al
mov    dx, SIO_DATA_Port
in     al, dx
or     al, 01h
out    dx, al
;set timer
mov    dx, SIO_INDEX_Port
mov    al, 0F6h
out    dx, al
mov    dx, SIO_DATA_Port
mov    al, WDT_Timer
out    dx, al
;set UINIT
mov    dx, SIO_INDEX_Port
mov    al, 0F5h
out    dx, al
mov    dx, SIO_DATA_Port
mov    al, WDT_UNIT
out    dx, al
;enable reset
mov    dx, SIO_INDEX_Port
mov    al, 0FAh
out    dx, al
mov    dx, SIO_DATA_Port
in     al, dx
or     al, 01h
out    dx, al
;close config mode
mov    dx, SIO_INDEX_Port
mov    al, SIO_Lock_Value
out    dx, al

```

# GPIO Sample Code

- GPI 0 ~ GPI 3

	GPI 0	GPI 1	GPI 2	GPI 3				
IO Address	F040h	F040h	F040h	F040h				
Slave Address	9Ch	9Ch	9Ch	9Ch				
SIO GPIO Register	42h	42h	42h	22h				
Bit	0	1	2	3				
Sample code	#1	#1	#1	#1				

- GPO 0 ~ GPO 3

	GPO 0	GPO 1	GPO 2	GPO 3				
IO Address	F040h	F040h	F040h	F040h				
Slave Address	9Ch	9Ch	9Ch	9Ch				
SIO GPIO Register	22h	22h	22h	22h				
Bit	4	5	6	7				
Sample code	#2	#2	#2	#2				

```

SMBUS_BASE_ADDRESS equ F040h ;IO Address
SLAVEADDRESS equ 9Ch ;Slave Address
GPIO_REG equ 42h
GPO0_REG equ 22h
GPO0_value equ 00010000b

```

## Sample Code:

### #1 : Get GPI 0 status

```

mov dx, GPIO_REG
in al, dx ;al bit0 = GPI 0 status

```

### #2 : Set GPO 0 status to high

```

mov dx, GPO0_REG
in al, dx
and al, not GPO0_value
or al, GPO0_value ;al bit4 = GPO 0 staus
out dx, al

```

