

# **IB980**

**Intel® 4th Generation Core / Q87 PCH  
PICMG 1.3 SHB Express Full-Size CPU Card**

# **USER'S MANUAL**

**Version 1.0**

---

## Acknowledgments

AMI is a registered trademark of American Megatrends Inc.  
PS/2 is a trademark of International Business Machines Corporation.

Intel and Intel<sup>®</sup> 4th Generation Core DC/QC Processor are registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

Fintek is a registered trademark of Fintek Electronics Corporation.

All other product names or trademarks are properties of their respective owners.

---

# Table of Contents

<b>Introduction</b> .....	<b>3</b>
Product Description.....	3
Checklist.....	4
IB980 Specifications .....	5
Board Dimensions .....	7
<b>Installations</b> .....	<b>8</b>
Installing the CPU .....	8
Installing the Memory.....	10
Setting the Jumpers.....	11
Connectors on IB980.....	16
<b>BIOS Setup</b> .....	<b>29</b>
<b>Drivers Installation</b> .....	<b>57</b>
Intel Chipset Software Installation Utility.....	58
VGA Drivers Installation.....	60
Realtek HD Audio Driver Installation .....	63
LAN Drivers Installation .....	65
Intel® Management Engine Interface .....	68
Intel® USB 3.0 Drivers.....	70
<b>Appendix</b> .....	<b>73</b>
A. I/O Port Address Map.....	73
B. Interrupt Request Lines (IRQ).....	74
C. Watchdog Timer Configuration .....	75

---

This page is intentionally blank.

---

# Introduction

## Product Description

---

The IB980 PICMG1.3 SHB is based on the latest Intel® Q87 chipset. The platform supports 4<sup>th</sup> Generation Intel® Core processor family with LGA1150 packing and features an integrated dual-channel DDR3 memory controller as well as a graphics core.

Made with 22-nanometer technology, the latest Intel® processors provide advanced performance in both computing and graphics quality. This meets the requirement of customers in the gaming, POS, digital signage and server market segment.

The IB980 PICMG1.3 board utilizes the dramatic increase in performance provided Intel's latest cutting-edge technology. Measuring 338mm x122mm, the IB980 offers fast 6Gbps SATA support (6 ports), USB3.0 (4 ports) and interfaces for DVI-D, VGA and LVDS displays.

### IB980 FEATURES:

- Supports Intel® 4th Generation Core i7/i5/i3 QC/DC desktop processors
- Two DDR3 DIMM, 1066/1333/1600MHz, Max. 16GB memory
- Dual Intel® PCI-Express Gigabit LAN
- Integrated graphics for VGA, DVI-D & LVDS displays
- 6x SATA 3.0, 10x USB 2.0, USB 3.0 (4 ports), 4x COM, Watchdog timer

### **Checklist**

---

Your IB980 package should include the items listed below.

- The IB980 PICMG1.3 SHB
- This User's Manual
- 1 CD containing chipset drivers and flash memory utility
- Serial ATA cable



## IB980 Specifications


<b>Product Name</b>	<b>IB980AF (Support LVDS &amp; iAMT)</b> <b>IB980F (w/o LVDS, not support iAMT)</b>
<b>Form Factor</b>	PICMG 1.3 SHB Express Full size CPU card
<b>CPU Type</b>	- 4 <sup>th</sup> Generation Intel® Core™ i7/i5/i3/Pentium DT processor - FCLGA1150 package [37.5 mm x 37.5mm] - TDP: QC=84W/45W ; DC=54W/35W
<b>CPU Speed</b>	Up to 4.0 GHz
<b>Cache</b>	Up to 8MB
<b>BIOS</b>	AMI BIOS
<b>CPU Socket</b>	LGA1150
<b>Chipset</b>	Intel® Lynx Point DT Platform Controller Hub, Q87 PCH Package =23 mm x 22 mm, 0.65 mm ball pitch
<b>Memory</b>	4 <sup>th</sup> Generation Intel® Core™ i7/i5/i3 DT processor integrated memory controller, support dual channel DDR3-1333/1600 MHz (Non-ECC) - DDR3 240-pin DIMM x 2, Max. <b>16GB [8GB in per DIMM]</b>
<b>VGA</b>	4 <sup>th</sup> Generation Intel® Core™ i7/i5/i3 DT processor integrated graphics device - 1x VGA [Support to 1920x1080@60Hz] - 1x DVI-D: (Thru port C, Reserve level shifter) [Support to 1920x1200@60Hz] - 1x LVDS (Thru port B, via NXP PTN3460), support 24-bit dual channel [Support to 1920x1200@60Hz]
<b>LAN</b>	1. Intel® I217LM GbE PHY ( For IB980AF, support iAMT) Intel® I217V GbE PHY ( For IB980F) 2. Intel® I211AT as 2 <sup>nd</sup> GbE
<b>USB</b>	USB 2.0 host controller [Q87 Integrated], support 10 ports - 4 ports via onboard pin header - 1 port via Mini PCIe <b>4 ports on board, 4 ports to the backplane [Connector C]</b> USB 3.0 host controller [Q87 integrated] support 4 ports - 2 ports via the rear panel I/O - 2 ports via on board pin header [BLUE color box header]
<b>Serial ATA Ports</b>	Intel® Lynx Point Desktop PCH built-in SATA controller, support 6 ports 4x SATAIII (3.0) 6Gbps <b>2 ports to the backplane [Connector C]</b>
<b>Audio</b>	Intel® Q87 PCH built-in high definition audio w/ Realtek ALC662 Codec support 5.1 channel
<b>LPC I/O</b>	Fintek F81846AD-I (128-pin LQFP[14mm x 14 mm]) - COM #1 (RS232/422/485) support ring-in with power @500 mA (selectable for 5V or 12V) [EXAR SP339EER1 232/422/485 transceiver x 1 for jumper-less] - COM #2-COM #4 (RS232 only) Hardware Monitor (2 thermal inputs,4 voltage monitor inputs & 2 Fan headers) - CPU FAN x 1 (PWM Fan type, 4-pin connector) - SYS FAN x 1 (DC Fan type, 3-pin connector)] - Supports parallel port
<b>Digital IO</b>	4 in & 4 out
<b>Keyboard Mouse/ Connector</b>	Supports PS/2 Keyboard/Mouse thru onboard pin-header
<b>Expansion Slots</b>	Mini PCIe socket x1@ component side [Full-sized] Support USB client & mSATA [share with onboard SATA] Support PCIe signal
<b>Edge Connector</b>	DB15 x1 for VGA RJ45 x 2 for LAN 1 & 2 USB 3.0 x 2

## INSTALLATIONS

<b>Onboard Header /Connector</b>	<p>DF11-20 pins pin-header x 2 for DVI-D x 1</p> <p>DF20-20pins box-header x 2 for dual channel LVDS (IB980AF)</p> <p>1 x 4 pins box header x 1 for LCD backlight control (IB980AF)</p> <p>2x13 pins box-header x 1 for Printer port</p> <p>DF11-20 pins box-header x1 for COM1/2</p> <p>DF11-20 pins box-header x1 for COM3/4</p> <p>2x5 pins pin-header x 2 for USB 2.0 x 4</p> <p>2x10 pins box-header x 1 for USB3.0 x 2</p> <p>2x6 pins pin-header x1 for Audio (Line-Out, Line-In &amp; Mic)</p> <p>2x5 pins pin-header x 1 for Digital I/O</p> <p>2x4 pins pin-header x 1 for PS/2 KB/MS</p> <p>4 pins pin-header x1 for CPU fan (PWM mode)</p> <p>3 pins pin-header x1 for system fan (DC mode)</p> <p>4 ports x SATAIII (Blue connectors)</p> <p>2X10 pins pin-header x 1 for front panel indicators</p> <p>2 x 2 pin ATX power connector x 1</p>
<b>Interface</b>	<p>1x PCIe(16x) [Connector A &amp; B]</p> <p>4x PCIe(1x) or 1x PCIe(4x) [Connector C]</p> <p>4x PCI masters (ITE IT8892E PCIe to PCI bridge, 14mm x 14mm LQFP128) [Connector D]</p>
<b>Watchdog Timer</b>	Yes (256 segments, 0, 1, 2...255 sec/min)
<b>iSMART ver. 3.0</b>	<ol style="list-style-type: none"> <li>1. EuP / ErP(thru Super I/O)</li> <li>2. Auto-scheduler</li> <li>3. Power fail detector</li> <li>4. Low temperature Guardian</li> <li>5. IFUB ( Intelligent Firmware Update from BIOS &amp; NVRAM data)</li> </ol>
<b>Others</b>	<ul style="list-style-type: none"> <li>- RAID function (0, 1, 5, 10)</li> <li>- iAMT 9.0</li> <li>- LAN wake up</li> <li>- TPM 1.2 (Infineon SLB9655) supported</li> </ul>
<b>Environment</b>	<p>Operation Temperature: 0~60 degree C</p> <p>Storage Temperature: -20~80 degree C</p> <p>Relative humidity: 0~90%, non-condensing</p>
<b>System Voltage</b>	+5V, +3.3V, +12V, -12V & 5VSB
<b>Operation System</b>	Windows 7, Windows 8
<b>Certification</b>	CE /FCC/LVD
<b>RoHS</b>	Yes
<b>Board Size</b>	338mm x 126mm



# Board Dimensions

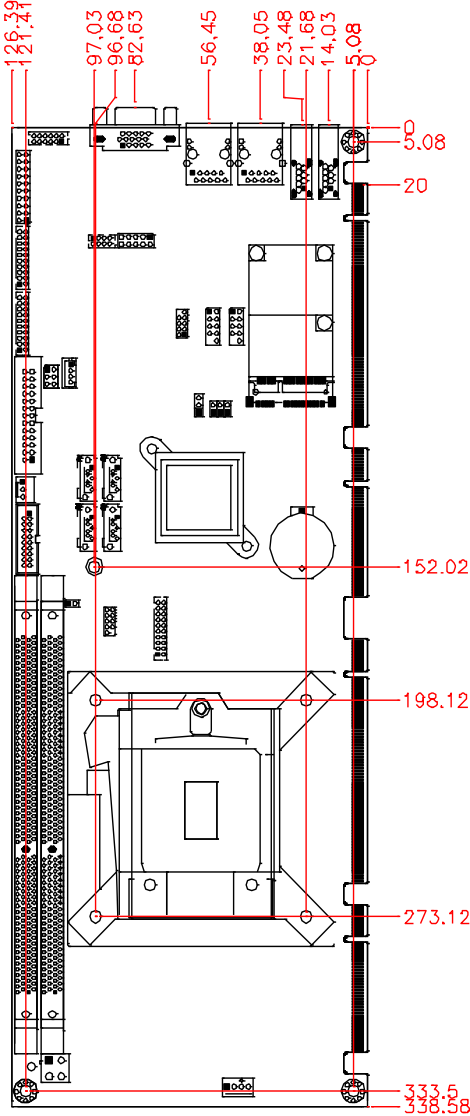

## Installations

This section provides information on how to use the jumpers and connectors on the IB980 in order to set up a workable system. The topics covered are:


Installing the CPU.....	8
Installing the Memory.....	10
Setting the Jumpers.....	11
Connectors on IB980.....	16

## **Installing the CPU**

---

The IB980 board supports an LGA1150 Socket (shown below) for Intel Sandy Bridge processors.

To install the CPU, unlock first the socket by pressing the lever sideways, then lift it up to a 90-degree. Then, position the CPU above the socket such that the CPU corner aligns with the gold triangle matching the socket corner with a small triangle. Carefully insert the CPU into the socket and push down the lever to secure the CPU. Then, install the heat sink and fan.

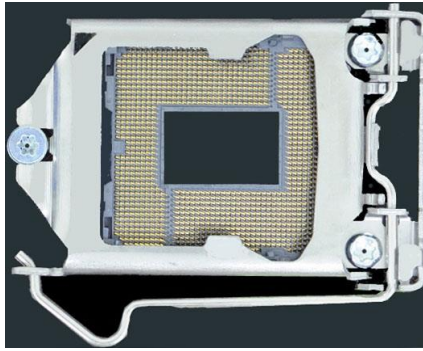

**NOTE:** *Ensure that the CPU heat sink and the CPU top surface are in total contact to avoid CPU overheating problem that would cause your system to hang or be unstable.*

### **Installing the Memory**

---


---

The IB980 board supports four DDR3 memory socket for a maximum total memory of 16GB in DDR3 DIMM memory type.

#### **Installing and Removing Memory Modules**

To install the DDR3 modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR3 module so that the key of the DDR3 module aligned with that on the memory slot.
2. Gently push the DDR3 module in an upright position until the clips of the slot close to hold the DDR3 module in place when the DDR3 module touches the bottom of the slot.
3. To remove the DDR3 module, press the clips with both hands.

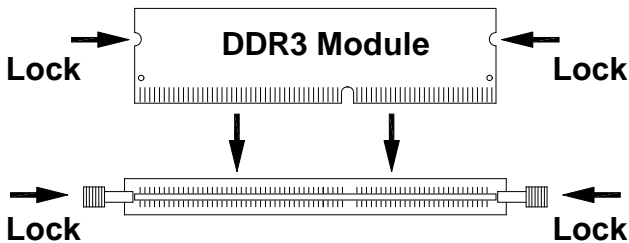

## **Setting the Jumpers**

---



---


Jumpers are used on IB980 to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on IB980 and their respective functions.

Jumper Locations on IB980 .....	12
JBAT1: Clear CMOS Contents .....	13
JP1: COM1 RS232 RI/+5V/+12V Power Setting.....	13
JP5: Power Test (Factory use only, Default OPEN) .....	13
JP7: Flash Descriptor Security Override (Factory use only) .....	14
JP11 LVDS Panel Power Selection .....	14
JP14: BL_ADJ_LEVEL Setting.....	15
JP13: BL Voltage TYPE Setting .....	15





**JBAT1: Clear CMOS Contents**

JBAT1	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS

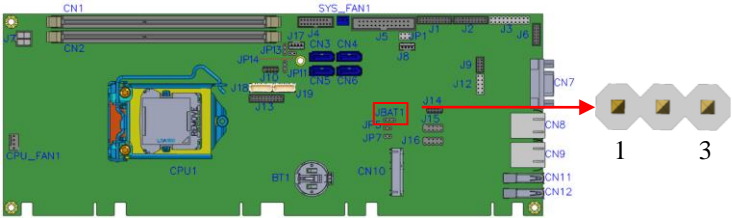


**JP1: COM1 RS232 RI/+5V/+12V Power Setting**

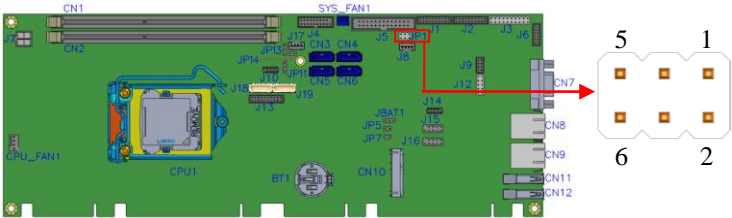


JP1	Setting	Function
	Pin 1-3 Short/Closed	+12V
	Pin 3-4 Short/Closed	RI
	Pin 5-3 Short/Closed	+5V

**JP7: Flash Descriptor Security Override (Factory use only)**

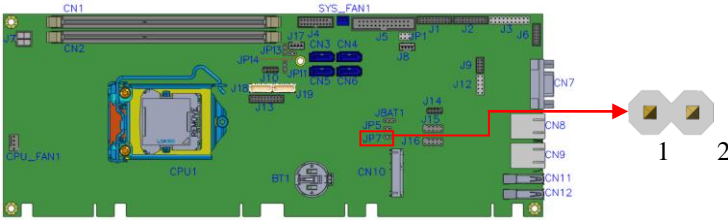

JP7	Flash Descriptor Security Override
Open	Disabled (Default)
Close	Enabled


**JP11: LVDS Panel Power Selection**

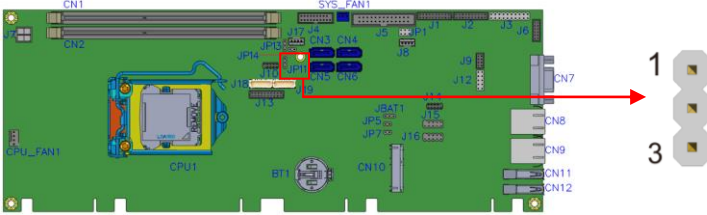

JP11	Setting	Panel Voltage
	Pin 1-2 Short/Closed	3.3V (default)
	Pin 2-3 Short/Closed	5V






**JP14: BL\_ADJ\_LEVEL Setting**

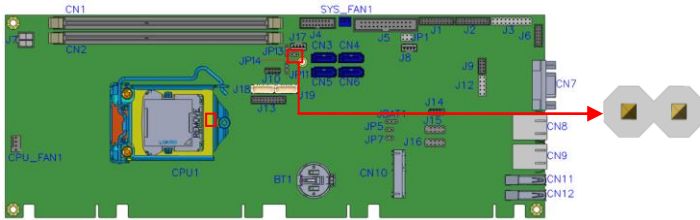

JP14	Function
Open	3.3V(default)
Close	5V

**JP13: BL Voltage TYPE Setting**

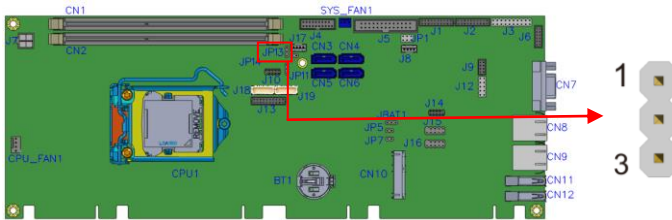

JP13	Setting	Function
	Pin 1-2 Short/Closed	DC Mode
	Pin 2-3 Short/Closed	PWM Mode

---

**Connectors on IB980**


---

Connector Locations on IB980 .....	17
J1: COM1 and COM2 Serial Ports .....	18
J2: COM3 and COM4 Serial Ports .....	18
CN3, CN4, CN5, CN6: SATA3 Connectors .....	18
CN7: DB-15 VGA Connector .....	19
J4: USB3.0/2.0 Connector .....	19
J15,J16: USB2.0 Connector .....	19
CN8: Gigabit LAN (Intel I211AT) Connector .....	20
CN9: Gigabit LAN (Intel I217LM) Connector .....	20
J17: LCD Backlight Connector .....	20
CN11,CN12: USB3.0 Connector .....	20
J3: Front Panel Function Connector .....	21
CN1, CN2: DDR3 DIMM Socket .....	21
J6: External Audio Connector (DF11 Connector) .....	22
J7: ATX 12V Power Connector .....	22
J12: Digital I/O 4 In/4 Out .....	23
J9: PS/2 Keyboard and Mouse Connectors (DF11 Connector) .....	23
J10: SPI Flash Connector (Factory use only) .....	23
J5: Parallel Port .....	24
J8: MCU Flash Connector (factory use only) .....	24
J13: DVI-D Port (DF11 Connector) .....	24
CN10: Mini PCIE Connector (Support M-SATA with CN5) .....	25
CPU_FAN1: CPU Fan Power Connector .....	26
SYS_FAN1: System Fan1 Power Connector .....	26
J18,J19: LVDS Connectors .....	27




## INSTALLATIONS

### J1: COM1 and COM2 Serial Port [HRS\_DF11-20DP-2DSA(08)]

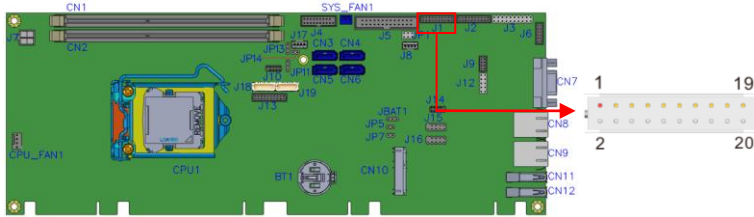

Signal Name	Pin #	Pin #	Signal Name
DSR1	2	1	DCD1
RTS1	4	3	RXD1
CTS1	6	5	TXD1
RI1	8	7	DTR1
NC	10	9	Ground
DSR2	12	11	DCD2
RTS2	14	13	RXD2
CTS2	16	15	TXD2
RI2	18	17	DTR2
NC	20	19	Ground


### J2: COM3, COM4 Serial Port [HRS\_DF11-20DP-2DSA(08)]

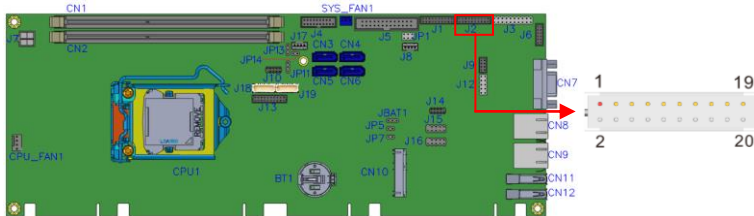

Signal Name	Pin #	Pin #	Signal Name
DSR3	2	1	DCD3
RTS3	4	3	RXD3
CTS3	6	5	TXD3
RI3	8	7	DTR3
NC	10	9	Ground
DSR4	12	11	DCD4
RTS4	14	13	RXD4
CTS4	16	15	TXD4
RI4	18	17	DTR4
NC	20	19	Ground


**CN3, CN4, CN5, CN6: SATA3 Connectors**

**CN7: DB-15 VGA Connector**




Signal Name	Pin #	Pin #	Signal Name
Red	1	2	Green
Blue	3	4	N.C.
GND	5	6	GND
GND	7	8	GND
VCC	9	10	GND
N.C.	11	12	DDCDATA
HSYNC	13	14	VSYNC
DDCCLK	15		

**J4: USB3.0/2.0 Connector [PINREX\_52X-40-20GU52]**

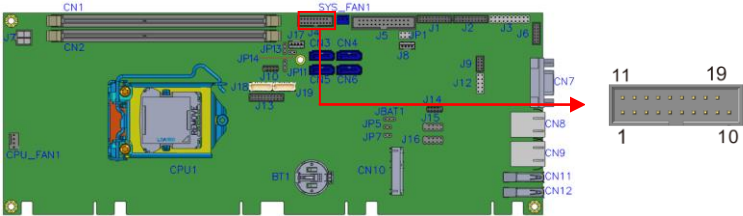

Signal Name	Pin #	Pin #	Signal Name
VCC(900mA)	1	X	
P1_SSRX-	2	19	VCC(900mA)
P1_SSRX+	3	18	P2_SSRX-
GND	4	17	P2_SSRX+
P1_SSTX-	5	16	GND
P1_SSTX+	6	15	P2_SSTX-
GND	7	14	P2_SSTX+
P1_U2_D-	8	13	GND
P1_U2_D+	9	12	P2_U2_D-
NC	10	11	P2_U2_D+

## J15, J16: USB2.0 Connectors

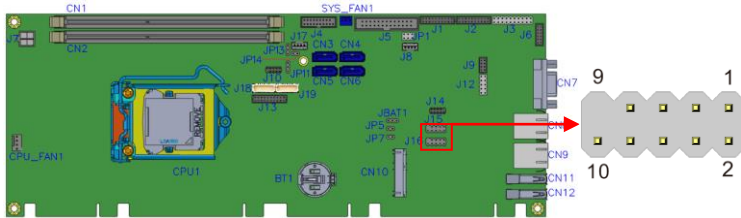


Signal Name	Pin #	Pin #	Signal Name
VCC(500mA)	1	2	VCC(500mA)
D0-	3	4	D1-
D0+	5	6	D1+
Ground	7	8	Ground
KEY	9	10	NC

## CN8: Gigabit LAN (Intel I211AT) Connector

## CN9: Gigabit LAN (Intel I217LM) Connector


## J17: LCD Backlight Connector [ E-CALL\_0110-161-040 ]

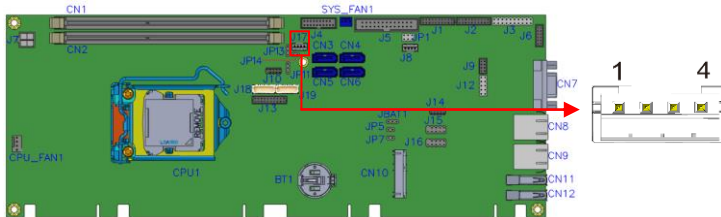

Pin #	Signal Name
1	Backlight Power +12V(2A)
2	Backlight Enable
3	Backlight Control
4	Ground


## CN11, CN12: USB3.0 Connectors

**J3: Front Panel Function Connector**

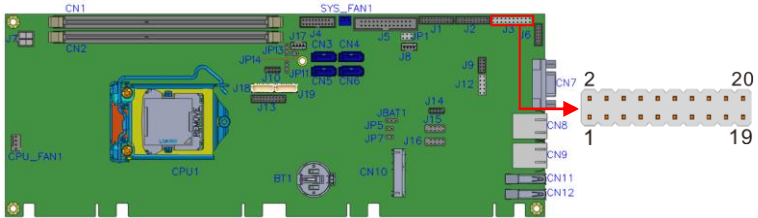

Signal Name	Pin #	Pin #	Signal Name
VCC	1	2	Speaker Out
NC	3	4	NC
Ground	5	6	Ground
NC	7	8	VCC
Ground	9	10	NC
Ground	11	12	NC
Ground	13	14	PWR_SW
NC	15	16	NC
Ground	17	18	RST
HDD LED +	19	20	HDD LED -


**CN1,CN2: DDR3 DIMM Socket**

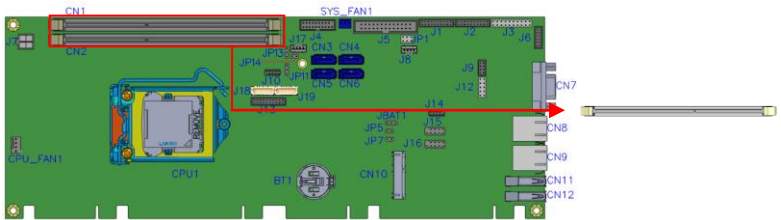

## INSTALLATIONS

### J6: External Audio Connector [HK\_DF11-12S-PA66H]


J6 is a 12-pin header that is used to connect to the optional audio cable.

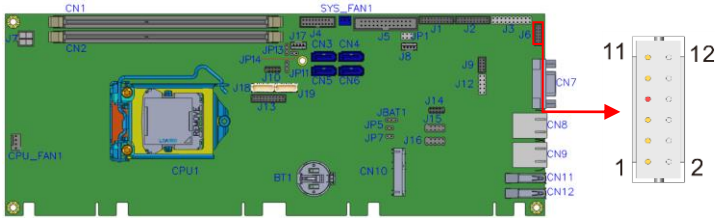

Signal Name	Pin #	Pin #	Signal Name
LINE OUT_R	2	1	LINE OUT_L
Ground	4	3	JD_FRONT
LINE IN_R	6	5	LINE IN_L
Ground	8	7	JD_LINE IN
MIC-R	10	9	MIC-L
Ground	12	11	JD_MIC1

### J7: ATX 12V Power Connector [Win Win\_WPO-04D4TN431UW]


This connector supplies the CPU operating voltage.

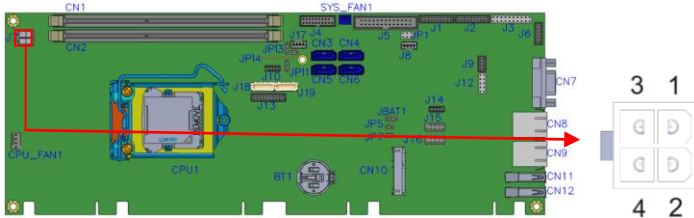

Pin #	Signal Name
1	Ground
2	Ground
3	+12V-IN
4	+12V-IN




**J12: Digital I/O 4 In/4 Out**

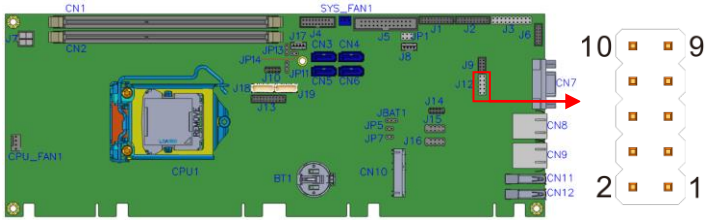


Signal Name	Pin #	Pin #	Signal Name
GND	1	2	VCC
OUT3	3	4	OUT1
OUT2	5	6	OUT0
IN3	7	8	IN1
IN2	9	10	IN0

**J9: PS/2 Keyboard and Mouse Connectors**  
[HK\_DF11-8S-PA66H]

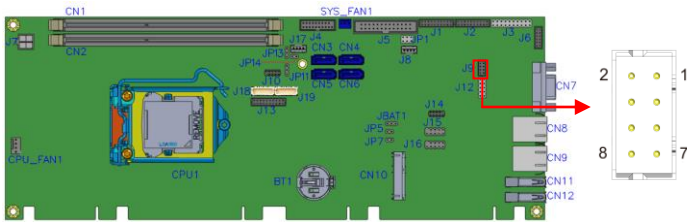


Signal Name	Pin #	Pin #	Signal Name
VCC(300mA)	2	1	VCC(300mA)
KB_DATA	4	3	MS_DATA
KB_CLK	6	5	MS_CLK
Ground	8	7	Ground

**J10: SPI Flash Connector (Factory use only)**

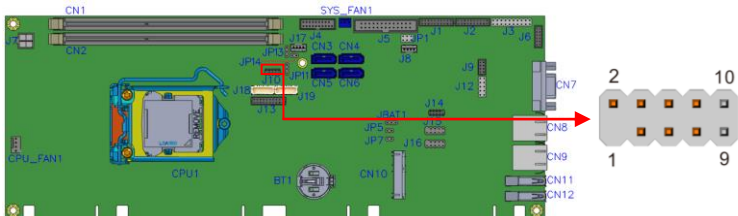


## J5: Parallel Port [Win Win F-WBOX-26RN]

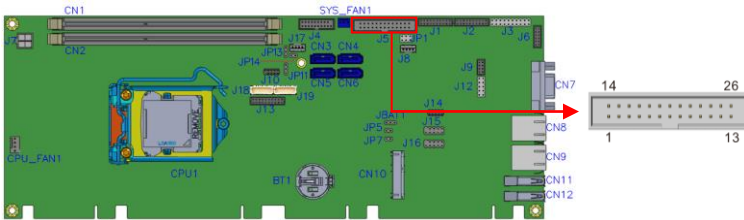


Signal Name	Pin #	Pin #	Signal Name
Line printer strobe	1	14	Auto Feed
PD0, parallel data 0	2	15	Error
PD1, parallel data 1	3	16	Initialize
PD2, parallel data 2	4	17	Select
PD3, parallel data 3	5	18	Ground
PD4, parallel data 4	6	19	Ground
PD5, parallel data 5	7	20	Ground
PD6, parallel data 6	8	21	Ground
PD7, parallel data 7	9	22	Ground
ACK, acknowledge	10	23	Ground
Busy	11	24	Ground
Paper empty	12	25	Ground
Select	13	26	Ground

## J8: MCU Flash Connector (factory use only)

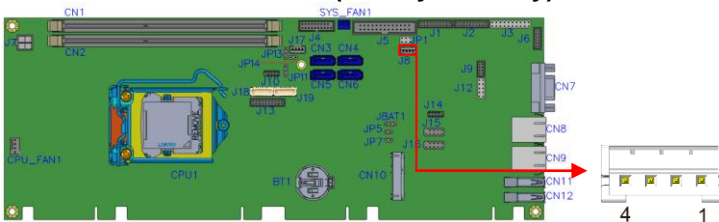

**J13: DVI-D Port [HK\_DF11-20S-PA66H]**


J13 is a 20-pin header that is used to connect to the optional DVI-D cable.

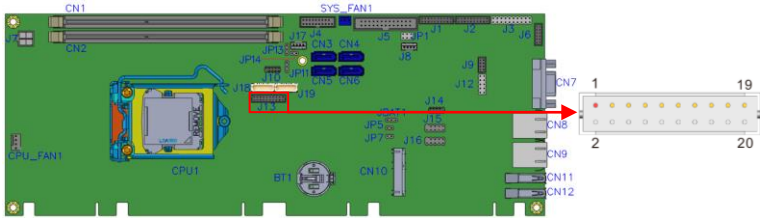


Signal Name	Pin #	Pin #	Signal Name
TDC1#_B	2	1	TDC1_B
Ground	4	3	Ground
TLC#_B	6	5	TLC_B
5V	8	7	Ground
N.C.	10	9	HPDET_B
TDC2#_B	12	11	TDC2_B
Ground	14	13	Ground
TDC0#_B	16	15	TDC0_B
N.C.	18	17	N.C.
SC_DDC_B	20	19	SD_DDC_B

**CN10: Mini PCIE Connector (Support M-SATA with CN5)**

*CN10 also supports mSATA. However, when CN10 is used for mSATA, then CN5 SATA port cannot be used. Only one of them can be used at one time to support SATA.*

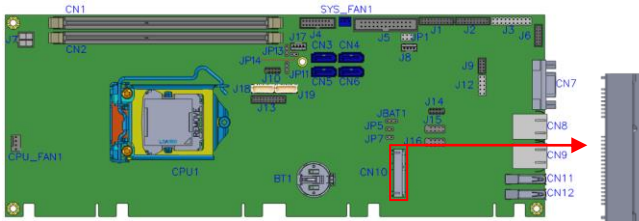


## CPU\_FAN1: CPU Fan Power Connector

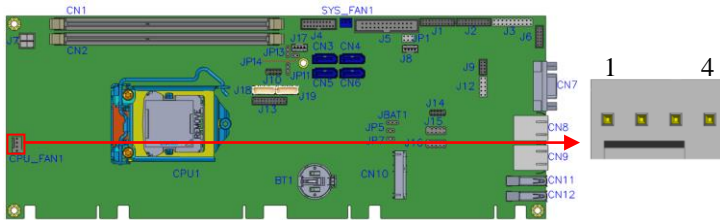


Pin #	Signal Name
1	Ground
2	+12V(1A)
3	Rotation detection
4	Control

## SYS\_FAN1: System Fan1 Power Connector

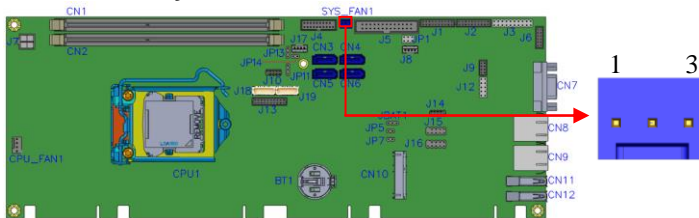

Pin #	Signal Name
1	Ground
2	+12V(1A)
3	Rotation detection

**J18, J19: LVDS Connectors [HIROSE\_DF20G-20DP-1V(56)]**

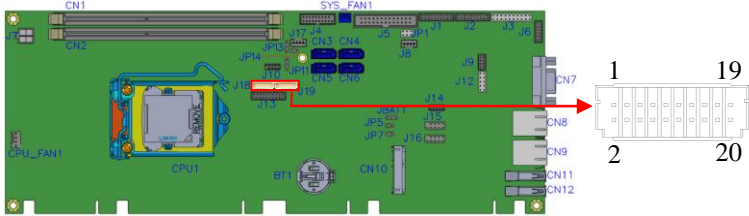

Signal Name	Pin #	Pin #	Signal Name
LCD_PWR(1A)	19	20	LCD_PWR(1A)
LD3+	17	18	LD3-
GND	15	16	GND
CLK+	13	14	CLK-
GND	11	12	GND
LD2+	9	10	LD2-
GND	7	8	GND
LD1+	5	6	LD1-
GND	3	4	GND
LD0+	1	2	LD0-

**J18(Odd Bus), J19(Even Bus)**

This page is intentionally left blank.

# BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

BIOS Introduction .....	30
BIOS Setup .....	30
Advanced Settings .....	32
Chipset Settings .....	45
Boot Settings .....	53
CSM parameters .....	54
Security Settings .....	55
Save & Exit Settings .....	56

### BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also has password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

### BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the <Del> key immediately allows you to enter the Setup utility. If you are a little bit late pressing the <Del> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

**Warning:** *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*



**Main Settings**

Aptio Setup Utility – Copyright © 2011 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
BIOS Information				Choose the system default language	
System Language			[English]		→ ← Select Screen
System Date			[Tue 01/20/2009]		↑ ↓ Select Item
System Time			[21:52:06]		Enter: Select
Access Level			Administrator		+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit

**System Language**

Choose the system default language.

**System Date**

Set the Date. Use Tab to switch between Data elements.

**System Time**

Set the Time. Use Tab to switch between Data elements.

## Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
<ul style="list-style-type: none"><li>▶ PCI Subsystem Settings</li><li>▶ ACPI Settings</li><li>▶ Wake up event setting</li><li>▶ CPU Configuration</li><li>▶ SATA Configuration</li><li>▶ Shutdown Temperature Configuration</li><li>▶ iSmart Controller</li><li>▶ AMT Configuration</li><li>▶ USB Configuration</li><li>▶ F81846 Super IO Configuration</li><li>▶ F81846 H/W Monitor</li></ul>				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit	

## PCI Subsystem Settings

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
PCI Bus Driver Version		V 2.0502			
PCI Common Settings				→ ← Select Screen	
PCI Latency Timer		32 PCI Bus Clocks		↑ ↓ Select Item	
VGA Palette Snoop		Disabled		Enter: Select	
PERR# Generation		Disabled		+- Change Field	
SERR# Generation		Disabled		F1: General Help	
▶ PCI Express Settings				F2: Previous Values	
				F3: Optimized Default	
				F4: Save ESC: Exit	

### Above 4G Decoding

Enables or Disables 64bit capable devices to be decoded in above 4G address space (only if system supports 64 bit PCI decoding).

### PCI Latency Timer

Value to be programmed into PCI Latency Timer Register.

### VGA Palette Snoop

Enables or disables VGA Palette Registers Snooping.

**PERR# Generation**

Enables or disables PCI device to generate PERR#.

**SERR# Generation**

Enables or disables PCI device to generate SERR#.

**PCI Express Settings**

Change PCI Express devices settings.

**PCI Express Settings**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCI Express Device Register Settings					
	Relaxed Ordering		Disabled		
	Extended Tag		Disabled		
	No Snoop		Enabled		
	Maximum Payload		Auto		→ ← Select Screen
	Maximum Read Request		Auto		↑ ↓ Select Item
PCI Express Link Register Settings					Enter: Select
	ASPM Support		Disabled		+ - Change Field
	WARNING: Enabling ASPM may cause some PCI-E devices to fail		Disabled		F1: General Help
	Extended Synch		Disabled		F2: Previous Values
	Link Training Retry		5		F3: Optimized Default
	Link Training Timeout (uS)		100		F4: Save ESC: Exit
	Unpopulated Links		Keep Link ON		
	Restore PCIe Registers		Disabled		

**Relaxed Ordering**

Enables or disables PCI Express Device Relaxed Ordering.

**Extended Tag**

If ENABLED allows device to use 8-bit Tag field as a requester.

**No Snoop**

Enables or disables PCI Express Device No Snoop option.

**Maximum Payload**

Set Maximum Payload of PCI Express Device or allow System BIOS to select the value.

### **Maximum Read Request**

Set Maximum Read Request Size of PCI Express Device or allow System BIOS to select the value.

### **ASPM Support**

Set the ASPM Level: Force L0s – Force all links to L0s State:  
AUTO – BIOS auto configure: DISABLE – Disables ASPM.

### **Extended Synch**

If ENABLED allows generation of Extended Synchronization patterns.

### **Link Training Retry**

Defines number of Retry Attempts software will take to retrain the link if previous training attempt was unsuccessful.

### **Link Training Timeout (uS)**

Defines number of Microseconds software will wait before polling 'Link Training' bit in Link Status register. Value range from 10 to 1000 uS.

### **Unpopulated Links**

In order to save power, software will disable unpopulated PCI Express links, if this option set to 'Disable Link'.

### **Restore PCIE Registers**

On non-PCI Express aware OS's (Pre Windows Vista) some devices may not be correctly reinitialized after S3. Enabling this restores PCI Express device configuration on S3 resume

Warning: Enabling this may cause issues with other hardware after S3 resume.

**ACPI Settings**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
ACPI Settings					
	Enable Hibernation		Enabled		→ ← Select Screen
	ACPI Sleep State		S3 (Suspend to R...)		↑ ↓ Select Item
	Lock Legacy Resources		Disabled		Enter: Select
	S3 Video Repost		Disabled		+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit

**Enable Hibernation**

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

**ACPI Sleep State**

Select ACPI sleep state the system will enter, when the SUSPEND button is pressed.

**Lock Legacy Resources**

Enabled or Disabled Lock of Legacy Resources.

**S3 Video Repost**

Enable or disable S3 Video Repost.

**Wake up event settings**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
			Wake on Ring	Disabled	→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
			Wake on PCI PME	Disabled	
			Wake on PCIE Wake Event	Disabled	

**Wake on PCIE PME Wake Event**

The options are Disabled and Enabled.

**CPU Configuration**

This section shows the CPU configuration parameters.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
			Genuine Intel(R) CPU 0000 @ 2.6GHz		→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
			CPU Signature	306c2	
			Microcode Patch	Fff0006	
			Max CPU Speed	2600 MHz	
			Min CPU Speed	800 MHz	
			CPU Speed	3400 MHz	
			Processor Cores	4	
			Intel HT Technology	Not Supported	
			Intel VT-x Technology	Supported	
			Intel SMX Technology	Supported	
			64-bit	Supported	
			EIST	Supported	
			CPU C3 State	Supported	
			CPU C6 State	Supported	
			CPU C7 State	Supported	
			Active Processor Cores	All	
			Limit CPUID Maximum	Disabled	
			Execute Disable Bit	Enabled	
			Intel Virtualization Technology	Enabled	
			Hardware Prefetcher	Disabled	
			Adjacent Cache Line Prefetch	Enabled	
			EIST	Enabled	
			Turbo Mode	Enabled	
			Intel TXT(LT) Support	Disabled	

**Active Processor Cores**

Number of cores to enable in each processor package.

**Limit CPUID Maximum**

Disabled for Windows XP.

**Execute Disable Bit**

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

**Intel Virtualization Technology**

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

**Hardware Prefetcher**

To turn on/off the Mid level Cache (L2) streamer Prefetcher.

**Adjacent Cache Line Prefetch**

To turn on/off prefetching of adjacent cache lines.

**EIST**

Enabled/Disabled Intel Speedstep

**Intel TXT(LT) Support**

Enables or Disables Intel (R)TXT (LT) Support.

**SATA Configuration**

SATA Devices Configuration.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
	SATA Controller(s)		Enabled		
	SATA Mode Selection		AHCI		
	Aggressive LPM Support		Enabled		
	SATA Controller Speed		Gen3		
	SATA Port0		Empty		
	Software Preserve		Unknown		
	SATA Port1		Empty		
	Software Preserve		Unknown		
	SATA Port2		Empty		→ ← Select Screen
	Software Preserve		Unknown		↑ ↓ Select Item
	SATA Port3		Empty		Enter: Select
	Software Preserve		Unknown		+ - Change Field
	SATA Port4		Empty		F1: General Help
	Software Preserve		Unknown		F2: Previous Values
	SATA Port5		Empty		F3: Optimized Default
	Software Preserve		Unknown		F4: Save ESC: Exit

**SATA Controller(s)**

Enable / Disable Serial ATA Controller.

**SATA Mode Selection**

- (1) IDE Mode.
- (2) AHCI Mode.
- (3) RAID Mode.



## Shutdown Temperature Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
ACPI Shutdown Temperature			Disabled		→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

### ACPI Shutdown Temperature

The default setting is Disabled.

## NXP3460 Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
NXP3460 Configuration					→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
DP/eDP LVDS Control		Disable			

### DP/eDP LVDS Control

Enable / Disable DP(eDP) LVDS.

## iSmart Controller 3.0

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
iSmart Controller 3.0					→ ← Select Screen
Power-On after Power failure			Disable	↑ ↓ Select Item	
Temperature Guardian			Disable	Enter: Select	
Schedule Slot 1			None	+- Change Field	
Schedule Slot 2			None	F1: General Help	
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit

### Power-On after Power failure

This field sets the system power status whether Disable or Enable when power returns to the system from a power failure situation.

### Temperature Guardian

Generate the reset signal when system hangs up on POST.

### iSmart Controller

Set the power on time for the system.

### Schedule Slot 1 / 2

Set the hour/minute for system power on.

**AMT Configuration**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
			Intel AMT	Enabled	
			BIOS Hotkey Pressed	Disabled	
			MEBx Selection Screen	Disabled	
			Hide Un-Configure ME Confirmation	Disabled	
			Un-Configure ME	Disabled	
			Amt Wait Timer	0	
			Activate Remote Assistance Process	Disabled	→ ← Select Screen
			USB Configure	Enabled	↑ ↓ Select Item
			PET Progress	Enabled	Enter: Select
			AMT CIRA Timeout	0	+ - Change Field
			Watchdog	Disabled	F1: General Help
			OS Timer	0	F2: Previous Values
			BIOS Timer	0	F3: Optimized Default
					F4: Save ESC: Exit

**AMT Configuration**

This configuration is supported only with IB980VF (with iAMT function). Options are Enabled and Disabled.

Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

**Unconfigure ME**

This configuration is supported only with IB980VF (with iAMT function). Perform AMT/ME unconfigure without password operation.

**Amt Wait Timer**

Set timer to wait before sending ASF\_GET\_BOOT\_OPTIONS.

**Activate Remote Assistance Process**

Trigger CIRA boot.

**PET Progress**

User can Enable/Disable PET Events progress to receive PET events or not.

**Watchdog Timer**

This configuration is supported only with IB980VF (with iAMT function). Enable/Disable Watchdog Timer.

**USB Configuration**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					
USB Devices: 2 Hubs					
Legacy USB Support			Enabled		
USB3.0 Support			Enabled		
XHCI Hand-off			Enabled		→ ← Select Screen
EHCI Hand-off			Enabled		↑ ↓ Select Item
USB Mass Storage Driver Support			Enabled		Enter: Select
USB hardware delays and time-outs:					+ - Change Field
USB Transfer time-out			20 sec		F1: General Help
Device reset time-out			20 sec		F2: Previous Values
Device power-up delay			Auto		F3: Optimized Default
					F4: Save ESC: Exit

**Legacy USB Support**

Enables Legacy USB support.

AUTO option disables legacy support if no USB devices are connected.

DISABLE option will keep USB devices available only for EFI applications.

**USB3.0 Support**

Enable/Disable USB3.0 (XHCI) Controller support.

**XHCI Hand-off**

This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

**EHCI Hand-off**

Enabled/Disabled. This is a workaround for OSeS without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

**USB Mass Storage Driver Support**

Enable/Disable USB Mass Storage Driver Support.

**USB Transfer time-out**

The time-out value for Control, Bulk, and Interrupt transfers.

**Device reset time-out**

USB mass Storage device start Unit command time-out.

**Device power-up delay**

Maximum time the device will take before it properly reports itself to the Host Controller. ‘Auto’ uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

**F81846 Super IO Configuration**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Super IO Configuration					
F81846 Super IO Chip		F81846D			
Standby Power on S5		All Enable			
<ul style="list-style-type: none"> <li>▶ Serial Port 1 Configuration</li> <li>▶ Serial Port 2 Configuration</li> <li>▶ Serial Port 3 Configuration</li> <li>▶ Serial Port 4 Configuration</li> <li>▶ Parallel Port Configuration</li> </ul>					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save   ESC: Exit

**Serial Port Configuration**

Set Parameters of Serial Ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

**Standby Power on S5**

[ All Enable] Provide the Standby Power for devices.[All Disable] Shutdown the Standby power.

**Parallel Port Configuration**

Set parameters of Parallel port (LPT/LPTE)

**F81846 H/W Monitor**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
PC Health Status					
CPU temperature			+29 C		
SYS temperature			+30 C		
FAN1 Speed			2170 RPM		
FAN2 Speed			N/A		
FAN3 Speed			N/A		
Vcore			+1.800 V		→ ← Select Screen
+5V			+5.087 V		↑ ↓ Select Item
+12V			+12.408 V		Enter: Select
1.5V			+1.560 V		+ - Change Field
VS5V			+5.016 V		F1: General Help
VCC3V			+3.392		F2: Previous Values
Fan 1 smart fan control			50 C		F3: Optimized Default
Fan 2 smart fan control			50 C		F4: Save ESC: Exit

**Temperatures/Voltages**


These fields are the parameters of the hardware monitoring function feature of the SHB. The values are read-only values as monitored by the system and show the PC health status.

**Fan1/Fan2 Smart Fan Control**

This field enables or disables the smart fan feature. At a certain temperature, the fan starts turning. Once the temperature drops to a certain level, it stops turning again.

## Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

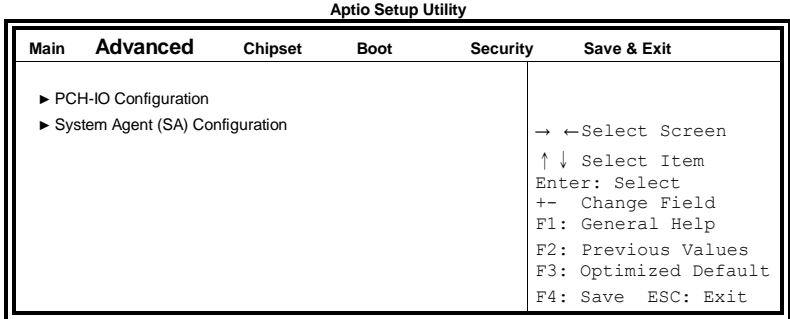

**PCH-IO Configuration**

This section allows you to configure the North Bridge Chipset.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
		Intel PCH RC Version	1.0.1.0		
		Intel PCH SKU Name	Q87		
		Intel PCH Rev ID	02/B0		
		▶ PCI Express Configuration			
		▶ USB Configuration			
		▶ PCH Azalia Configuration			
		PCH LAN Controller	Enabled		→ ← Select Screen
		Wake on LAN	Enabled		↑ ↓ Select Item
		Display Logic	Enabled		Enter: Select
		CLKRUN# Logic	Enabled		+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit
		SLP_S4 Assertion Width	4-5 Seconds		

**Toggle EC**

Enable or Disable Toggle EC

**PCH LAN Controller**

Enable or disable onboard NIC.

**Wake on LAN**

Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.)

**SLP\_S4 Assertion Width**

Select a minimum assertion width of the SLP\_S4# signal.



**PCI Express Configuration**

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCI Express Configuration					
		DMI Link ASPM Control	Enabled		
		DMI Link Extended Synch Control	Disabled		
		PCIe-USB Glitch W/A	Disabled		
		Subtractive Decode	Disabled		
		▶ PCI Express Root Port 1			→ ← Select Screen
		▶ PCI Express Root Port 2			↑ ↓ Select Item
		▶ PCI Express Root Port 3			Enter: Select
		▶ PCI Express Root Port 4			+ - Change Field
		▶ PCI Express Root Port 5			F1: General Help
		PCI-E Port 6 is assigned to LAN			F2: Previous Values
		▶ PCI Express Root Port 7			F3: Optimized Default
		▶ PCI Express Root Port 8			F4: Save ESC: Exit

**PCI Express Clock Gating**

Enable or disable PCI Express Clock Gating for each root port.

**DMI Link ASPM Control**

The control of Active State Power Management on both NB side and SB side of the DMI link.

**PCIe-USB Glitch W/A**

PCIe-USB Glitch W/A for bad USB device(s) connected behind PCIe/PEG port.

**USB Configuration**

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
USB Precondition		Disabled			
xHCI Mode		Auto			
USB Ports Per-Port Disable Control			Disabled		

**USB Precondition**

Precondition work on USB host controller and root ports for faster enumeration.

**xHCI Mode**

Mode of operation of xHCI controller.

**USB Ports Per-Port Disable Control**

Control each of the USB ports (0~13) disabling.

**PCH Azalia Configuration**

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCH Azalia Configuration					→ ← Select Screen
Azalia			Auto	↑ ↓ Select Item	
Azalia Docking Support			Enabled	Enter: Select	
Azalia PME			Disable	+- Change Field	
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit

**Azalia**

Control Detection of the Azalia device.

Disabled = Azalia will unconditionally be disabled.

Enabled Azalia will be unconditionally be enabled.

Auto = Azalia will be enabled if present, disabled otherwise.

**Azalia Docking Support**

Enable or Disable Azalia Docking Support of Audio Controller.

**Azalia PME**

Enable or Disable power Management capability of Audio Controller.

**System Agent (SA) Configuration**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
		System Agent Bridge Name	IvyBridge		
		System Agent RC Version	1.1.0.0		
		VT-d Capability	Supported		
		VT-d	Enabled		
		CHAP Device (B0:D7:F0)	Disabled		→ ← Select Screen
		Thermal Device (B0:D4:F0)	Disabled		↑ ↓ Select Item
		Enable NB CRID	Disabled		Enter: Select
		▶ Graphics Configuration			+ - Change Field
		▶ Memory Configuration			F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save ESC: Exit

**VT-d**

Check to enable VT-d function on MCH.

**Enable NB CRID**

Enable or disable NB CRID WorkAround.

**C-State Pre-Wake**

Controls C-State Pre-Wake feature for ARAT, in SSKPD[57].

**Graphics Configuration**

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Graphics Configuration					
		IGFX VBIOS Version	2164		
		IGfx Frequency	800 MHz		
		Primary Display	Auto		
		Primary PEG	Auto		→ ← Select Screen
		Primary PCIE	Auto		↑ ↓ Select Item
		Internal Graphics	Auto		Enter: Select
		Aperture Size	256MB		+ - Change Field
		DVMT Pre-Allocated	64M		F1: General Help
		DVMT Total Gfx Mem	256MB		F2: Previous Values
		▶ LCD Control			F3: Optimized Default
					F4: Save ESC: Exit

**Primary Display**

Select which of IGFX/PEG/PCI graphics device should be primary display or select SG for switchable Gfx.

**Primary PEG**

Select PEGO/PEG1/PEG2/PEG3 Graphics device should be Primary PEG.

**Primary PCIE**

Select PCIE0/PCIE1/PCIE2/PCIE3/PCIE4/PCIE5/PCIE6/PCIE7 Graphics device should be primary PCIE.

**Internal Graphics**

Keep IGD enabled based on the setup options.

**DVMT Pre-Allocated**

Select DVMT 5.0 Pre-Allocated (Fixed) graphics memory size used by the internal graphics device.

**DVMT Total Gfx Mem**

Select DVMT 5.0 total graphics memory size used by the internal graphics device.

## BIOS SETUP

### Gfx Low Power Mode

This option is applicable for SFF only.

### Primary IGFX Boot Display (LCD Control)

Select the Video Device that will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.

## Memory Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Memory Information					
Memory Frequency			1333 MHz		
Total Memory			4096 MB (DDR3)		
DIMM#0			2048 MB (DDR3)		
DIMM#2			2048 MB (DDR3)		
CAS Latency (tCL)			9		
Minimum delay time					
CAS to RAS (tRCDmin)			9		
Row Precharge (tRPmin)			9		
Active to Precharge (tRASmin)			24		
→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit					

## Boot Settings

This section allows you to configure the boot settings.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					
Setup Prompt Timeout			1		
Bootup NumLock State			On		
Quiet Boot			Disabled		
Fast Boot			Disabled		
FIXED BOOT ORDER Priorities					→ ← Select Screen
Boot Option #1					↑ ↓ Select Item
▶ CSM16 parameters					Enter: Select
CSM parameters					+ - Change Field
▶ Hard Drive BBS Priorities					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save   ESC: Exit

### Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

### Bootup NumLock State

Select the keyboard NumLock state.

### Quiet Boot

Enables/Disables Quiet Boot option.

### Fast Boot

Enables/Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

### Boot Option Priorities

Sets the system boot order.

**CSM parameters**

This section allows you to configure the boot settings.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Launch CSM			Enable		→ ← Select Screen
Boot option filter			UEFI and Legacy		↑ ↓ Select Item
Launch PXE OpROM policy			Do not launch		Enter: Select
Launch Storage OpROM policy			Legacy only		+ - Change Field
Launch Video OpROM policy			Legacy only		F1: General Help
					F2: Previous Values
Other PCI device ROM priority			Legacy OpROM		F3: Optimized Default
					F4: Save ESC: Exit

**Boot option filter**

This option controls what devices system can boot to.

**Launch PXE OpROM policy**

Controls the execution of UEFI and Legacy PXE OpROM.

**Launch Storage OpROM policy**

Controls the execution of UEFI and Legacy Storage OpROM.

**Launch Video OpROM policy**

Controls the execution of UEFI and Legacy Video OpROM.

**Other PCI device ROM priority**

For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.





## Save & Exit Settings

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset					
Save Options Save Changes Discard Changes					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help
Restore Defaults Save as User Defaults Restore User Defaults					F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

### Save Changes and Exit

Exit system setup after saving the changes.

### Discard Changes and Exit

Exit system setup without saving any changes.

### Save Changes and Reset

Reset the system after saving the changes.

### Discard Changes and Reset

Reset system setup without saving any changes.

### Save Changes

Save Changes done so far to any of the setup options.

### Discard Changes

Discard Changes done so far to any of the setup options.

### Restore Defaults

Restore/Load Defaults values for all the setup options.

### Save as User Defaults

Save the changes done so far as User Defaults.

### Restore User Defaults

Restore the User Defaults to all the setup options.

## Drivers Installation

This section describes the installation procedures for software and drivers. The software and drivers are included with the SHB. If you find the items missing, please contact the vendor where you made the purchase. The contents of this section include the following:

Intel Chipset Software Installation Utility .....	58
VGA Drivers Installation .....	60
Realtek HD Audio Driver Installation .....	63
LAN Drivers Installation.....	65
Intel® Management Engine Interface .....	68
Intel® USB 3.0 Drivers .....	70

### **IMPORTANT NOTE:**

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

## **Intel Chipset Software Installation Utility**

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) 8 Series Chipset Drivers**.



2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the Welcome screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Click **Yes** to accept the software license agreement and proceed with the installation process.
5. On the Readme File Information screen, click **Next** to continue the installation.



6. The Setup process is now complete. Click **Finish** to restart the computer and for changes to take effect.

### VGA Drivers Installation

1. Insert the DVD that comes with the board. Click *Intel* and then *Intel(R) 8 Series Chipset Drivers*.




2. Click *Intel(R) Core(TM) i3/i5/i7 Graphics Driver*.

3. When the Welcome screen appears, click *Next* to continue.




4. Click **Yes** to agree with the license agreement and continue the installation.

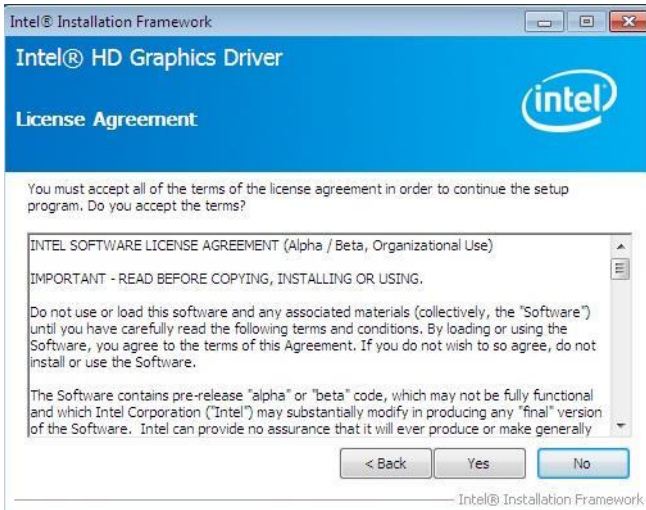

5. On the screen shown below, click **Install** to continue.



6. Setup complete. Click **Finish** to restart the computer and for changes to take effect.

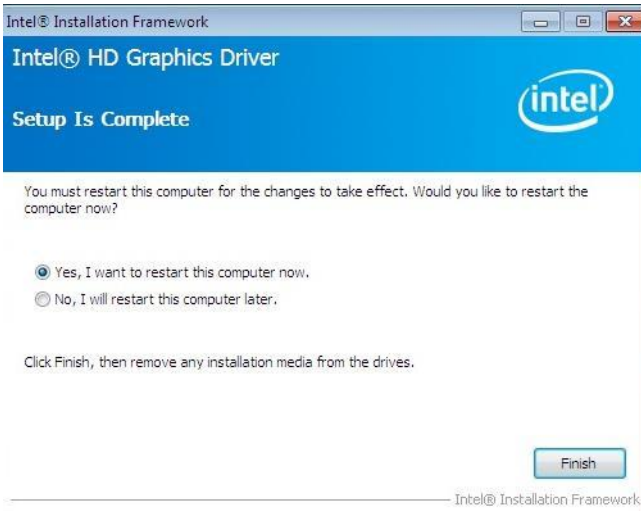



## Realtek HD Audio Driver Installation

1. Insert the DVD that comes with the board. Click *Intel* and then *Intel(R) 8 Series Chipset Drivers*.




2. Click *Realtek High Definition Audio Driver*.




## DRIVER INSTALLATION

3. On the Welcome to the InstallShield Wizard screen, click **Yes** to proceed with and complete the installation process.

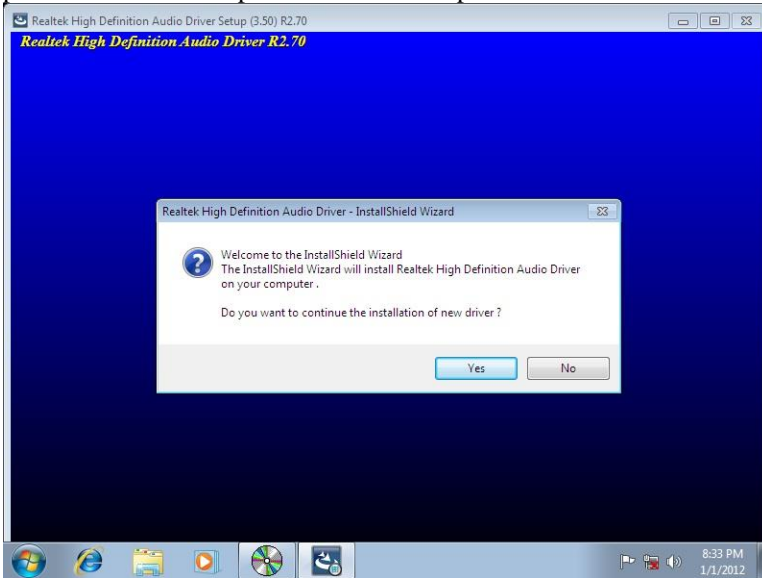

4. The InstallShield Wizard Complete. Click **Finish** to restart the computer and for changes to take effect.

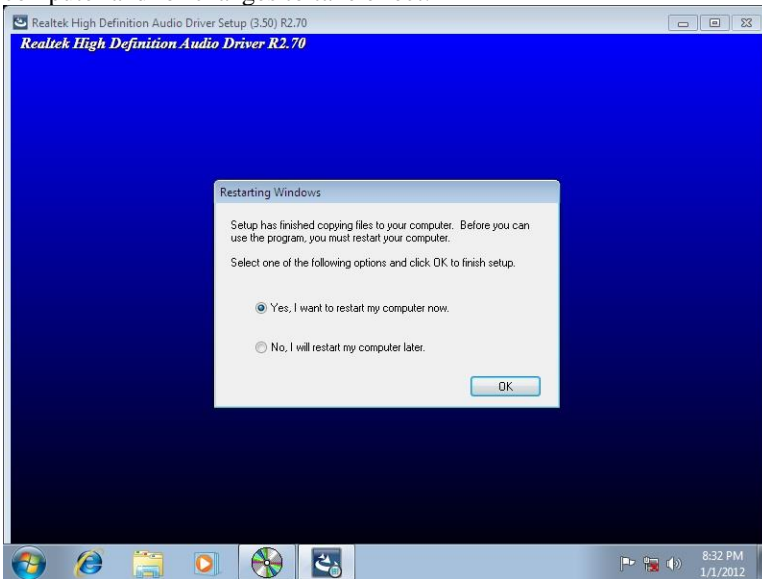

## LAN Drivers Installation

1. Insert the DVD that comes with the board. Click *Intel* and then *Intel(R) 8 Series Chipset Drivers*.




2. Click *Intel(R) PRO LAN Network Driver*.



## DRIVER INSTALLATION


3. Click **Install Drivers and Software**.

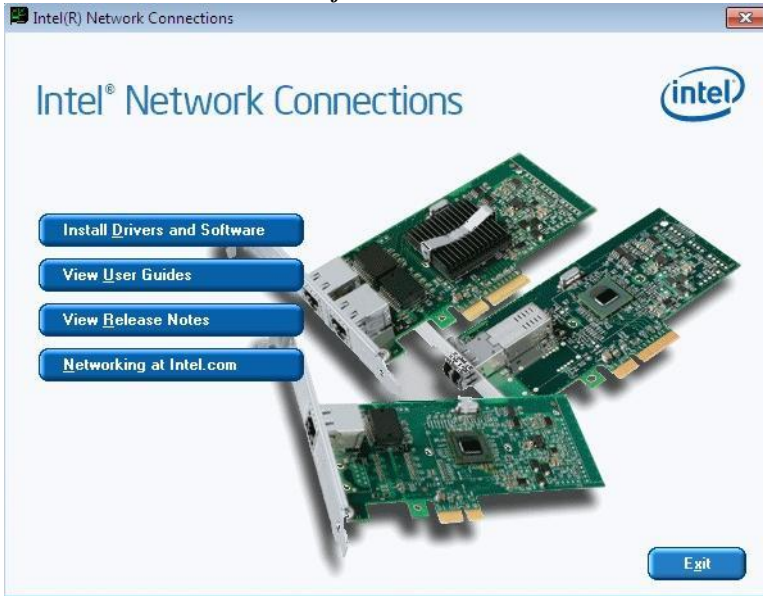

4. When the Welcome screen appears, click **Next**.



5. Click **Next** to to agree with the license agreement.
6. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.

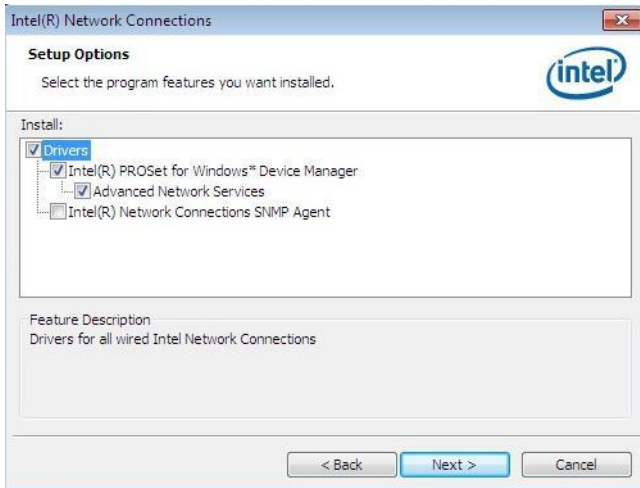

7. The wizard is ready to begin installation. Click **Install** to begin the installation.



8. When InstallShield Wizard is complete, click **Finish**.


## Intel® Management Engine Interface



The following application requires Microsoft .NET Framework 3.5 or later: Intel® Management Engine Components. Please install the latest version of Microsoft .NET Framework from Microsoft Download Center to run this application correctly.

Follow the steps below to install the Intel Management Engine.

1. Insert the DVD that comes with the board. Click *Intel* and then *Intel(R) 8 Series Chipset Drivers* and then *Intel(R) AMT 9.0 Drivers*.

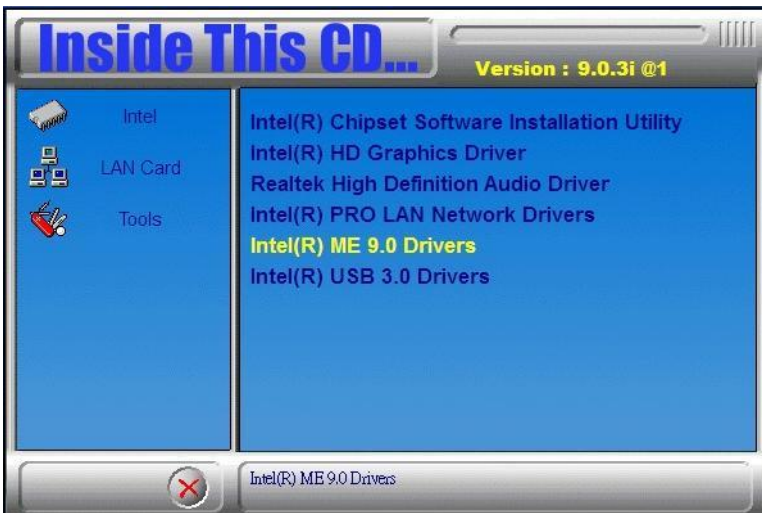

- When the Welcome screen to the InstallShield Wizard for Intel® Management Engine Components, click the checkbox for **Install Intel® Control Center** & click **Next**.



- Click **Yes** to agree with the license agreement.



- When the Setup Progress screen appears, click **Next**. Then, click **Finish** when the setup progress has been successfully installed.

## Intel® USB 3.0 Drivers

1. Insert the DVD that comes with the board. Click *Intel* and then *Intel(R) 8 Series Chipset Drivers*.



2. Click *Intel(R) USB 3.0 Drivers*.






3. When the Welcome screen to the InstallShield Wizard for Intel® USB 3.0 eXtensible Host Controller Driver, click *Next*.



4. Click *Yes* to to agree with the license agreement and continue the installation.

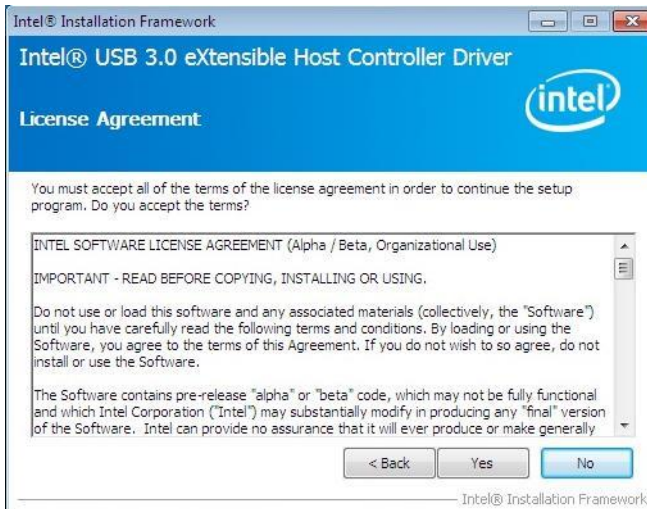

## **DRIVER INSTALLATION**

---

5. On the Readme File Information screen, click *Next* to continue the installation of the Intel® USB 3.0 eXtensible Host Controller Driver.

6. Setup complete. Click *Finish* to restart the computer and for changes to take effect.



## Appendix

### A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

<b>Address</b>	<b>Device Description</b>
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 06Fh	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
1F0h - 1F7h	IDE Interface
2F8h - 2FFh	Serial Port #2(COM2)
2B0h- 2DFh	Graphics adapter Controller
360h - 36Fh	Network Ports
3F8h - 3FFh	Serial Port #1(COM1)

## **B. Interrupt Request Lines (IRQ)**

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

<b>Level</b>	<b>Function</b>
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ8	Real Time Clock
IRQ14	Primary IDE
IRQ15	Secondary IDE

## C. Watchdog Timer Configuration

The WDT is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven. Under normal circumstance, the user will restart the WDT at regular intervals before the timer counts to zero.

### SAMPLE CODE:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "F81846.H"
//-----
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("Fintek 81846 watch dog program\n");

    SIO = Init_F81846();
    if (SIO == 0)
    {
        printf("Can not detect Fintek 81846, program abort.\n");
        return(1);
    }/if (SIO == 0)

    if (argc != 2)
    {
        printf(" Parameter incorrect!!\n");
        return (1);
    }

    bTime = strtol (argv[1], endptr, 10);
    printf("System will reset after %d seconds\n", bTime);

    if (bTime)
    {
        EnableWDT(bTime); }
    else
    {
        DisableWDT(); }

    return 0;
}
```

```
}
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;

    bBuf = Get_F81846_Reg(0x2B);
    bBuf &= (~0x20);
    Set_F81846_Reg(0x2B, bBuf); //Enable WDTO

    Set_F81846_LD(0x07); //switch to logic device 7
    Set_F81846_Reg(0x30, 0x01); //enable timer

    bBuf = Get_F81846_Reg(0xF5);
    bBuf &= (~0x0F);
    bBuf |= 0x52;
    Set_F81846_Reg(0xF5, bBuf); //count mode is second

    Set_F81846_Reg(0xF6, interval); //set timer

    bBuf = Get_F81846_Reg(0xFA);
    bBuf |= 0x01;
    Set_F81846_Reg(0xFA, bBuf); //enable WDTO output

    bBuf = Get_F81846_Reg(0xF5);
    bBuf |= 0x20;
    Set_F81846_Reg(0xF5, bBuf); //start counting
}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_F81846_LD(0x07); //switch to logic device 7

    bBuf = Get_F81846_Reg(0xFA);
    bBuf &= ~0x01;
    Set_F81846_Reg(0xFA, bBuf); //disable WDTO output

    bBuf = Get_F81846_Reg(0xF5);
    bBuf &= ~0x20;
    bBuf |= 0x40;
    Set_F81846_Reg(0xF5, bBuf); //disable WDT
}
//-----
```

```

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "F81846.H"
#include <dos.h>
//-----
unsigned int F81846_BASE;
void Unlock_F81846 (void);
void Lock_F81846 (void);
//-----
unsigned int Init_F81846(void)
{
    unsigned int result;
    unsigned char ucDid;

    F81846_BASE = 0x4E;
    result = F81846_BASE;

    ucDid = Get_F81846_Reg(0x20);
    if (ucDid == 0x07) //Fintek 81846
    {
        goto Init_Finish;
    }

    F81846_BASE = 0x2E;
    result = F81846_BASE;

    ucDid = Get_F81846_Reg(0x20);
    if (ucDid == 0x07) //Fintek 81846
    {
        goto Init_Finish;
    }

    F81846_BASE = 0x00;
    result = F81846_BASE;
}

Init_Finish:
    return (result);
}
//-----
void Unlock_F81846 (void)
{
    outportb(F81846_INDEX_PORT, F81846_UNLOCK);
    outportb(F81846_INDEX_PORT, F81846_UNLOCK);
}
//-----
void Lock_F81846 (void)
{
    outportb(F81846_INDEX_PORT, F81846_LOCK);
}
//-----
void Set_F81846_LD( unsigned char LD)
{
    Unlock_F81846();
    outportb(F81846_INDEX_PORT, F81846_REG_LD);
    outportb(F81846_DATA_PORT, LD);
    Lock_F81846();
}
//-----
void Set_F81846_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_F81846();
    outportb(F81846_INDEX_PORT, REG);
    outportb(F81846_DATA_PORT, DATA);
    Lock_F81846();
}
//-----

```

## APPENDIX

---

```
unsigned char Get_F81846_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_F81846();
    outportb(F81846_INDEX_PORT, REG);
    Result = inportb(F81846_DATA_PORT);
    Lock_F81846();
    return Result;
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#ifndef __F81846_H
#define __F81846_H                1
//-----
#define F81846_INDEX_PORT        (F81846_BASE)
#define F81846_DATA_PORT        (F81846_BASE+1)
//-----
#define F81846_REG_LD            0x07
//-----
#define F81846_UNLOCK            0x87
#define F81846_LOCK              0xAA
//-----
unsigned int Init_F81846(void);
void Set_F81846_LD( unsigned char);
void Set_F81846_Reg( unsigned char, unsigned char);
unsigned char Get_F81846_Reg( unsigned char);
//-----
#endif __F81846_H
```