

ET-2200 Series Ethernet I/O Modules User Manual



Ethernet I/O Module Ver. 1.6.0, Oct. 2021

WARRANTY

All products manufactured by ICP DAS are warranted against defective materials for a period of one year from the date of delivery to the original purchaser.

WARNING

ICP DAS assumes no liability for damages consequent to the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, nor for any infringements of patents or other rights of third parties resulting from its use.

COPYRIGHT

Copyright © 2020 by ICP DAS. All rights are reserved.

TRADEMARK

Names are used for identification only and may be registered trademarks of their respective companies.

CONTACT US

If you have any questions, please feel free to contact us via email at:

service@icpdas.com



SUPPORT

This manual relates to the following modules:

AI:

ET-2217CI-4, ET-2217CI

DI/DO:

ET-2242, ET-2242U, ET-2251, ET-2254,
ET-2254P, ET-2255, ET-2255U, ET-2260,
ET-2261, ET-2261-16, and ET-2268


TABLE OF CONTENTS

1. INTRODUCTION	5
1.1 Packing List.....	5
1.2 Features.....	6
2. HARDWARE INFORMATION.....	10
2.1 Appearance	10
2.2 Specification	13
2.2.1 System Specification (DIO)	13
2.2.2 DI/DO Specification	14
2.2.3 System Specification (AI)	20
2.2.4 AI Specification	21
2.3 Pin Assignments	22
2.3.1 ET-2242/ET-2242U	22
2.3.2 ET-2251	23
2.3.3 ET-2254/2254P	23
2.3.4 ET-2255/ET-2255U	24
2.3.5 ET-2260	25
2.3.6 ET-2261	25
2.3.7 ET-2261-16.....	26
2.3.8 ET-2268	26
2.3.9 ET-2217CI/2217CI-4.....	27
2.4 Wiring Connections.....	28
2.4.1 Digital Input Wiring	28
2.4.2 Digital Output Wiring	29
2.4.3 Analog Input Wiring	31
2.5 Wiring to the Connector	32
2.6 Dimensions.....	33
3. GETTING STARTED	36
3.1 Configuring the Boot Mode	36
3.2 Connecting the Power and the Host PC.....	37
3.3 Configuring the Network Settings.....	38
3.4 Modbus TCP Testing	40
4. WEB CONFIGURATION	42
4.1 Logging in to the Web Server	42

- 4.2 Home 44
 - 4.2.1 Home – DI/DO 44
 - 4.2.2 Home – AI 45
- 4.3 Network..... 46
 - 4.3.1 IP Address Configuration 46
 - 4.3.2 General Settings 49
 - 4.3.3 Restore Factory Defaults 50
 - 4.3.4 Firmware Update..... 52
- 4.4 I/O Settings..... 53
 - 4.4.1 DO Control..... 53
 - 4.4.2 DI/DO Configuration 54
 - 4.4.3 Analog Input Channel 57
 - 4.4.4 Analog Input Calibration..... 58
 - 4.4.5 RTC..... 59
 - 4.4.6 Data Logger..... 59
- 4.5 Sync 61
 - 4.5.1 DIO Synchronization 61
- 4.6 PWM..... 63
 - 4.6.1 PWM Configuration 63
- 4.7 MQTT (AI) 64
- 4.8 Pair Connection 65
 - 4.8.1 I/O Pair-Connection Settings 65
- 4.9 Filter 67
 - 4.9.1 Filter Settings..... 67
- 4.10 Monitor 68
- 4.11 Change Password 69
- 4.12 Logout 70
- 4.13 MQTT..... 71
 - 4.13.1 Connectivity Settings..... 72
 - 4.13.2 Publication Settings 74
 - 4.13.3 Restore Factory Defaults 75
- 4.14 MQTT-DO..... 76
 - 4.14.1 MQTT – Digital Outputs..... 76
 - 4.14.2 Readbacks of the Digital Outputs..... 78
- 4.15 MQTT-DI 79
 - 4.15.1 MQTT – Digital Inputs..... 79
- 4.16 MQTT-AI 81
- 4.17 MQTT- Realization 82

4.17.1	Set up Mosquitto.....	82
4.17.2	Introduction to MQTTLens	88
4.17.3	ET-2200 Periodic Publish Realization.....	91
5.	I/O PAIR CONNECTION APPLICATIONS.....	93
5.1	One Module Polling the Remote DI/DO (1-to-1, Pull / Push Mode).....	93
5.1.1	Pull Mode	95
5.1.2	Push Mode.....	96
5.2	Two Modules Pushing the Local DI to each other (1-to-1, Push Mode).....	97
5.3	Several Modules Pulling the Remote DI (M-to-1) (Pull Mode)	100
5.4	Several Modules Pushing the Local DI (M-to-1) (Push Mode).....	103
6.	MODBUS INFORMATION.....	106
6.1	What is Modbus TCP/IP?	106
6.2	Modbus Message Structure	107
6.2.1	01(0x01) Read the Status of the Coils (Read DO Readback values)	110
6.2.2	02(0x02) Read the Status of the Input (Read DI values)	112
6.2.3	03(0x03) Read the Holding Registers (Read AO Readback values)	114
6.2.4	04(0x04) Read the Input Registers (Read AI values)	116
6.2.5	05(0x05) Force a Single Coil (Write DO value)	118
6.2.6	06(0x06) Set a Single Register (Write AO value)	120
6.2.7	15(0x0F) Force Multiple Coils (Write DO values)	122
6.2.8	16(0x10) Set Multiple Registers (Write AO values)	124
6.3	Modbus Register Table (For DIO Module).....	126
6.3.1	Common Functions	126
6.3.2	Specific Functions	128
6.4	Modbus Register Table (For AIO Module).....	132
APPENDIX A:	TROUBLESHOOTING	133
A1.	How do I restore the web password for the module to the factory defaults?	133
A2.	How to update the firmware via Ethernet?	135
A.3	Why is the Host computer unable to ping or search for the ET-2200 module?	138
A.4	What is Digital-Input Filter (DI Filter)?	139
APPENDIX B:	REVISION HISTORY.....	140

1. Introduction

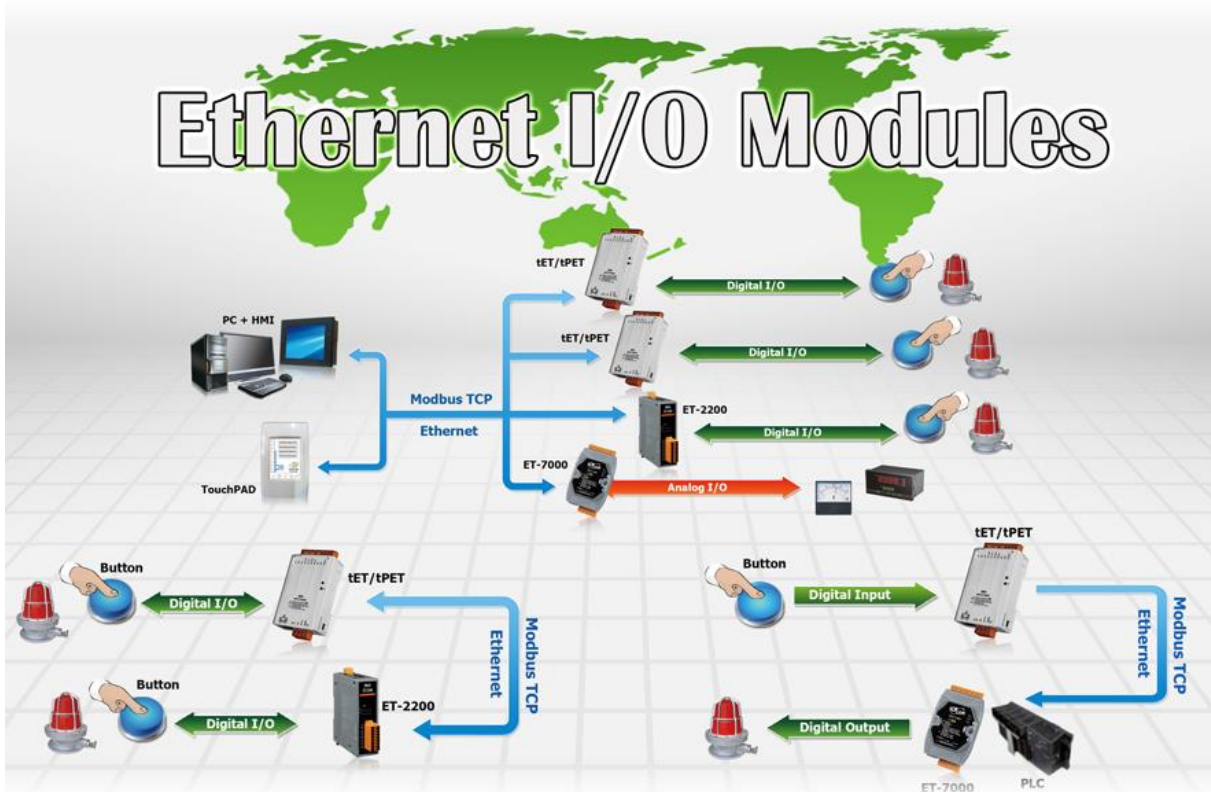

The ET-2200 series modules, a IP-based Ethernet I/O module, features a built-in web server which allows configuration, I/O monitoring and I/O control by simply using a regular web browser. In addition, the ET-2200 also supports Modbus TCP/UDP protocol that makes perfect integration to SCADA software.

1.1 Packing List

The shipping package includes the following items:



ET-2200 Module x 1



Quick Start x 1




Note:

If any of these items are missing or damaged, please contact the local distributor for more information. Save the shipping materials and cartons in case you need to ship the module in the future.

1.2 Features

1. Built-in Web Server

The ET-2200 series module has a built-in web server that allows users to easily configure, monitor and control the module from a remote location using a web browser.

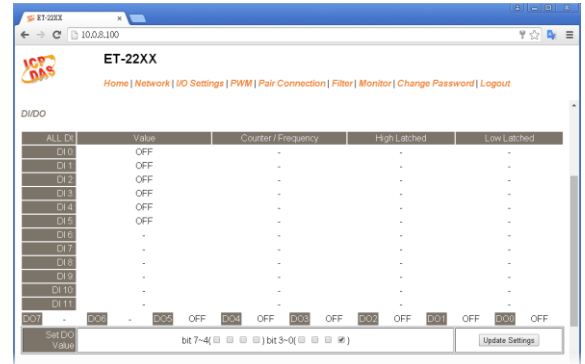


2. Support Modbus TCP/UDP Protocols

The Modbus TCP, Modbus UDP slave function on the Ethernet port can be used to provide data to remote SCADA software.


3. I/O Pair Connection (Push and Pull)

This function is used to create a DI to DO pair through the Ethernet. Once the configuration is completed, ET-2200 module can continuously pull the status of remote DI device using the Modbus TCP protocol and then write to local DO channels in the background.

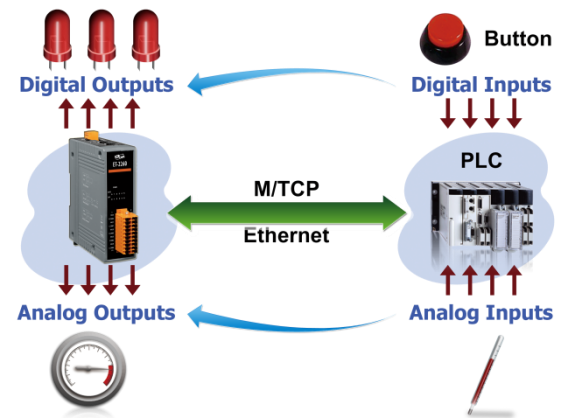

4. Slim-Type Housing

The ET-2200 modules are slim-type housing with about 3.3 cm in width. Compared with the palm-size module that has about 7 cm in width, more slim-type ET-2200 modules can be installed on the same DIN-Rail space.

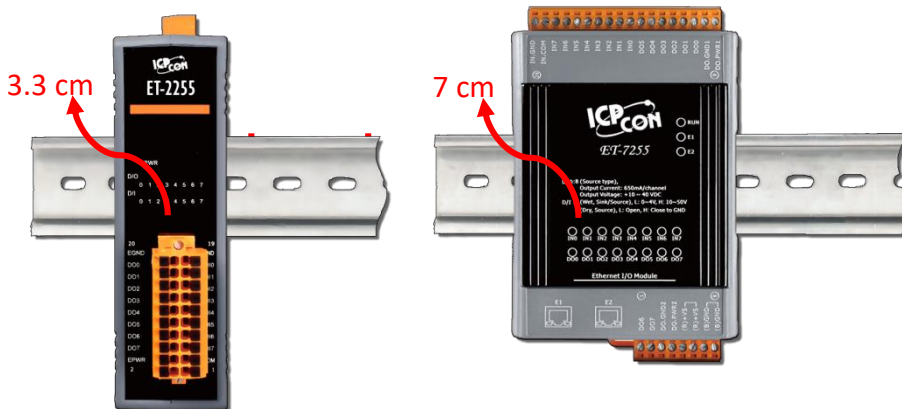

5. Built-in Multi-function I/O

➤ All **Digital Output** modules provide:


- A **Power-on Value**: On boot up, the digital output value is set as the Power-on value.
- A **Safe Value**: If Modbus TCP communication is lost for a certain period, the digital output value will be set as the user-defined safe value.
- A **PWM Function**: The digital output channels support PWM (pulse generation) function that can be configured with different frequency (100 Hz Max.) and different duty cycle for each channel. The term “High Duty Cycle” describes the duration of 'on' time in proportion to the regular interval or 'period' of time. Similarly, the term “Low Duty Cycle” corresponds to the duration of the 'off' time. Consequently, it is not necessary to keep switching from ON to OFF from a remote controller. In this way, the ET-2200 series module reduces the complexity required for the control system and enhances timing accuracy.



Note: Because of the characteristics of the relay functions, it is recommended that the PWM on modules with relay functions is not used for extended periods of time.

➤ All **Digital Input** modules provide:

- **Digital input channels that can also be used as 32-bit high speed (3 kHz) counters.**
- **High/Low Latched Status Commands:** The modules provide commands to read the status of any digital input channels that are latched high or latched low. The following is an example that shows the usefulness of the latched digital input. If we wish to read a key stroke from a key switch connected to the digital input channel of a module, the input signal of the key stroke is a pulse signal as shown in the figure.

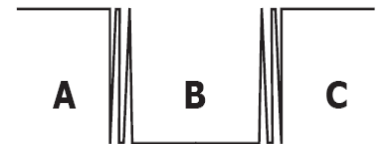


If we just use the read digital input status command to read the signal and we cannot send the command during the B period due to some reasons, then we will lose the key stroke information. However, with the read latched digital input command, we can still get the key stroke information even we are not able to send command in B period.

- **Frequency Measurement:**


ET-2200 series modules also provide a frequency measurement function that retrieves the digital input counter value at specific times and calculates the frequency. Rather than polling via a remote host, the ET-2200 series modules can determine the frequency directly, reducing the communication delay caused by two ends and also improves the accuracy of the frequency measurement. In order to applying for more applications, this module provides 3 scan modes and 4 moving average methods for user to select the best way in their applications.

- **DIO Synchronization(Mirror Local DI to DO):** ET-2200 series modules also provide a DIO synchronization function. The DIO synchronization is divided into three modes: **Level Sync**, **Rising Active** and **Falling Active**.


- **Level Sync (DO = DI) Mode:** The synchronization operation in DI and DO.

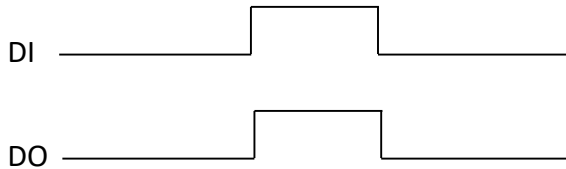

- **Rising Active (DO = ON) Mode:** When the specified DI state from OFF to ON, the corresponding DO will be set to ON.

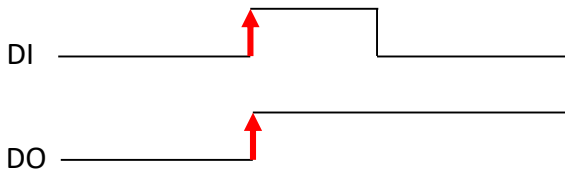

- **Falling Active (DO = ON) Mode:** When the specified DI state from ON to OFF, the corresponding DO will be set to ON.

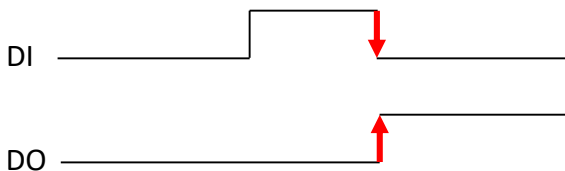

6. Built-in Dual Watchdog


The Dual Watchdog consists of a CPU Watchdog (for hardware functions) and a Host Watchdog (for software functions).

- **CPU Watchdog** automatically resets it-self when the built-in firmware runs abnormally.
- **Host Watchdog** set the digital output with predefined safe-value when there is no communication between the module and host (PC or PLC) over a period of time (Watchdog timeout).



7. Daisy-chain Ethernet Cabling

The ET-2200 has a built-in two-port Ethernet switch to implement daisy-chain topology. The cabling is much easier and total costs of cable and switch are significantly reduced.

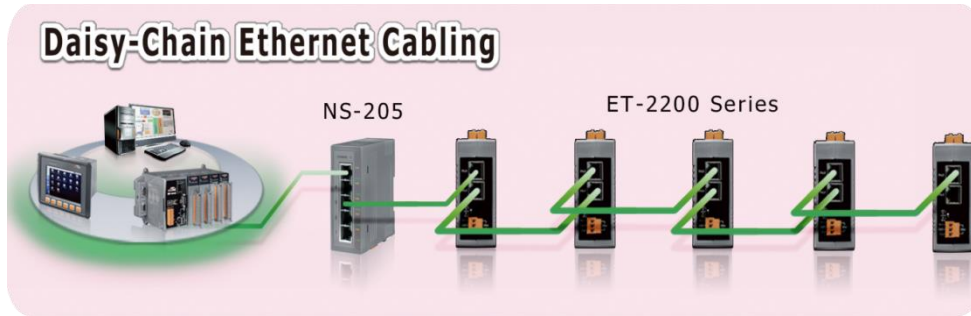

8. LAN Bypass

LAN Bypass feature guarantees the Ethernet communication. It will automatically active to continue the network traffic when the ET-2200 loses its power.



9. Highly Reliable Under Harsh Environment


- Wide Operating Temperature Range: -25 ~ +75°C
- Storage Temperature: -30 ~ +80°C
- Humidity 10 ~ 90% RH (Non-condensing)



2. Hardware Information

2.1 Appearance

The front panel and top panel of the ET-2200 module contain the I/O connector, LEDs, Ethernet Port and power connector.

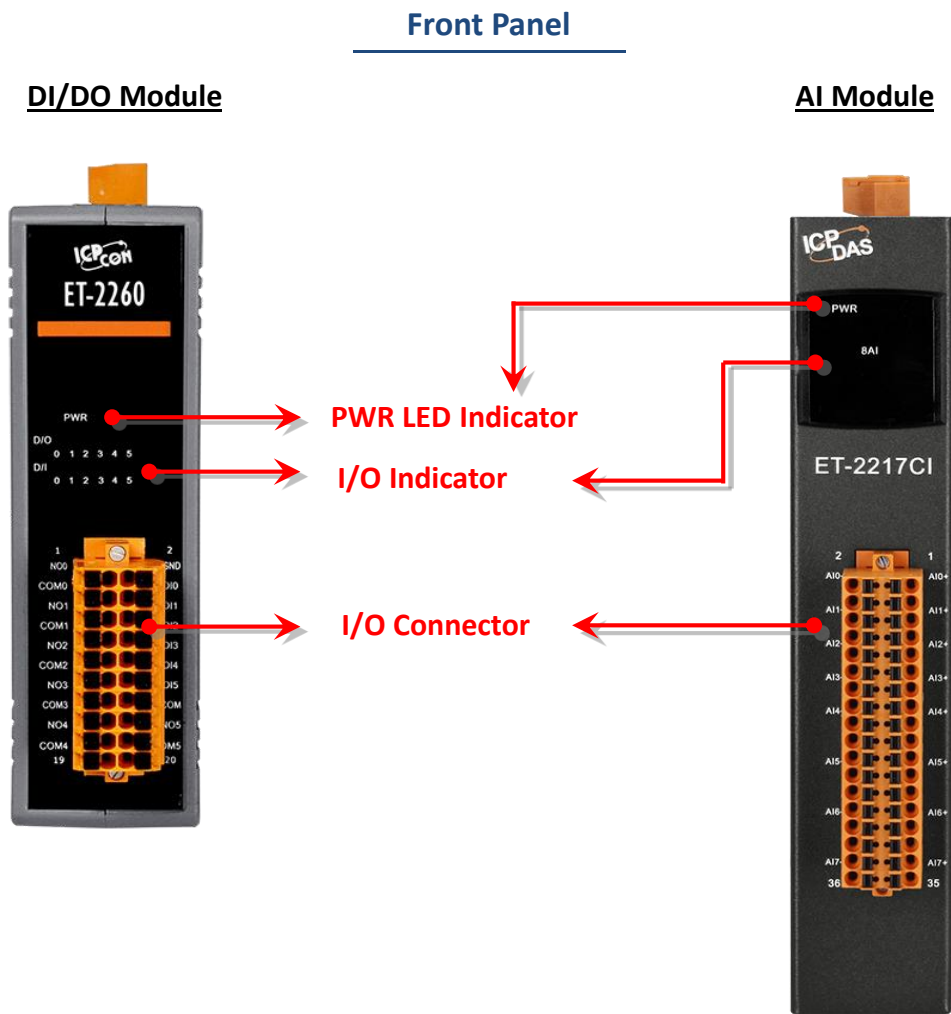

- **PWR LED Indicator**


Once power is supplied to the ET-2200 series module, the system LED indicator will illuminate.

- **I/O Indicator**

The exact design and functionality depends on the module type which indicates the I/O status.

● **I/O Connector**

For more detailed information regarding the pin assignments for the I/O connector, refer to [Section 2.3 “Pin Assignments”](#).

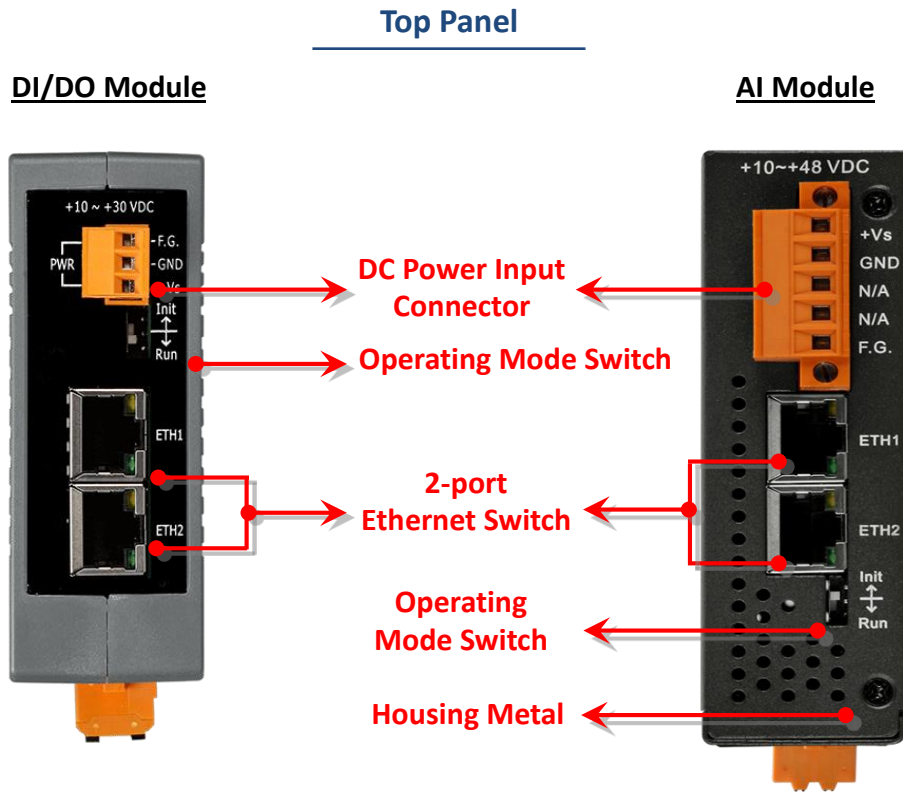

● **DC Power Input Connector**

The definition for “+Vs” and “GND” for use as the power supply applies to all types of ET-2200 series module.

- ET-2242/2251/2254(P)/2255/2260/2261/2268:
The valid power voltage range is from **+10 to +30 V_{DC}**.
- ET-2242U/2255U/2261-16, ET-2217CI/2217CI-4:
The valid power voltage range is from **+10 to +48 V_{DC}**.

The definition for “**F.G.**” (**Frame Ground**):

Electronic circuits are constantly vulnerable to Electrostatic Discharge (ESD), which becomes worse in a continental climate area. ET-2200 series module feature a new design for the frame ground, which provides a path that bypasses ESD, resulting in an enhanced ESD protection capability and ensuring that the module is more reliable.

- **Operating Mode Switch**

Init Mode: Use factory default settings for troubleshooting.

Run Mode: Use customer settings for normal operations.

The operating mode switch is set to the **“Run”** position by default. Refer to [Section 3.1 “Configuring the Boot Mode”](#) for more information.

- **2-Port Ethernet Switch**

The ET-2200 series modules are equipped with two RJ-45 10/100 Base-TX Ethernet switch ports. When an Ethernet link is detected and an Ethernet packet is received, the **Green LED** indicator and the **Yellow LED** indicator will be illuminated.

2.2 Specification

2.2.1 System Specification (DIO)

Model	ET-2242	ET-2251	ET-2254(P)	ET-2255	ET-2260	ET-2261	ET-2268	ET-2261-16	ET-2242U	ET-2255U	
System											
CPU	32-bit ARM										
Communication											
Ethernet Port	2 x RJ-45, 10/100 Base-Tx, switch Ports										
Protocol	Modbus TCP, Modbus UDP										
Security	Password and IP Filter										
I/O Pair Connection	Yes (Push, Pull)										
Dual Watchdog	Yes, Module, Communication (Configurable)										
LAN Bypass	Yes										
LED Indicators											
System Running	Yes										
Ethernet Link/Act	Yes										
DI/DO status	Yes										
2-Way Isolation											
Ethernet (Units: V _{DC})	1500										
I/O (Units: V _{DC})	3000	3750	3000	3750	3750	3000	3750	3000	3750	3750	
EMS Protection											
ESD (IEC 61000-4-2)	±8 kV Contact for Each Terminal and ±16 kV Air for Random Point								±8 kV Contact for Each Terminal and ±15 kV Air for Random Point		
EFT (IEC 61000-4-4)	±4 kV for Power Line										
Surge (IEC 61000-4-5)	±3 kV for Power Line								±2 kV for Power Line		
Power											
Reverse Polarity Protection	Yes										
Powered from Terminal Block	+10 ~ +30 V _{DC}						+10 ~ +48 V _{DC}				
Consumption	24 V _{DC}	3.2 W (Max.)	2.9 W (Max.)	3.3 W (Max.)	2.9 W (Max.)	3.3 W (Max.)	3.3 W (Max.)	2.9 W (Max.)	4.32 W (Max.)	2.3 W (Max.)	2.3 W (Max.)
	48 V _{DC}	-	-	-	-	-	-	-	4.71 W (Max.)	2.6 W (Max.)	2.7 W (Max.)
Mechanical											
Dimensions (L x W x H)	127 mm x 33 mm x 99 mm for ET-2242(U)/2251/2254(P)/2255(U)/2260/2261/2268 157 mm x 31 mm x 129 mm for only ET-2261-16										
Installation	DIN-Rail Mounting										
Environment											
Operating Temperature	-25 ~ +75°C										
Storage Temperature	-30 ~ +80°C										
Humidity	10 ~ 90% RH, Non-condensing										

2.2.2 DI/DO Specification

ET-2242/ET-2242U

Model	ET-2242	ET-2242U
Digital Output		
Channels	16	
Type	Open collector	Push-Pull
Sink/Source (NPN/PNP)	Sink	Sink/Source
Load Voltage	+3.5 V ~ +50 V	+3.5 V ~ +80 V
Max. Load Current	650 mA/Channel	500 mA/Channel
Overload Protection	1.4 A (with short-circuit protection)	-
Overvoltage Protection	+60 V _{DC}	-

ET-2251

Model	ET-2251	
Digital Input/Counter		
Channels	16	
Contact	Wet Contact	
Sink/Source (NPN/PNP)	Sink/Source	
On Voltage Level	+5 V _{DC} ~ +50 V _{DC}	
Off Voltage Level	+1 V _{DC} Max.	
Input Impedance	7.5 k Ω	
Counters	Max. Count	4,294,967,295 (32 bits)
	Max. Input Frequency	3 kHz
	Programmable Digital Filter	1 ~ 6500 ms (0.08 Hz ~ 500 Hz)
Overvoltage Protection	+70 V _{DC}	

ET-2254/2254P

Model		ET-2254	ET-2254P
I/O Type		By Wire Connection, Configurable Universal DIO	
I/O Channels		16	
Digital Input			
Type		Dry Contact	
Sink/Source (NPN/PNP)		Source	
On Voltage Level		Close to GND	
Off Voltage Level		Open	
Input Impedance		3 k Ω , 0.5 W	7.5 k Ω , 1 W
Counters	Max. Count	4,294,967,295 (32 bits)	
	Max. Input Frequency	3 kHz	2.5 kHz
	Programmable Digital Filter	1 ~ 6500 ms (0.08 Hz ~ 500 Hz)	
Digital Output			
Type		Open-collector (Sink)	
Max. Load Current		100 mA/channel	400 mA/channel
Load Voltage		+5 V _{DC} to +30 V _{DC}	+5 V _{DC} to +50 V _{DC}
Short Circuit Protection		-	Yes
Power-on Value		Yes, Configurable	
Safe Value		Yes, Configurable	

ET-2255/ET-2255U

Model		ET-2255	ET-2255U
Digital Input/Counter			
Channels		8	
Contact		Wet Contact	
Sink/Source (NPN/PNP)		Sink/Source	
On Voltage Level		$+5 V_{DC} \sim +50 V_{DC}$	
Off Voltage Level		$+1 V_{DC} \text{ Max.}$	
Input Impedance		7.5 k Ω	
Counters	Max. Count	4,294,967,295 (32 bits)	
	Max. Input Frequency	3 kHz	
	Programmable Digital Filter	1 ~ 6500 ms (0.08 Hz ~ 500 Hz)	
Overvoltage Protection		$+70 V_{DC}$	
Digital Output			
Channels		8	
Type		Open Collector	Push-Pull
Sink/Source (NPN/PNP)		Sink	Sink/Source
Load Voltage		$+3.5 V \sim +50 V$	$+3.5 V \sim +80 V$
Max. Load Current		650 mA/Channel	500 mA/Channel
Overload Protection		1.4 A (with short-circuit protection)	-
Overvoltage Protection		$+60 V_{DC}$	-

ET-2260

Model		ET-2260
Digital Input/Counter		
Channels		6
Contact		Wet Contact
Sink/Source (NPN/PNP)		Sink/Source
On Voltage Level		+5 V _{DC} ~ +50 V _{DC}
Off Voltage Level		+3.5 V _{DC} Max.
Input Impedance		7.5 kΩ
Counters	Max. Count	4,294,967,295 (32 bits)
	Max. Input Frequency	3 kHz
	Programmable Digital Filter	1 ~ 6500 ms (0.08 Hz ~ 500 Hz)
Overvoltage Protection		+70 V _{DC}
Power Relay		
Channels		6
Type		Power Relay, Form A (SPST N.O.)
Contact Rating		5 A @ 250 V _{AC} /24 V _{DC} (Resistive Load)
Min. Contact Load		10 mA @ 5 V
Operate Time		10 ms (max.)
Release Time		5 ms (max.)
Mechanical Endurance		2 × 10 ⁷ ops.
Electrical Endurance		10 ⁵ ops.
Power-on Value		Yes, Configurable
Safe Value		Yes, Configurable

ET-2261/2261-16

Model	ET-2261	ET-2261-16
Power Relay		
Channels	10	16
Type	Power Relay, Form A (SPST N.O.)	
Contact Rating	5 A @ 250 V _{AC} /24 V _{DC} (Resistive Load)	
Min. Contact Load	10 mA @ 5 V	
Operate Time	10 ms (max.)	
Release Time	5 ms (max.)	
Mechanical Endurance	2 × 10 ⁷ ops.	
Electrical Endurance	10 ⁵ ops.	
Power-on Value	Yes, Configurable	
Safe Value	Yes, Configurable	

ET-2268

Model		ET-2268
Relay Output		
Channels		8 (Form A x 4, Form C x 4)
Relay Type		Signal Relay
Form A	Contact Rating	2 A @ 30 V _{DC}
		0.24 A @ 220 V _{DC}
		0.25 A @ 250 V _{DC}
	Min. Contact Load	10 mA @ 20 mV
	Contact Material	Siler Nickel, Gold-covered
	Operate Time	3 ms (Typical)
	Release Time	4ms (Typical)
Mechanical Endurance		10 ⁸ ops
Electrical Endurance		2 x 10 ⁵ ops
Form C	Contact Rating	2 A @ 30 V _{DC}
		0.24 A @ 220 V _{DC}
		0.25 A @ 250 V _{DC}
	Min. Contact Load	10 mA @ 20 mV
	Contact Material	Siler Nickel, Gold-covered
	Operate Time	3 ms (Typical)
	Release Time	4ms (Typical)
Mechanical Endurance		10 ⁸ ops
Electrical Endurance		2 x 10 ⁵ ops
Surge Strength		2000 V _{DC}
Power-on Value		Yes, Configurable
Safe Value		Yes, Configurable

2.2.3 System Specification (AI)

Model	ET-2217CI-4	ET-2217CI
System		
Real Time Clock	Yes	
Data Logger	Yes, up to 480,000 records (ET-2217CI-4) and 320,000 records (ET-2217CI)	
Communication		
Ethernet Port	2 x RJ-45, 10/100 Base-TX, Switch Ports	
Protocol	Modbus TCP, Modbus UDP	
Security	Password and IP Filter	
Dual Watchdog	Yes, Module, Communication (Programmable)	
LAN Bypass	Yes	
LED Indicators		
for System Running	Yes, 1 as Power/Communication Indicator	
for Ethernet Link/Act	Yes	
2-Way Isolation		
Ethernet	1500 VDC	
I/O	3000 VDC, Field-to-Logic 3000 VDC, Channel to Channel	
EMS Protection		
ESD (IEC 61000-4-2)	±4 kV Contact for Each Terminal	
	±8 kV Air for Random Point	
EFT (IEC 61000-4-4)	±4 kV for Power Line	
Surge (IEC 61000-4-5)	±2 kV for Power Line	
Power		
Reverse Polarity Protection	Yes	
Powered from Terminal Block	+10 ~ +48 VDC	
Consumption	5.4 W (Max.)	
Mechanical		
Dimensions (L x W x H)	176 mm x 33 mm x 130 mm	
Installation	DIN-Rail Mounting	
Casing	Metal	
Ingress Protection Rating	IP30	
Environment		
Operating Temperature	-25 ~ +75°C	
Storage Temperature	-30 ~ +80°C	
Humidity	10 ~ 90% RH, Non-condensing	



2.2.4 AI Specification

ET-2217CI-4/ET-2217CI


Model		ET-2217CI-4	ET-2217CI
Analog Input			
Channels		4 Differential	8 Differential
Type Range	Voltage	$\pm 1\text{ V}, \pm 2.5\text{ V}, \pm 5\text{ V}, \pm 10\text{ V}$	
	Current	0 ~ 20mA, 4 ~ 20mA (Software Configurable)	
Resolution		16-bit	
Accuracy	Normal Mode	$\pm 0.1\%$ of FSR	
	Fast Mode	$\pm 0.5\%$ of FSR	
Sampling Rate	Normal Mode	10 Hz (per channel)	
	Fast Mode	200 Hz (per channel)	
Input Impedancet		Voltage: 20 M Ω , Current: 135 Ω	
Overvoltage Protection		120 VDC	
Overcurrent Protection		Yes, 50 mA at 110 VDC	
Individual Channel Configuration		Yes	

2.3 Pin Assignments


2.3.1 ET-2242/ET-2242U

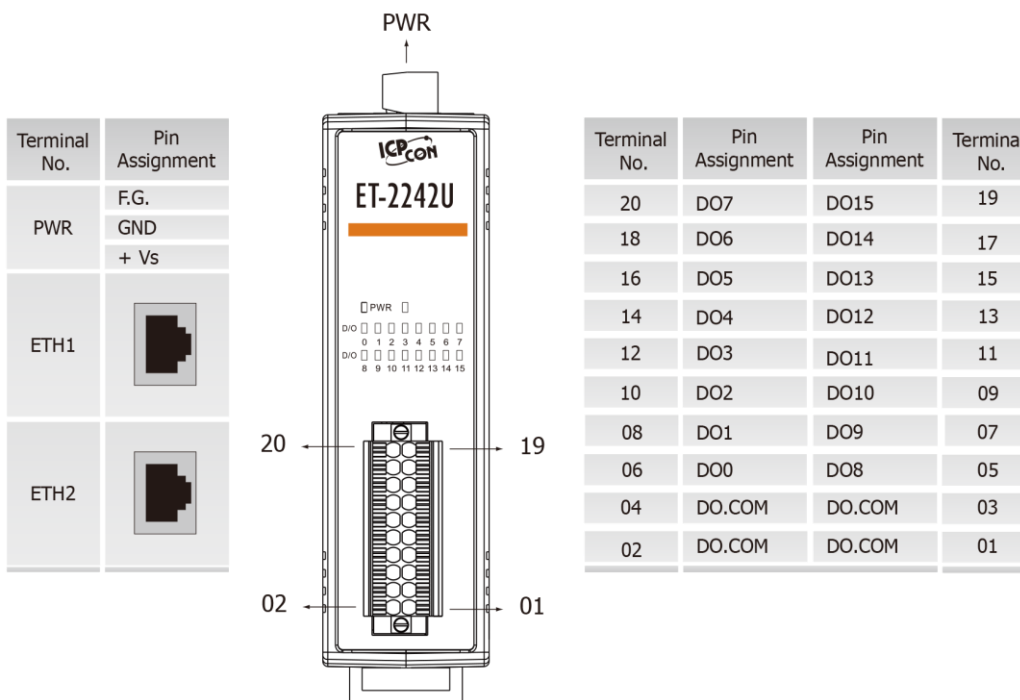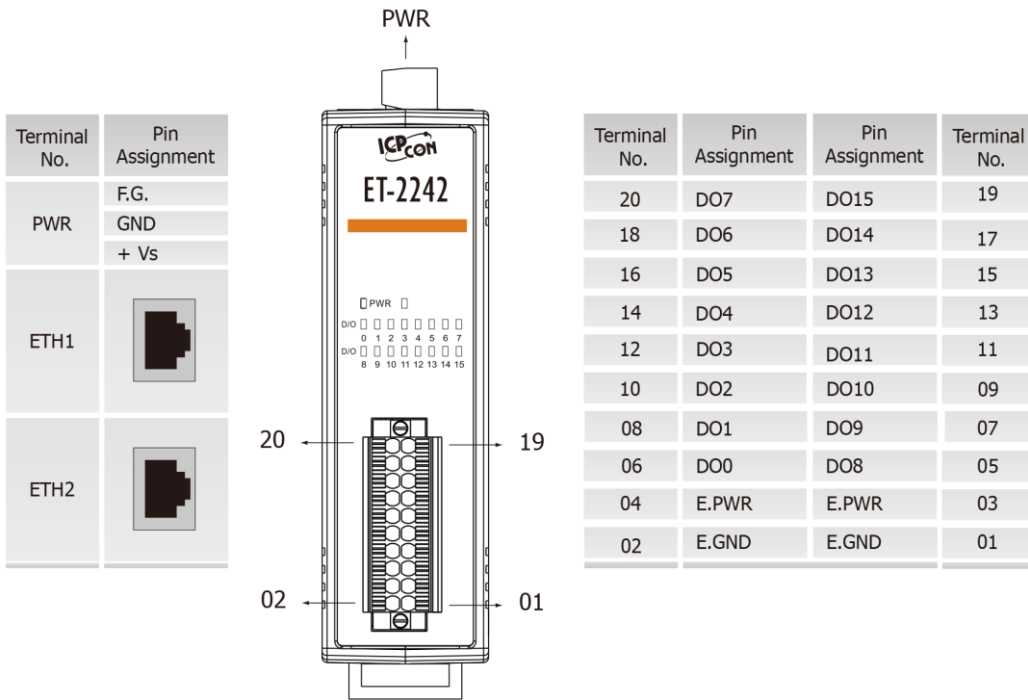



2.3.2 ET-2251

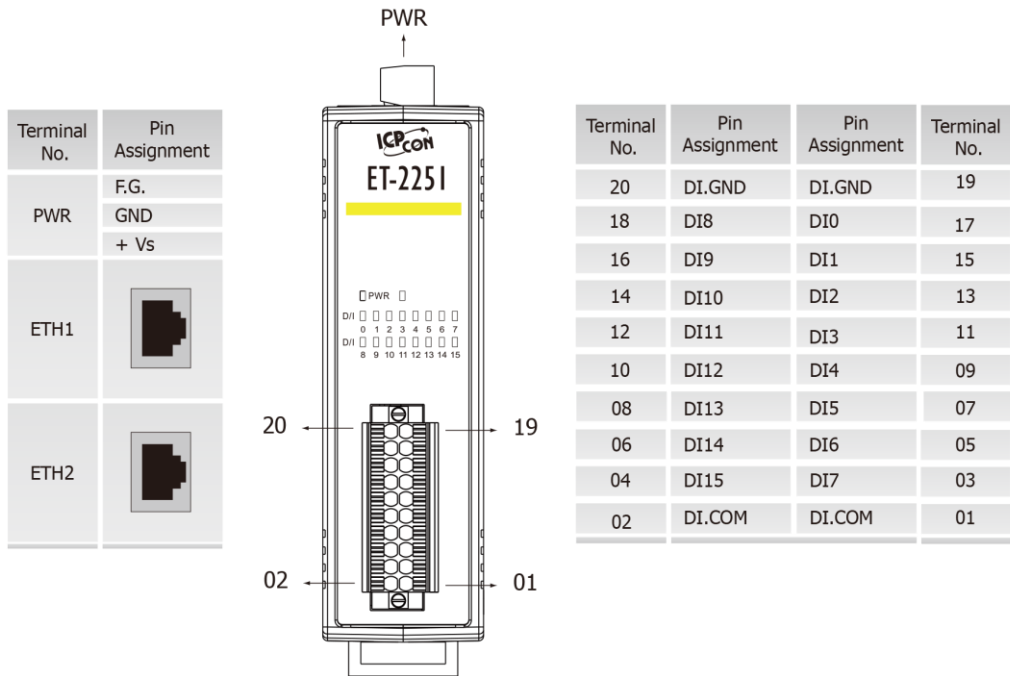


2.3.3 ET-2254/2254P

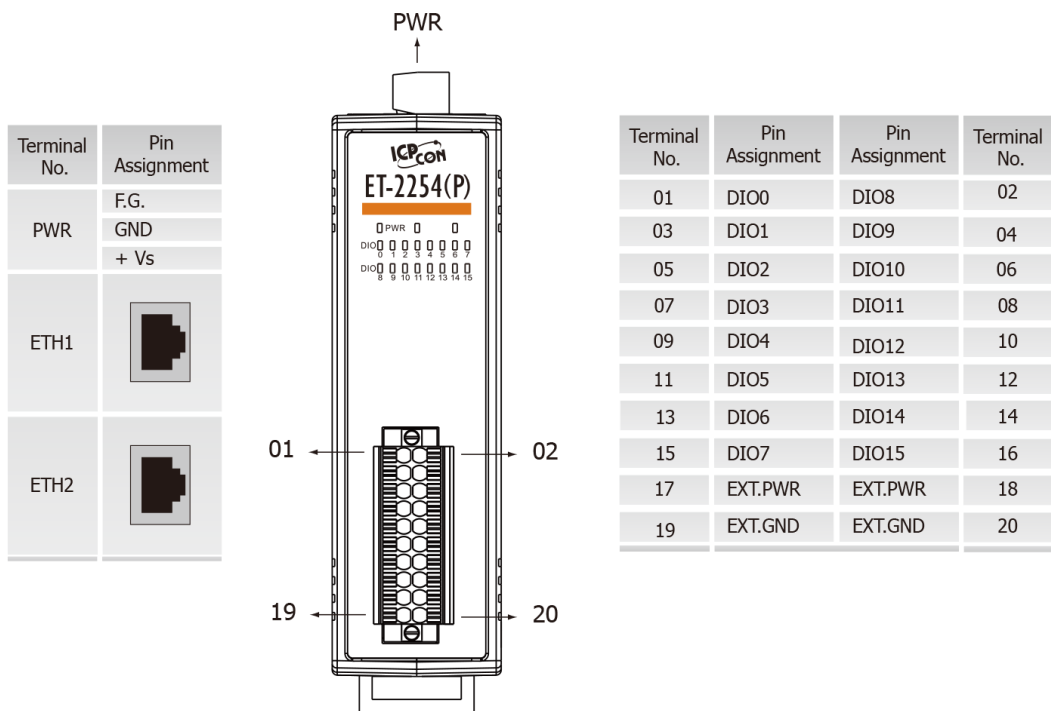


2.3.4 ET-2255/ET-2255U

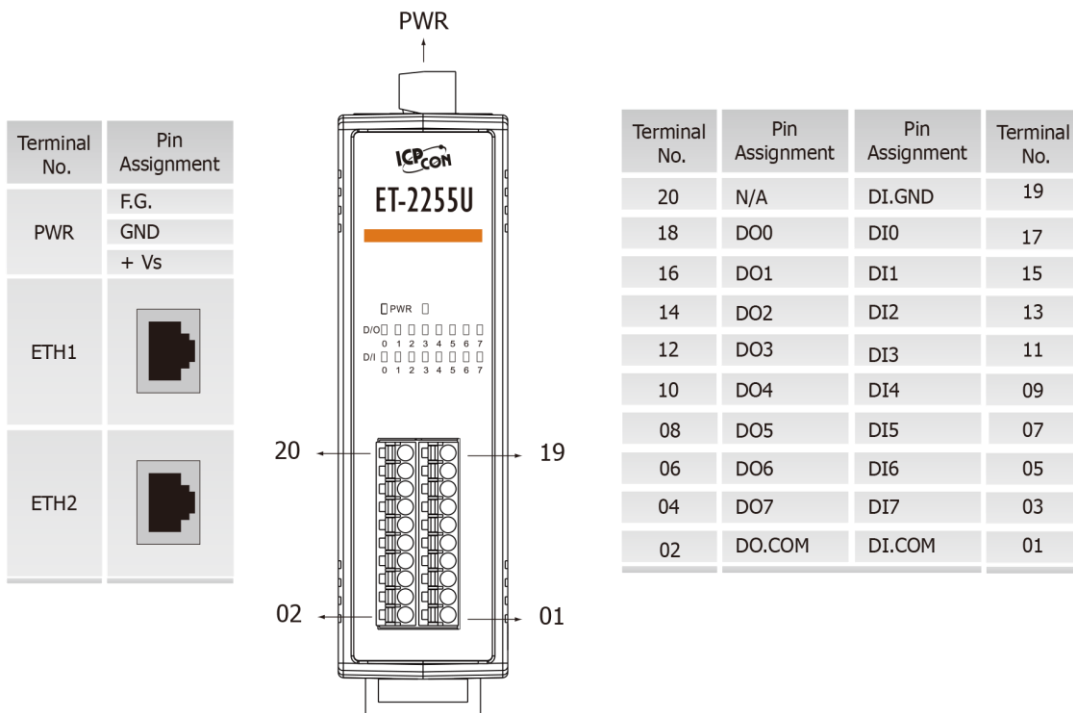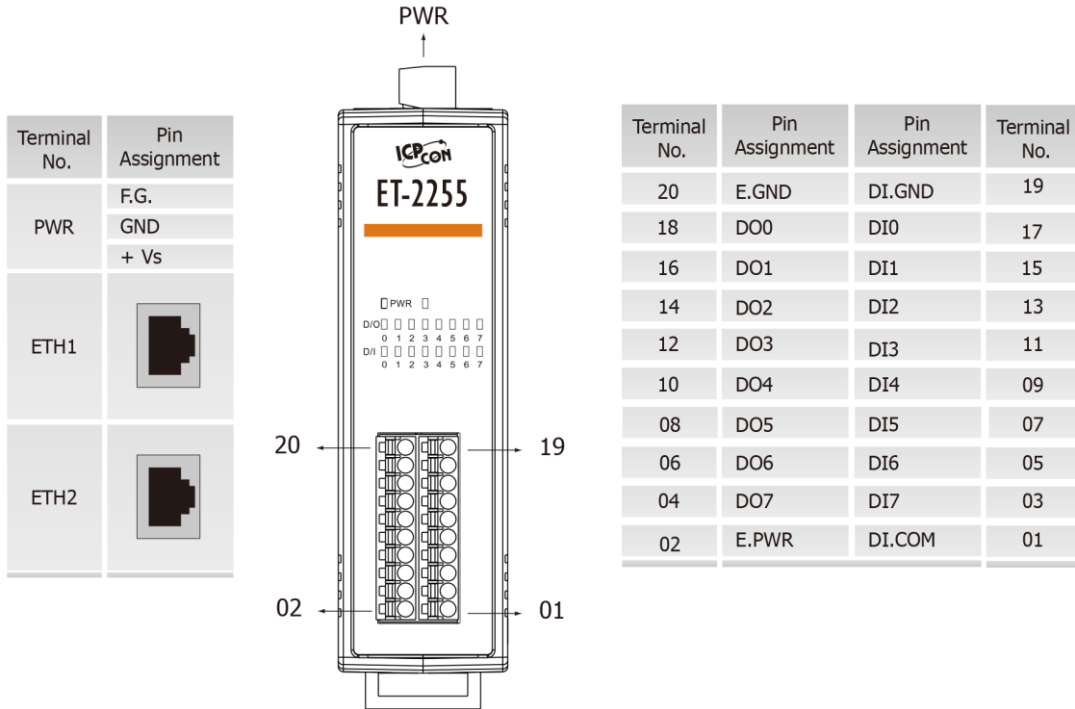


2.3.5 ET-2260

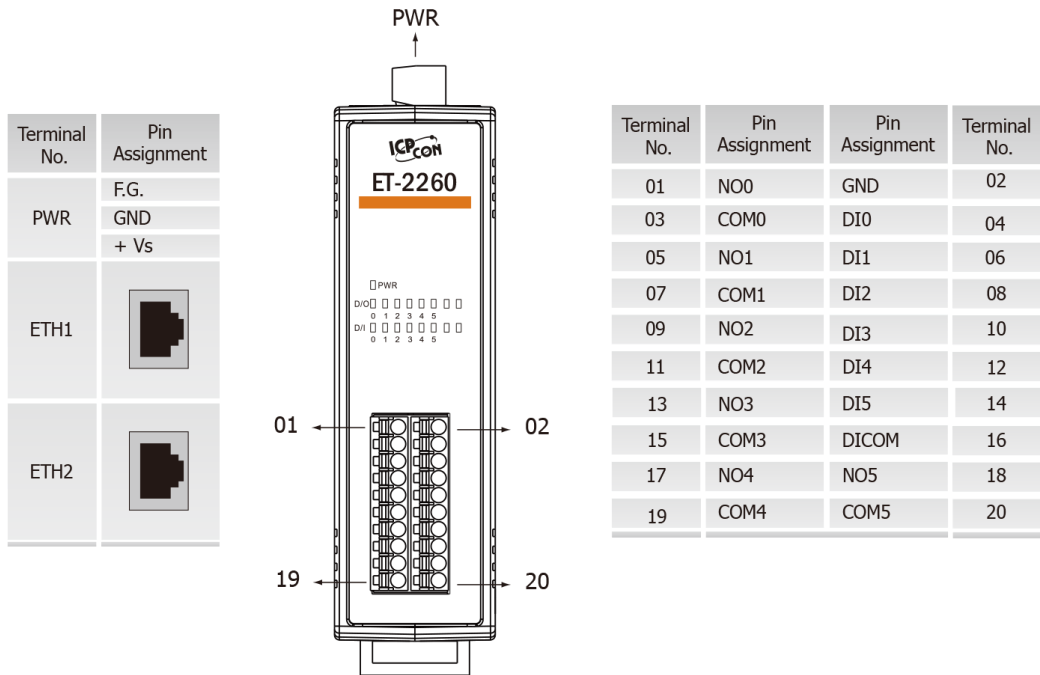


2.3.6 ET-2261

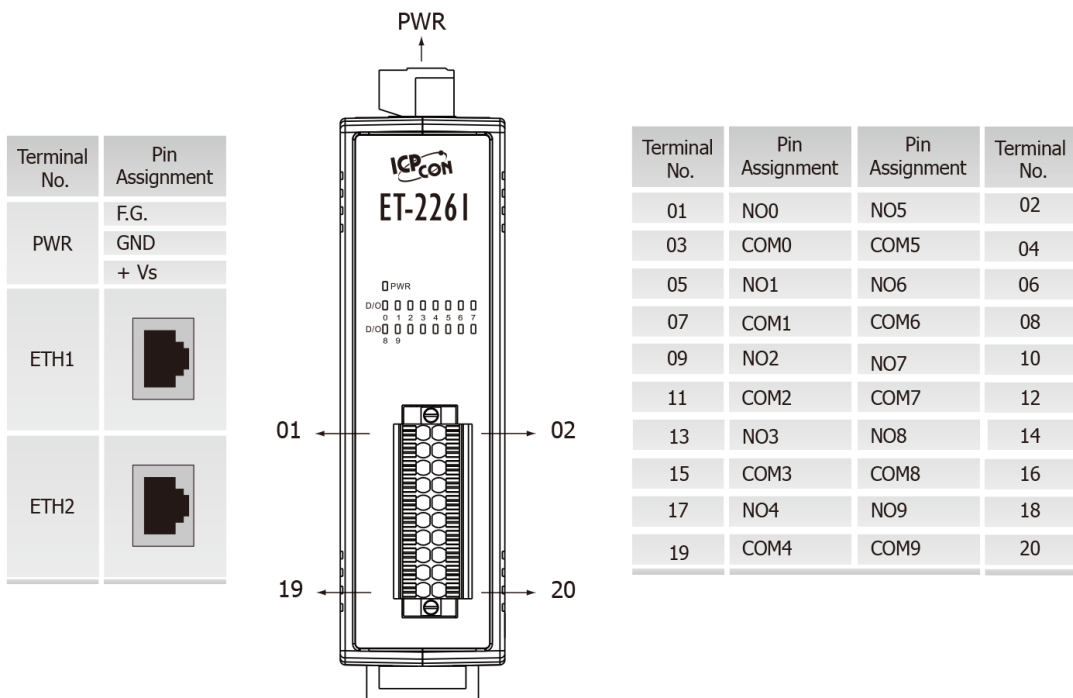

2.3.7 ET-2261-16

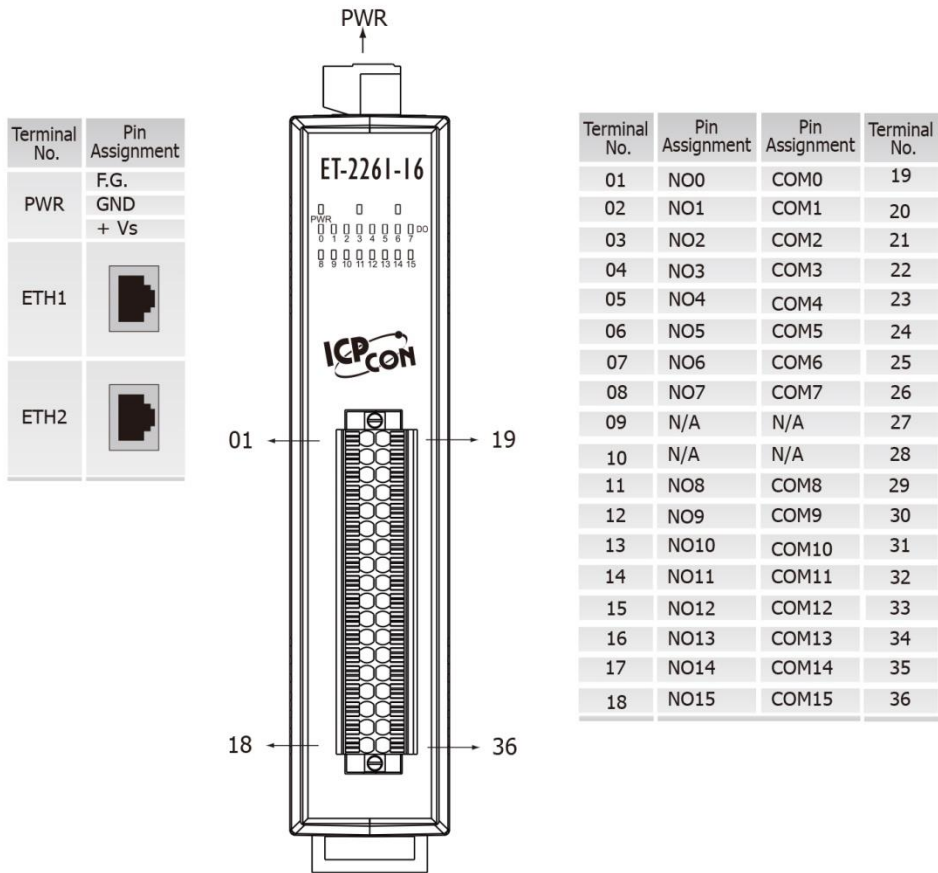

2.3.8 ET-2268

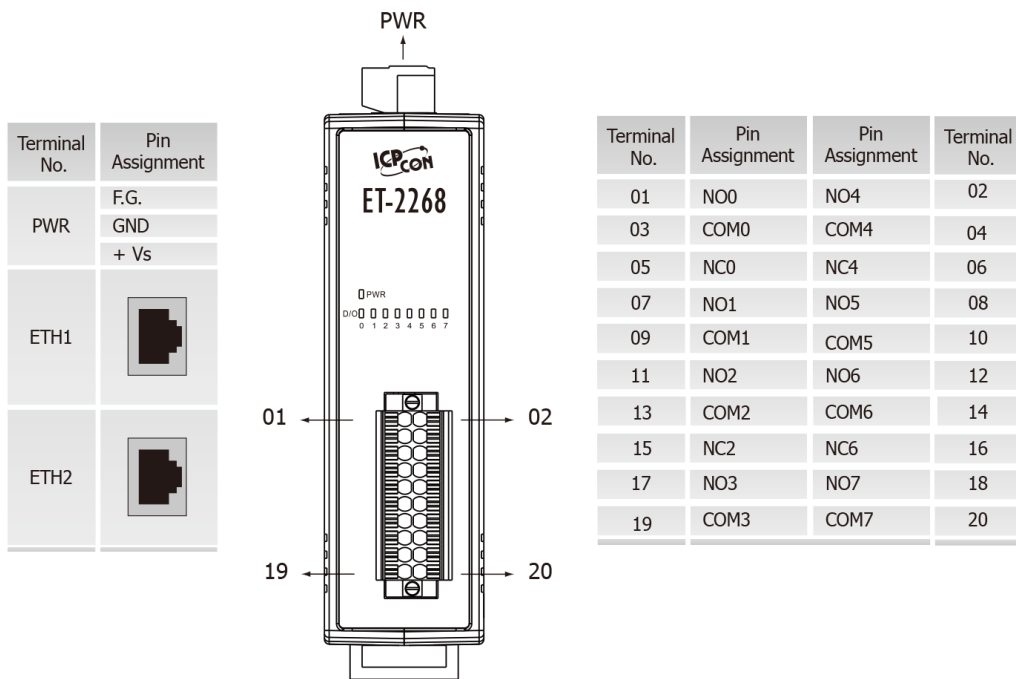

2.3.9 ET-2217CI/2217CI-4

Pin Assignments

Pin Assignment		Terminal No.	Pin Assignment	
ET-2217CI	ET-2217CI-4		ET-2217CI	ET-2217CI-4
AI0-	AI0-	02	01	A00+ AI0+
		04	03	
AI1-		06	05	AI1+
		08	07	
AI2-	AI1-	10	09	AI2+ AI1+
		12	11	
AI3-		14	13	AI3+
		16	15	
AI4-	AI2-	18	17	AI4+ AI2+
		20	19	
		22	21	
AI5-		24	23	AI5+
		26	25	
		28	27	
A06-	AI3-	30	29	AI6+ AI3+
		32	34	
		34	33	
AI7-		36	35	AI7+

Pin Assignment

ET-2217CI-4/ET-2217CI

Power Input: +10 ~ +48 VDC

SW2

ETH1

ETH2

Init
↕
Run

2.4 Wiring Connections

2.4.1 Digital Input Wiring

➤ **Input Wiring for the ET-2251/2255/2255U/2260:**

Model	Digital Input/Counter	Readback as 1	Readback as 0
ET-2251 ET-2255 ET-2255U ET-2260	Dry Contact	Close to GND	Open
ET-2260	Sink	+10 ~ +50 Vdc	OPEN or <4 Vdc
	Source	+10 ~ +50 Vdc	OPEN or <4 Vdc
ET-2251 ET-2255 ET-2255U	Sink	+5 ~ +50 Vdc	OPEN or <1 Vdc
	Source	+5 ~ +50 Vdc	OPEN or <1 Vdc

➤ **Input Wiring for the ET-2254/2254P:**

Model	Input Type	ON State LED ON Readback as 1	OFF State LED OFF Readback as 0
ET-2254 ET-2254P	Dry Contact	Close to GND	Open

2.4.2 Digital Output Wiring

➤ **Output Wiring for ET-2242/2254/2254P/2255:**

Model	Output Type	ON State Readback as 1	OFF State Readback as 0
ET-2242 ET-2254 ET-2254P ET-2255	Drive Relay		
	Resistance Load		

➤ **Output Wiring for ET-2242U/2255U:**

Model	Output Type	ON State Readback as 1	OFF State Readback as 0
ET-2242U ET-2255U	Sink		
	Source		


➤ **Output Wiring for ET-2260/2261/2261-16:**

Model	Power Relay	ON State Readback as 1
ET-2260 ET-2261 ET-2261-16	Relay Output	
		OFF State Readback as 0

➤ **Output Wiring for ET-2268:**

Model	Relay Output	ON State Readback as 1	OFF State Readback as 0
ET-2268	Form A Relay in NO1, NO3, NO4, NO7		
	Form C Relay in NO0, NO2, NO4, NO6		


for DC loads

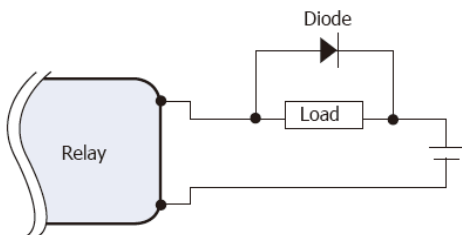

⚠ Note for the ET-2260/2261/2261-16/2268:

When inductive loads are connected to the relays, a large counter electromotive force may occur when the relay actuates because of the energy stored in the load. These fly back voltages can severely damage the relay contacts and greatly shorten the relay life. Limit these fly back voltages at your inductive load by installing a flyback diode for DC loads or a metal oxide varistor for AC loads.

for AC loads

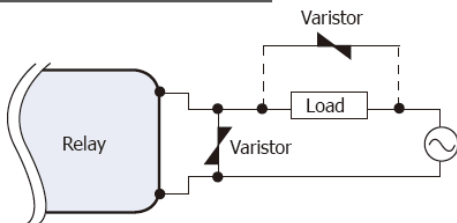


Varistor Selection:

Operating Voltage	Varistor Voltage	Max. Peak Current
100 ~ 120 V _{AC}	240 ~ 270 V _{AC}	> 1000 A
200 ~ 240 V _{AC}	440 ~ 470 V _{AC}	> 1000 A


2.4.3 Analog Input Wiring

➤ **Input Wiring for the ET-2251/2255/2255U/2260:**

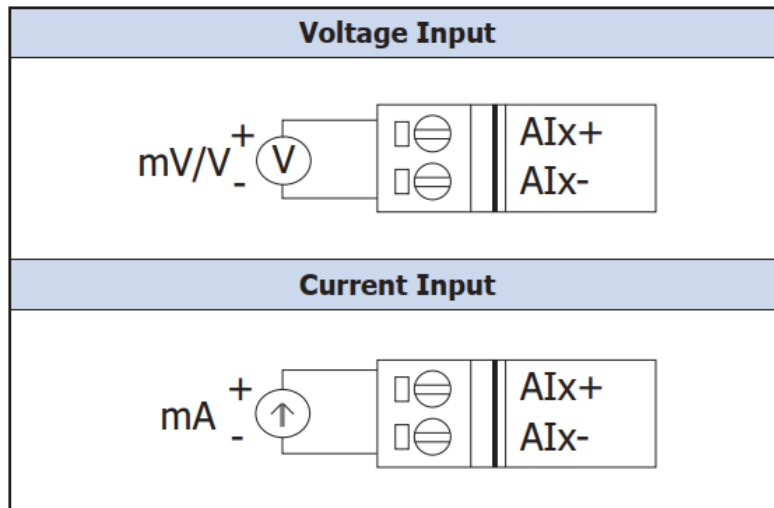

2.5 Wiring to the Connector


➤ Insulated Terminals Dimensions:

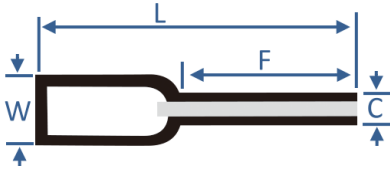

Dimensions (Unit: mm)				
Item NO.	F	L	C	W
CE007512	12.0	18.0	1.2	2.8


➤ A tip for connecting the wire to the connector

1. Use the blade of the flat-head screwdriver to push down the wire clamp.

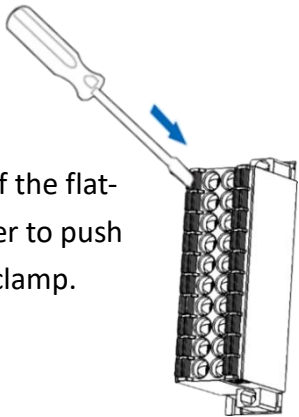

2. While holding the screwdriver in place, insert the wire into the terminal block.


Continue holding the screwdriver in place

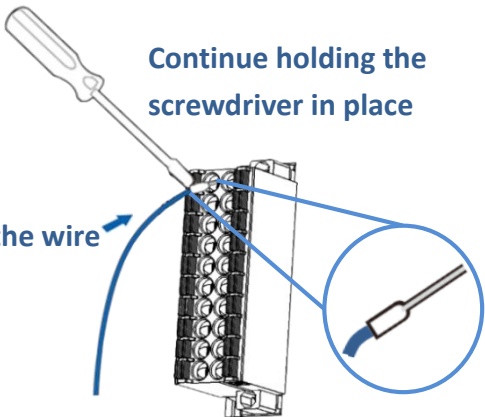

Insert the wire


➤ A tip for removing the wire from the connector

1. Use the blade of the flat-head screwdriver to push down the wire clamp.

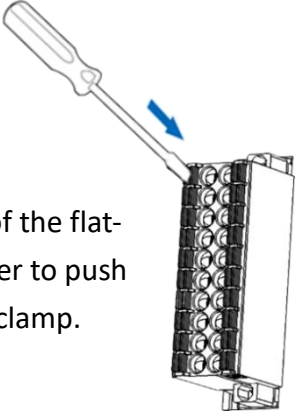

2. While holding the screwdriver in place, remove the wire from the terminal block.

Continue holding the screwdriver in place

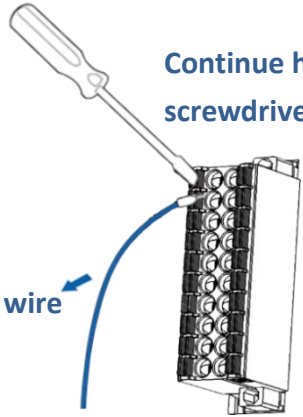


Remove the wire


2.6 Dimensions

The following diagrams provide the dimensions of the ET-2200 series module and can be used as a reference when defining the specifications for any custom enclosures. All dimensions are in millimeters.


➤ **ET-2242(U)/2251/2254(P)/2255(U)/2260/2261/2268:**

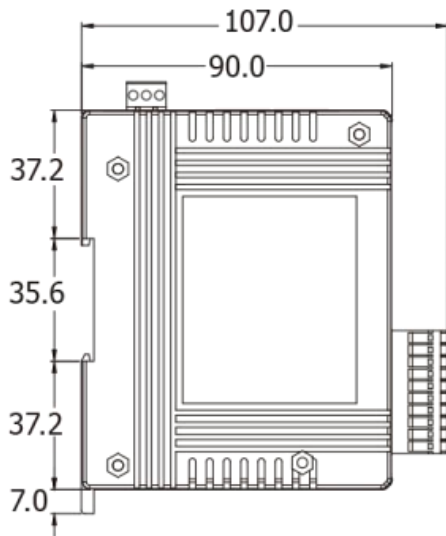


Right Side View

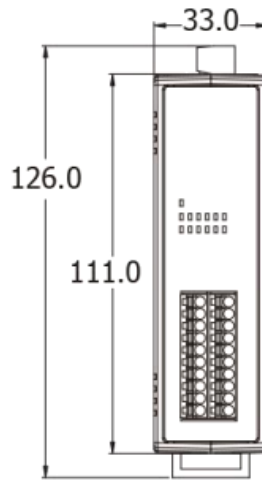


Front View

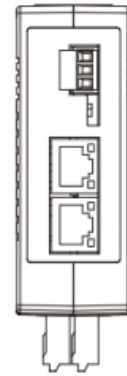

Top View

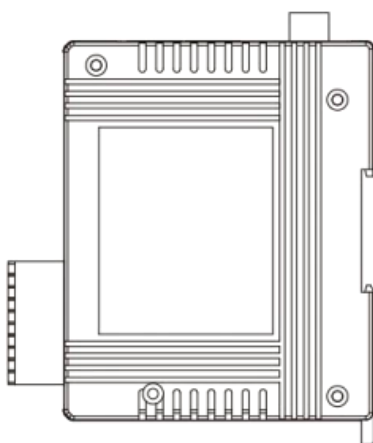

Left Side View

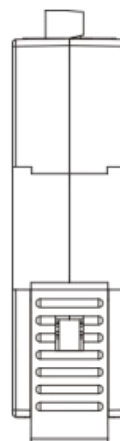


Rear View




Bottom View


➤ **ET-2261-16:**

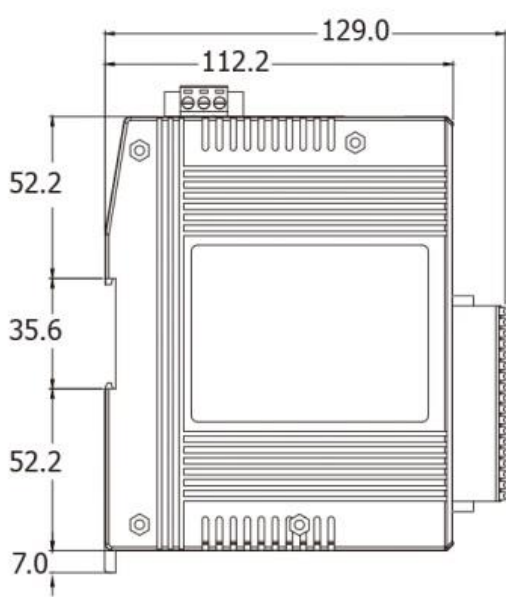


Right Side View

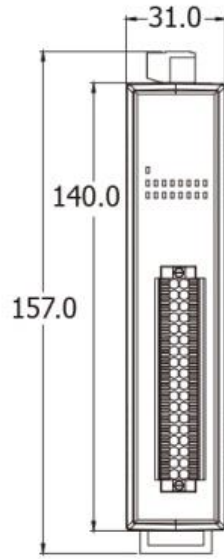


Front View




Top View

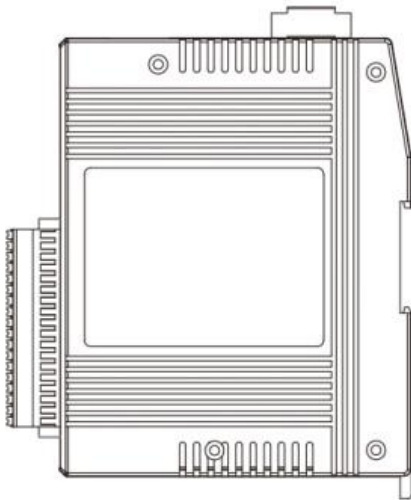

Left Side View




Rear View



Bottom View

➤ ET-2200CI 系列

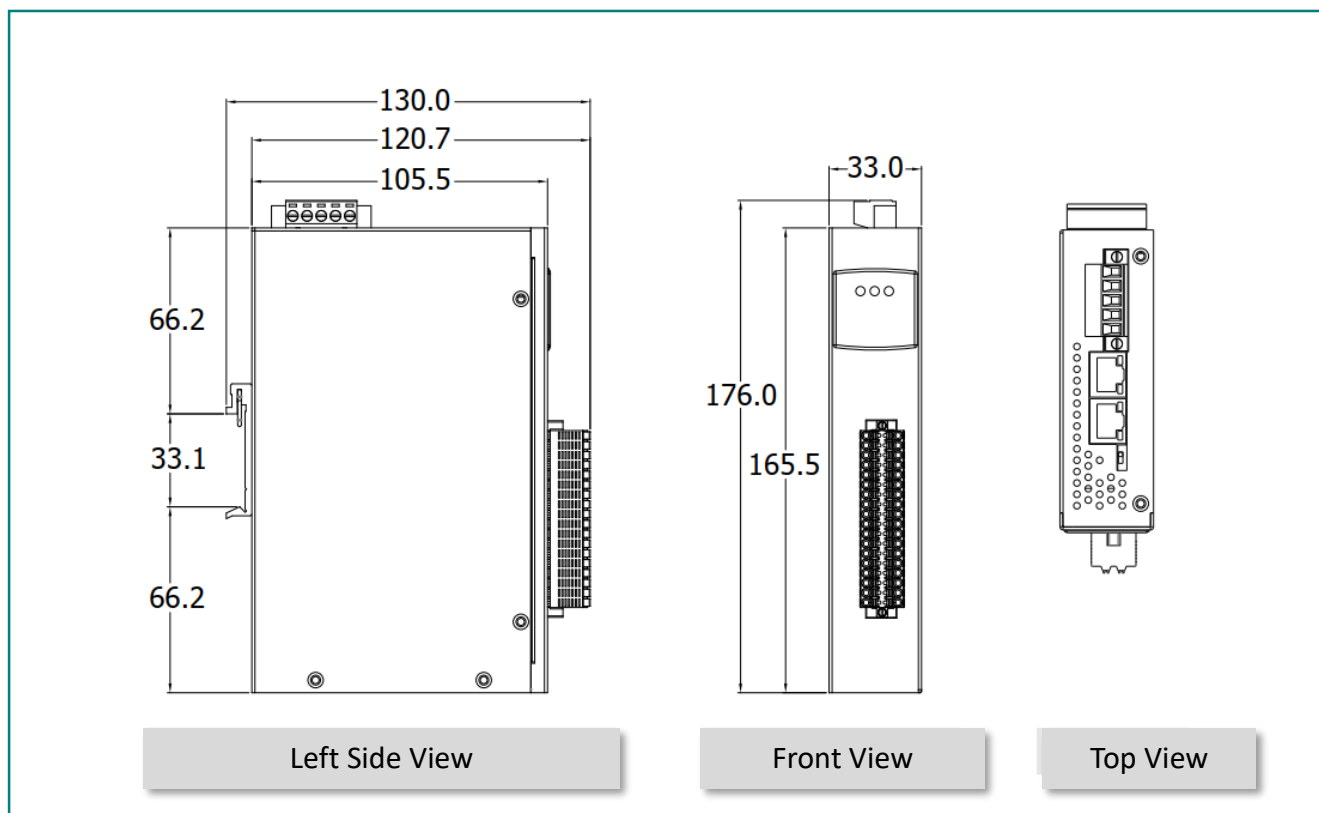

3. Getting Started

This chapter provides a basic overview of how to configure and operate your ET-2200 series module.

3.1 Configuring the Boot Mode


The ET-2200 series modules have two operating modes that can be selected by using the switch mechanism incorporated on the chassis.

 **Note that the module must be rebooted after changing the operating mode.**

➤ Init Mode


Init Mode should only be selected for troubleshooting.

1. Put the switch in "**Init**" position and then reboot the module to load factory settings.
2. Use eSearch Utility to reconfigure the module's network settings.
3. Put the switch back in "**Run**" position and then reboot the module to work in normal mode.

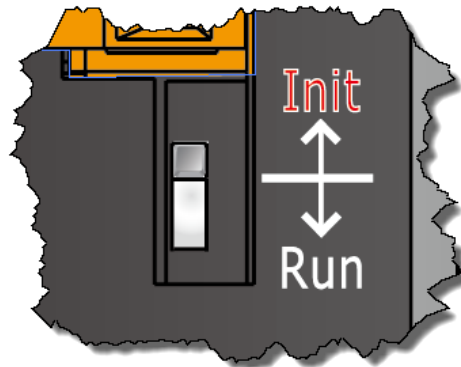

➤ Run Mode

Run Mode is the default operating mode and should be used in most cases.

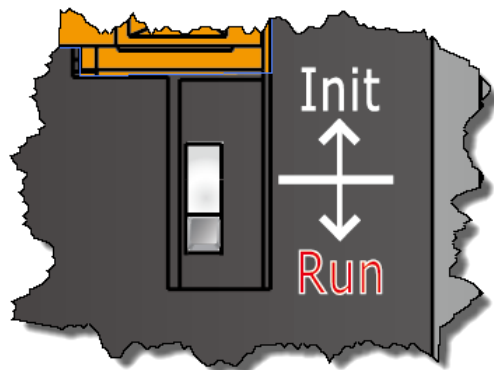


3.2 Connecting the Power and the Host PC

Step 1: Connect both the ET-2200 module and the Host PC to the same sub network or the same Ethernet Switch

Ensure that the network settings on the Host PC have been correctly configured and are functioning normally. Ensure that the Windows firewall or any Anti-Virus firewall is properly configured to allow incoming connections, or temporarily disable these functions, otherwise the **“Search Servers”** function in the eSearch Utility described in [Section 3.3 “Configuring the Network Settings”](#) the may not perform as expected. Contact the System Administrator for instructions of how to do this.

Step 2: Apply power to the ET-2200. The valid power voltage range depends on the ET-2200 series module.

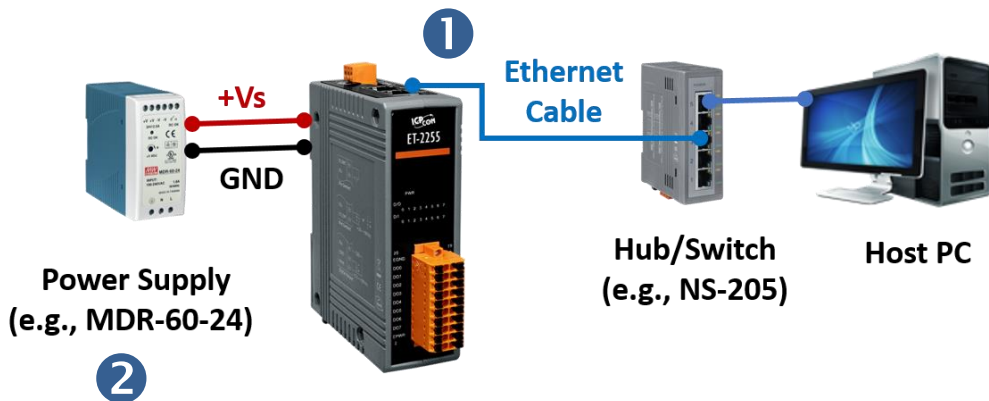


Step 3:
Verify that the **“PWR”** LED indicator on the ET-2200 module is flashing



3.3 Configuring the Network Settings

Step 1: Get the eSearch Utility


The eSearch Utility can be obtained from the ICP DAS web site at:

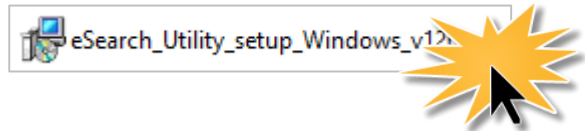


<https://www.icpdas.com/en/download/index.php?nation=US&kind1=&model=&kw=eSearch>

Step 2: Install the eSearch Utility

Follow the steps as suggested by the eSearch setup wizard to finish the installation.

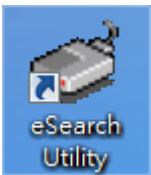


After the installation has been completed, a new short cut for the eSearch Utility will be displayed on your desktop.

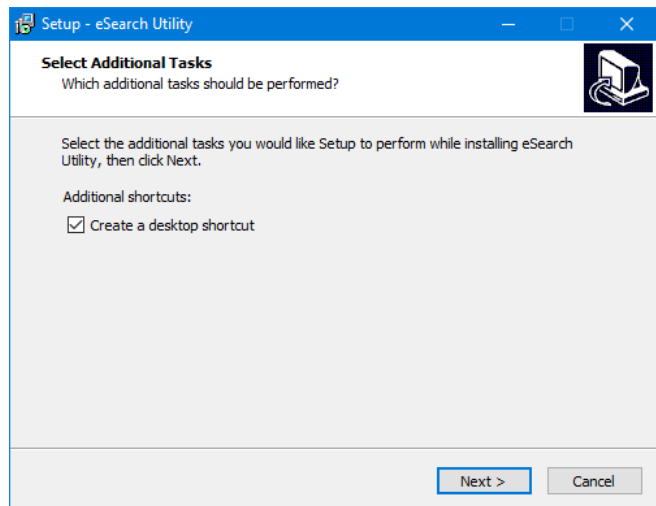

Double-click the icon to run eSearch Utility.


Step 3: Click the "Search Servers" button to search for the ET-2200 module

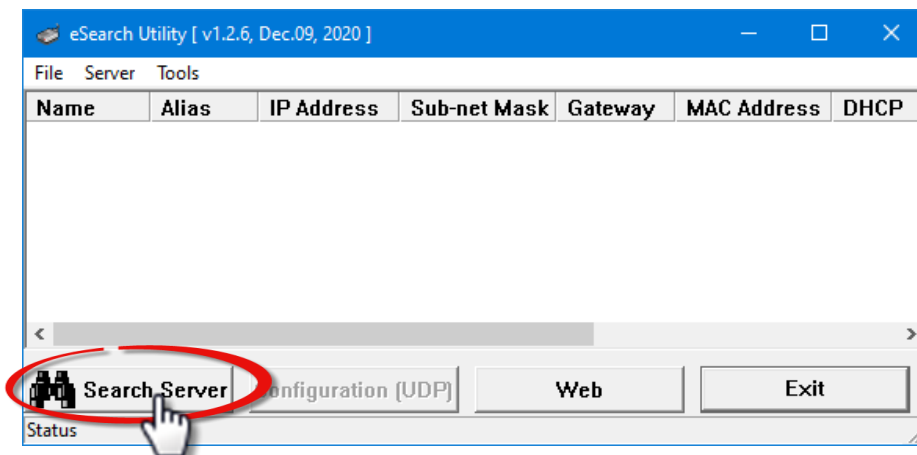

Step 4: Once the search process is complete, double-click the name of the ET-2200 module to open the “Configure Server (UDP)” dialog box


Factory Default Settings for the ET-2200 Series, as follows:

IP	192.168.255.1
Gateway	192.168.0.1
Mask	255.255.0.0

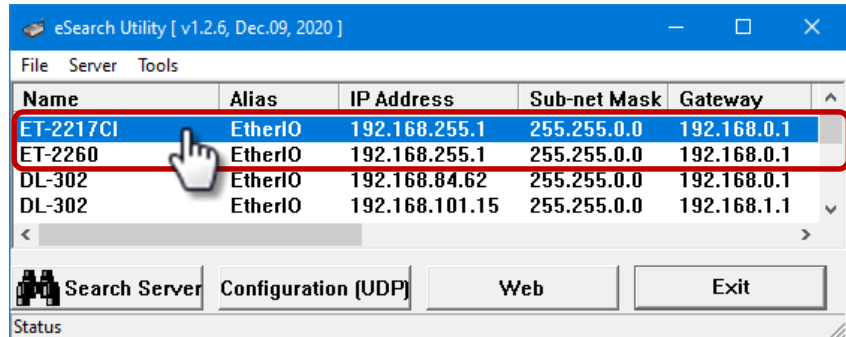


Step 5: Assign a new IP an address and then click the “OK” button.

Enter the relevant values for the **IP Address, Subnet Mask and Gateway**, etc., and then click the **“OK”** button. The new settings for the ET-2200 module will take effect within 2 seconds. Contact your Network Administrator If the configuration is unknown.

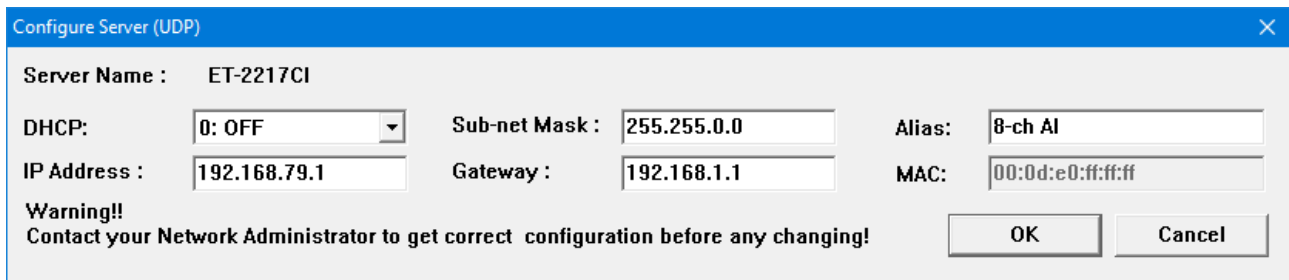


Step 6: Wait for 2 seconds and then click the “Search Servers” button again to ensure that the ET-2200 module is operating correctly using the new configuration

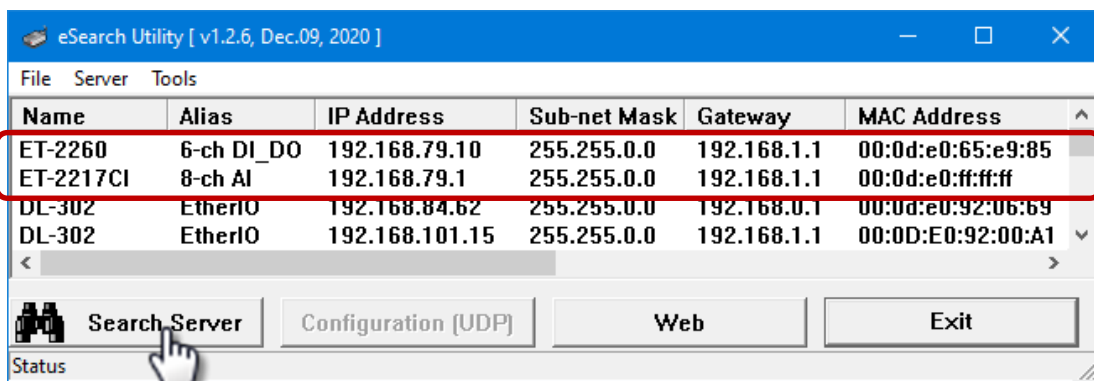


3.4 Modbus TCP Testing

Step 1: In the eSearch Utility, Select the “Modbus TCP Master” item from the “Tools” menu to open the Modbus TCP Master Utility.

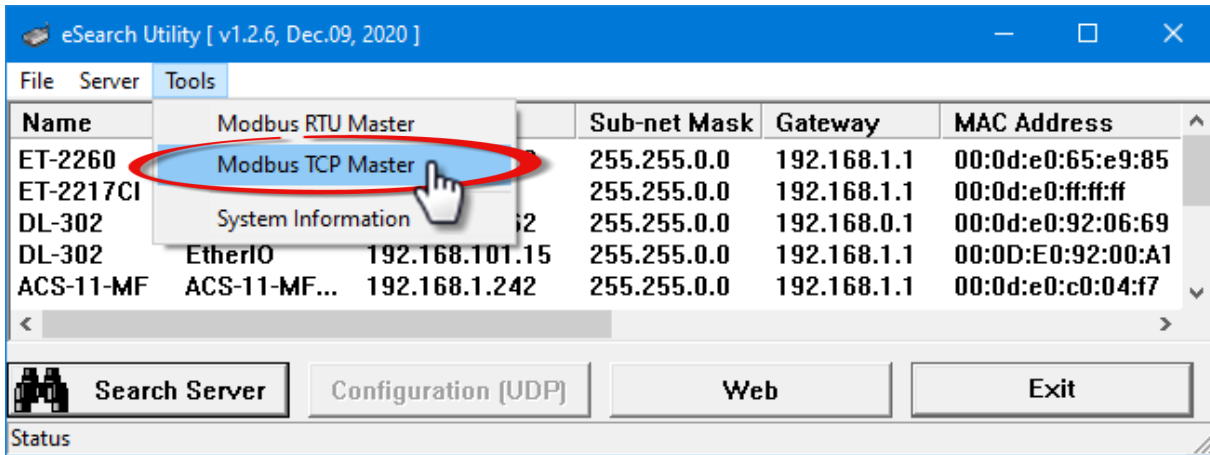

Step 2: Enter the IP address and TCP Port for the ET-2200 module in the “Modbus TCP” section, and then click the “Connect” button to connect to the ET-2200.

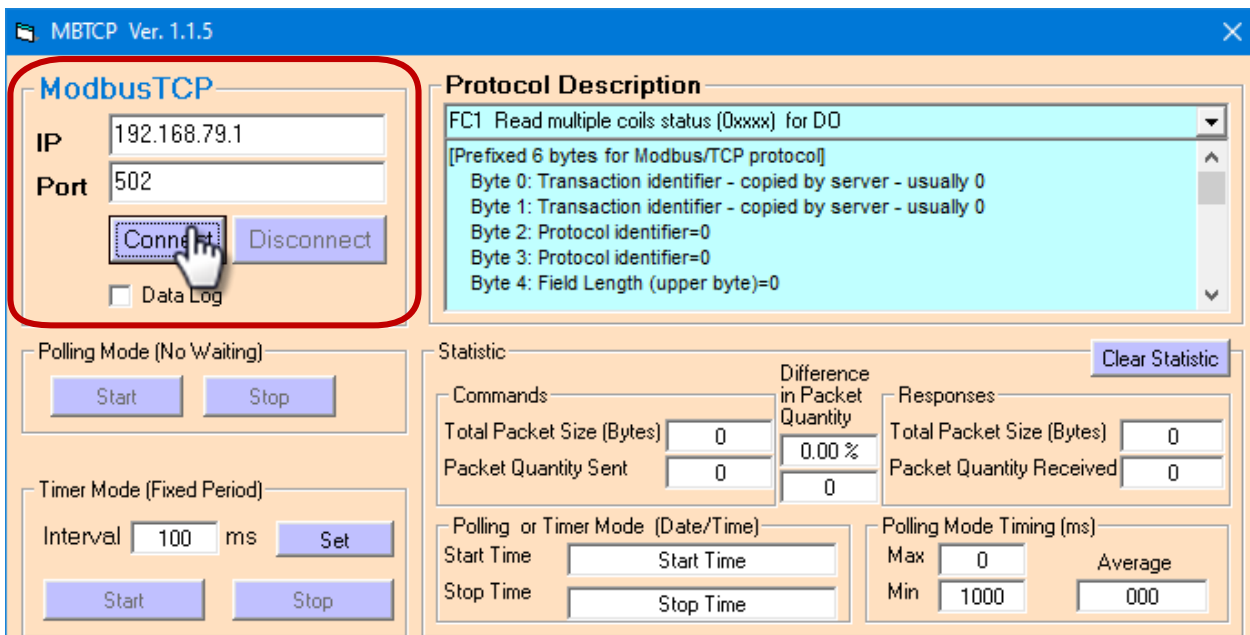

Step 3: Refer to the “Protocol Description” filed in the top right-hand section of the Modbus Utility windows. You can send a request command and confirm that the response is correct.

Example:

The Modbus NetID for the ET-2200 is **1** (refer to Section 4.3.1). Please send the command “1 2 0 0 6 1 3 1 3 0 1” and the response will be “1 2 0 0 5 1 3 2 **22 17**” that indicates the model is 2217.

The screenshot shows the MBTCP Ver. 1.1.5 interface. The 'ModbusTCP' section includes IP (192.168.79.1) and Port (502) fields. The 'Protocol Description' section is highlighted with a red box and shows 'FC1 Read multiple coils status (0xxxx) for DO'. Below this, the 'Statistic' section shows 'Total Packet Size (Bytes)' as 12 and 'Packet Quantity Sent' as 1. The 'Polling Mode' and 'Timer Mode' sections are also visible. At the bottom, a log shows a command '1 2 0 0 6 1 3 1 3 0 1' (labeled 1) and a response '01 02 00 00 00 06 --> 01 03 01 03 00 01' (labeled 1), and another response '01 02 00 00 00 05 --> 01 03 02 22 17' (labeled 2). A red box highlights the 'Send Command' button and the response log. Below the screenshot, a table explains the byte structure of the command and response.

Refer to the example in Section 6.2.3 and Section 6.2 Modbus Message Structure.

	Leading	Request
1. Command	01 02 00 00 00 06	01 03 01 03 00 01
	Leading	Response
2. Response	01 02 00 00 00 05	01 03 02 22 17

4. Web Configuration

All ET-2200 series module contain an advanced embedded web configuration system that provides I/O accessibility to the ET-2200 series module via a web browser.

4.1 Logging in to the Web Server

You can access the embedded ET-2200 series web server from any computer that has an Internet connection.

Step 1: Launch web browser



Open a standard web browser. For example, Mozilla Firefox, Google Chrome and Internet Explorer are reliable and popular internet browsers that can be used to configure ET-2200 series module.



Note that if you intend to use Internet Explorer, ensure that the cache function is disabled in order to avoid browser access errors.



Step 2: Enter the URL for the ET-2200 module in the address bar of the browser or click the “Web” button in the eSearch Utility

Ensure that you have correctly configured the network settings for the ET-2200 series module, or refer to Section 3.3 “Configuring the Network Settings”.

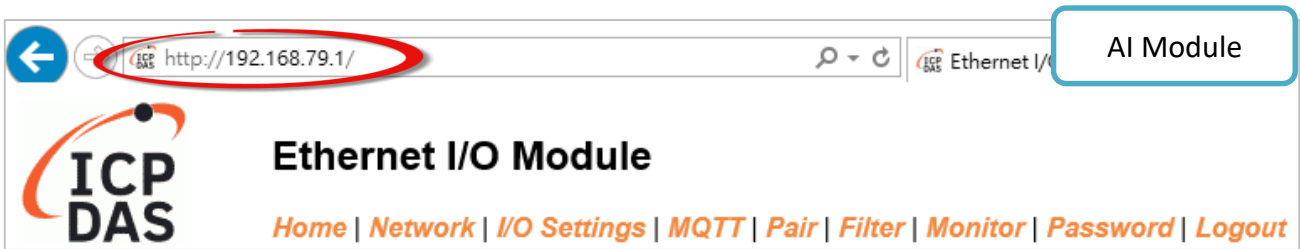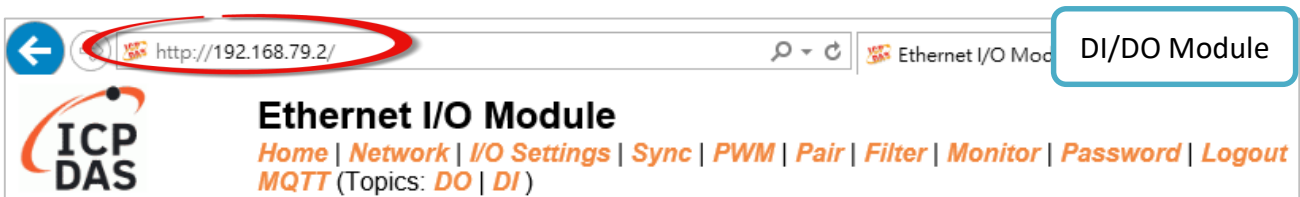

Step 3: Enter the password to log into the ET-2200 Web Server

Once the login screen is displayed, enter the password in the login password field (the default password is “Admin”), and then click the “Submit” button to enter the configuration web page.

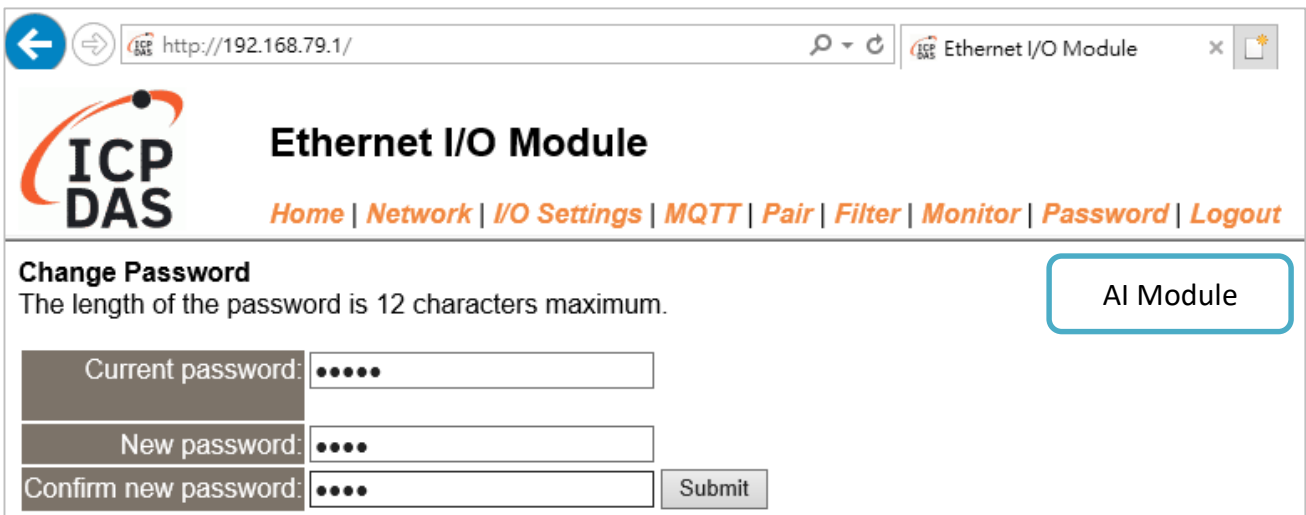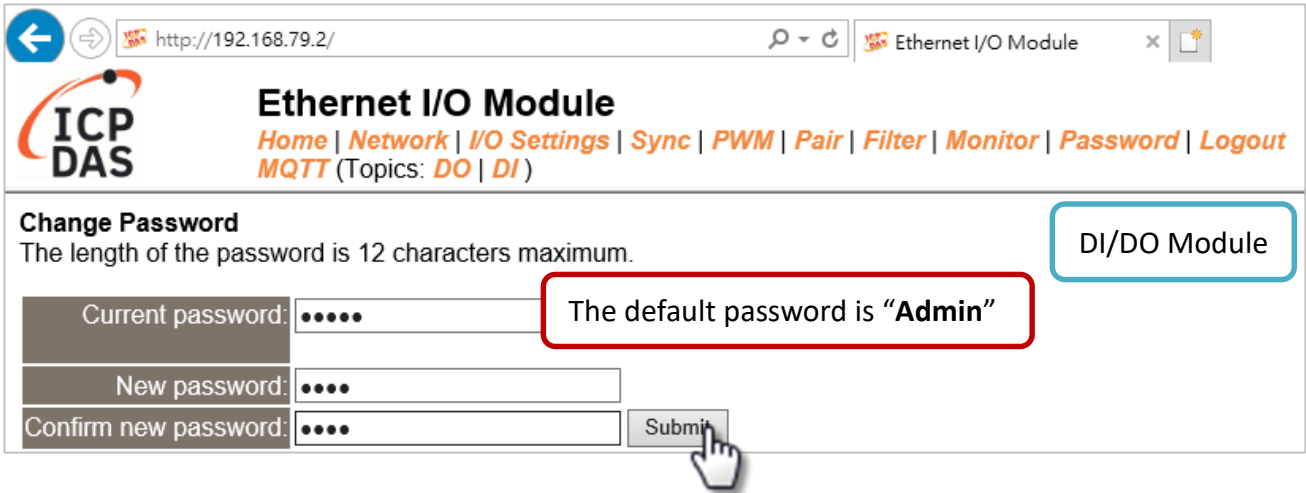

Refer to [Section 4.10 “Change Password”](#) if you want to change the password. After logging into the ET-2200 web server, the main page will be displayed. See [Section 4.2](#) for more information.


4.2 Home

Clicking the **Home** tab will display to the main page allowing you verify the ET-2200 series module hardware and software information and IO control, each of which will be described in more detail below.

4.2.1 Home – DI/DO

The first section provides basic information about the module including the Model Name, Firmware Version, IP Address, TCP Port Timeout, Alias Name, MAC Address, Initial Switch position, and the System Timeout.

Note: After updating the Firmware, the user can check the version information on this page.



Ethernet I/O Module

[Home](#) | [Network](#) | [I/O Settings](#) | [Sync](#) | [PWM](#) | [Pair](#) | [Filter](#) | [Monitor](#) | [Password](#) | [Logout](#)
More Topics: [DO](#) | [DI](#)

DI/DO Module


Model Name	ET-2260	Alias Name	EtherIO
Firmware Version	v2.0.1 [Aug.22 2019]	MAC Address	00-0D-E0-65-6F-D3
IP Address	192.168.79.2	Initial Switch	OFF
TCP Port Timeout (Socket Watchdog, Seconds)	180	System Timeout (Network Watchdog, Seconds)	0


The second section - Digital I/O provides information related to the current DIO status and DO control. **Note:** User can click on the DO image to change the output status.


Digital I/O (Modbus Address: DO=00000 to 00015, DI=10000 to 10015.)


DO7


DO6


DO5 

DO4 

DO3 

DO2 

DO1 

DO0 

DI Channel	Value (10000)	Counter (30016) / Frequency (30064)	High Latched (10032)	Low Latched (10064)
DI0:	●	-	-	-
DI1:	●	-	-	-
DI2:	●	-	-	-
DI3:	●	-	-	-
DI4:	●	-	-	-
DI5:	●	-	-	-
DI6:	●	-	-	-
DI7:	●	-	-	-

Note: Above Modbus addresses are all 0 based.

4.2.2 Home – AI

The first section provides basic information about the module including the Model Name, Firmware Version, IP Address, TCP Port Timeout, Alias Name, MAC Address, Initial Switch position, and the System Timeout.

ICP DAS Ethernet I/O Module

[Home](#) | [Network](#) | [I/O Settings](#) | [MQTT](#) | [Pair](#) | [Filter](#) | [Monitor](#) | [Password](#) | [Logout](#)

Model Name	ET-2217CI	Alias Name	EtherIO
Firmware Version	v2.0.2 [Jan.28, 2021]	MAC Address	00-0D-E0-FF-22-17
IP Address	192.168.79.1	Initial Switch	OFF
TCP Port Timeout (Socket Watchdog, Seconds)	180	System Timeout (Network Watchdog, Seconds)	0

The second section - Analog Input Readings, provides information related to the AI data range, values, and latched values. In addition, the RTC section can display the system time.

Analog Input Readings

Analog Input Channel	Range (40096)	Value (30000)	Low Latched (30544)	High Latched (30512)
AI0	05: +/-2.5 V	+0.0016 0015h	-0.0060 ff2h	+0.0017 0017h
AI1	06: +/-20 mA	+00.001 0003h	+00.000 0001h	+00.002 0004h
AI2	07: +4 mA to +20 mA	-9999.9 0000h	-9999.9 0000h	-9999.9 0000h
AI3	08: +/-10 V	+00.003 000ch	+00.002 0007h	+00.006 0015h
AI4	08: +/-10 V	+00.002 0007h	+00.001 0006h	+00.008 001bh
AI5	0A: +/-1 V	-0.0041 ff79h	-0.0042 ff75h	+0.0017 003ah
AI6	08: +/-10 V	+00.010 0021h	-00.020 ffbeh	+00.011 0025h
AI7	1A: 0 mA to +20 mA	+00.001 0006h	+00.000 0000h	+00.001 0006h

RTC


Date	2021-09-03	Time	14:04:43
------	------------	------	----------

Current Port Settings

Pair-Connection Settings	Port 1
Server Mode	Server
Remote Server IP	Disabled
Remote TCP Port	Disabled

4.3 Network

Note: The function is available for AI and DIO modules.

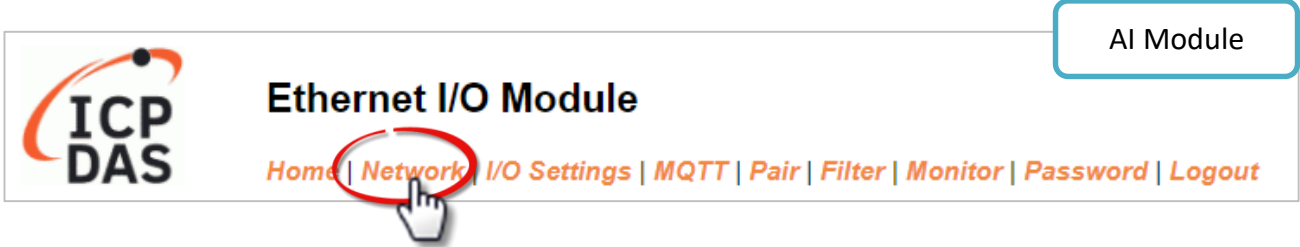

Clicking the **Network** tab will display the **IP Address Configuration** page allowing you verify the current settings and configure the IP Address parameters, configure the general parameters and restore the default settings for the ET-2200 series module, each of which will be described in more detail below.

4.3.1 IP Address Configuration

IP Address Configuration

IP Address	
Address Type	Static IP ▾
Static IP Address	192 . 168 . 79 . 1
Subnet Mask	255 . 255 . 0 . 0
Default Gateway	192 . 168 . 1 . 1
MAC Address	00-0D-E0-FF-FF-FF (Format: FF-FF-FF-FF-FF-FF)
Modbus TCP Slave	
Local Modbus TCP port	502 (Default= 502)
Local Modbus NetID	1 (Default= 1) Enable ▾ (Default= Enable)
Update Settings	

The table describes the parameters contained in the "IP Address Configuration" section.

Item	Description
Address Type	Static IP: If there is no DHCP server installed in your network, you can configure the network settings manually. Refer to Section "Manual Configuration" for more details.
	DHCP: Dynamic Host Configuration Protocol (DHCP) is a network application protocol that automatically assigns an IP address to each device. Refer to Section "Dynamic Configuration" for more details.
Static IP Address	Each ET-2200 module connected to the network must have its own unique IP address. This parameter is used to assign a specific IP address.
Subnet Mask	This parameter is used to assign the subnet mask for the ET-2200 module. The subnet mask indicates which portion of the IP address is used to identify the local network or subnet.
Default Gateway	This parameter is used to assign the IP Address of the Gateway to be used by the ET-2200 module. A Gateway (or router) is a device that is used to connect an individual network to one or more additional networks.
MAC Address	This parameter is used to set the User-defined MAC address, which must be in the format FF-FF-FF-FF-FF-FF.
Modbus TCP Slave	
Local Modbus TCP port	This parameter is used to set the local port to be used by the Modbus slave device. The default value is 502.
Local Modbus NetID	This parameter is used to set the Network ID to be used by the Modbus slave device. The default value is 1.
Update Settings	Click this button to save the revised settings to the ET-2200 module.

Dynamic Configuration

Dynamic configuration is very easy to perform. If a DHCP server is connected to your network, a network address can be dynamically configured by using the following procedure:

Step 1: Select “**DHCP**” from the Address Type drop-down menu.

Step 2: Click the “**Update Settings**” button to complete the configuration.

IP Address	
Address Type	DHCP 1
Static IP Address	192 . 168 . 79 . 2
Subnet Mask	255 . 255 . 0 . 0
Default Gateway	192 . 168 . 1 . 1
MAC Address	00-0D-E0-65-CF-D3 (Format: FF-FF-FF-FF-FF-FF)
Modbus TCP Slave	
Local Modbus TCP port	502 (Default= 502)
Local Modbus NetID	1 (Default= 1) Enable <input type="checkbox"/> (Default= Enable)
Update Settings 2	

Manual Configuration

When using manual configuration, the network settings should be assigned as follows:

Step 1: Select “**Static IP**” from the **Address Type** drop-down menu.

Step 2: Enter the relevant details in the respective **network settings** fields.

Step 3: Click the “**Update Settings**” button to complete the configuration.

IP Address	
Address Type	Static IP 1
Static IP Address	192 . 168 . 79 . 2 2
Subnet Mask	255 . 255 . 0 . 0
Default Gateway	192 . 168 . 1 . 1
MAC Address	00-0D-E0-65-CF-D3 (Format: FF-FF-FF-FF-FF-FF)
Modbus TCP Slave	
Local Modbus TCP port	502 (Default= 502)
Local Modbus NetID	1 (Default= 1) Enable <input type="checkbox"/> (Default= Enable)
Update Settings 3	

4.3.2 General Settings

General Settings

Ethernet Speed	<input type="text" value="Auto"/> (Auto=10/100 Mbps Auto-negotiation)
System Timeout (Network Watchdog)	<input type="text" value="0"/> (30 ~ 65535 s, Default= 0, Disable= 0) Action:Reboot
TCP Timeout	<input type="text" value="180"/> (5 ~ 65535 s, Default= 180, Disable= 0) Action:Cut-off
UDP Configuration	<input type="text" value="Enable"/> (Enable/Disable the UDP Configuration, Enable=default.)
Web Auto-logout	<input type="text" value="10"/> (1 ~ 65535 minutes, Default= 10, Disable= 0)
HTTP port	<input type="text" value="80"/> (Default= 80)
Alias Name	<input type="text" value="EtherIO"/> (Max. 18 chars)
<input type="button" value="Update Settings"/>	

The table describes the parameters contained in the "**General Settings**" section.

Item	Description
Ethernet Speed	This parameter is used to set the Ethernet speed. The default value is Auto (Auto = 10/100 Mbps Auto-negotiation).
System Timeout (Network Watchdog)	This parameter is used to configure the system timeout value. If there is no activity on the network for a certain period of time, the system will be rebooted based on the configured system timeout value.
TCP Timeout (Seconds)	This parameter is used to configure the TCP timeout value. If Modbus TCP communication is idle for a certain period of time, the system will cut off the connection.
UDP Configuration	This parameter is used to enable or disable UDP configuration function.
Web Auto-logout	This parameter is used to configure the automatic logout value. If there is no activity on the web server for a certain period of time, the current user account will automatically logged out.
Alias Name	This parameter is used to assign an alias name for each ET-2200 module to assist with easy identification.
HTTP Port	This parameter is used to assign specific a HTTP port of ET-2200 module. The ET-2200 needs to be restarted when the HTTP port is changed. You need manually type the new HTTP port in the address bar of the browser. The default is 80. For example, if the HTTP port is set to 81, then enter the "IP address: HTTP port" (10.0.8.123:81).
Update Settings	Click this button to save the revised settings to the ET-2200 module.

4.3.3 Restore Factory Defaults

Restore Factory Defaults

Restore all options to their factory default states:	Restore Defaults
Forced Reboot	Reboot

➤ **Restore all options to their factory default states**

To reset all parameters to their original factory default settings, use the following procedure:

- Step 1:** Click the “Restore Defaults” button to reset the configuration.
- Step 2:** Click the “OK” button in the message dialog box.
- Step 3:** Check whether the module has been reset to the original factory default settings for use with the eSearch Utility. Refer to [Section 3.3 “Configuring the Network Settings”](#).

Restore all options to their factory default states:	Restore Defaults 1
Forced Reboot	Reboot

192.168.79.1 says
Click OK to confirm the restore, or Cancel to retain existing settings.

2

Factory Defaults:

IP Address	192.168.255.1
Gateway Address	192.168.0.1
Subnet Mask	255.255.0.0

3

Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Addr ^
ET-2217CI	EtherIO	192.168.255.1	255.255.0.0	192.168.0.1	00:0d:e0:...
DL-302	EtherIO	192.168.84.62	255.255.0.0	192.168.0.1	00:0d:e0:...

Buttons: Search Server, Configuration [UDP], Web, Exit

➤ **Forced Reboot**

The **Forced Reboot** function can be used to remotely force the ET-2200 module to reboot. After that, enter the password to log into the main page.

Restore Factory Defaults

Restore all options to their factory default states:

Forced Reboot

Ethernet I/O Module
[Home](#) | [Network](#) | [I/O Settings](#) | [Sync](#) | [PWM](#) | [Pair](#) | [Filter](#) | [Monitor](#) | [Password](#) | [Logout](#)
 MQTT (Topics: [DO](#) | [DI](#))

The system is logged out. To enter the web configuration, please type password in the following field. DI/DO Module

Login password:

Google: Menu / Settings / Show advanced settings / Privacy / Content settings / Javascript / Allow all sites to run JavaScript (recommended).
 Chrome: Menu / Settings / Show advanced settings / Privacy / Content settings / Javascript / Allow all sites to run JavaScript (recommended).
 Microsoft IE: Menu / Tools / Internet Options / Security / Internet / Custom level... / Scripting / Enable.
 Firefox: about:config / I'll be careful, I promise! / Preference Name / javascript.enabled / True.

When using IE, please disable its cache as follows.
 Menu items: Tools / Internet Options... / General / Temporary Internet Files / Settings... / Every visit to the page

Ethernet I/O Module
[Home](#) | [Network](#) | [I/O Settings](#) | [MQTT](#) | [Pair](#) | [Filter](#) | [Monitor](#) | [Password](#) | [Logout](#)

The system is logged out. To enter the web configuration, please type password in the following field. AI Module

Login password:

Google: Menu / Settings / Show advanced settings / Privacy / Content settings / Javascript / Allow all sites to run JavaScript (recommended).
 Chrome: Menu / Settings / Show advanced settings / Privacy / Content settings / Javascript / Allow all sites to run JavaScript (recommended).
 Microsoft IE: Menu / Tools / Internet Options / Security / Internet / Custom level... / Scripting / Enable.
 Firefox: about:config / I'll be careful, I promise! / Preference Name / javascript.enabled / True.

When using IE, please disable its cache as follows.
 Menu items: Tools / Internet Options... / General / Temporary Internet Files / Settings... / Every visit to the page

4.3.4 Firmware Update


Firmware Update

If the remote firmware update is failed, then the traditional firmware update (on-site) is required to make the module working again.

- Step 1: Refer to firmware update manual first.
- Step 2: Run eSearch Utility to prepare and wait for update.
- Step 3: Click the **[Update]** button to **reboot** the module and start update.
- Step 4: Configure the module again.


Update

Firmware update requires initialization and local network operations. Traditional firmware update requires adjusting the Init/Run Switch and reboots the module manually for the initialization of firmware update, while new firmware allows user to initialize the module via web interface without adjusting the hardware switch. Initialization via web is useful when module is installed in remote site and can be accessed by a remote PC via TeamViewer.

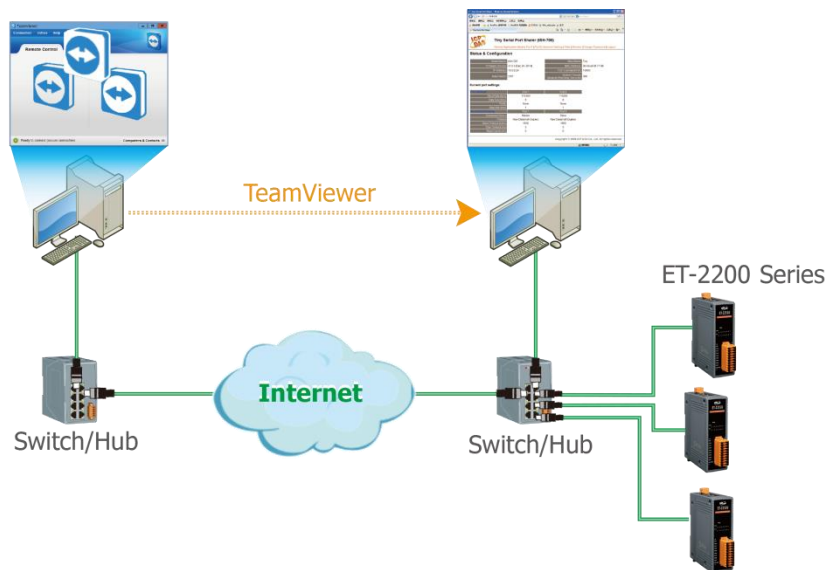

Note: If the remote firmware update is failed, then the traditional firmware update (Local) is required to make the module working again.

For detailed information about how to remote update the Firmware for the ET-2200 module, refer to the **ET-2200 Firmware Update Manual (EN)**. The download address is shown below:

 <https://www.icpdas.com/en/download/show.php?num=2626>

4.4 I/O Settings

The **I/O Settings** page allows you to configure the Digital Input, Digital Output, and Analog Input parameters for the ET-2200 series module.

Chapter	DIO	AIO
4.4.1 DO Control	✓	-
4.4.2 DI/DO Configuration	✓	-
4.4.3 Analog Input Channel	-	✓
4.4.4 Analog Input Calibration	-	✓
4.4.5 RTC	-	✓
4.4.6 Data Logger	-	✓

4.4.1 DO Control



DO Control

Digital Output	Modbus Address	Setting
Value	00007 - 00000	0x0 Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
<input type="button" value="Update Settings"/>		

The table describes the parameters contained in the "DO Control" section.

Item	Description
Set DO value	This parameter is used to manually assign a specific a value for the DO.
Update Settings	Click this button to save the revised settings to the ET-2200 module.

4.4.2 DI/DO Configuration

DI/DO Configuration:

Digital Output	Modbus Address	Setting
Host/Slave Watchdog Timeout	40257	<input type="text" value="0"/> (10 ~ 65535 Seconds, Default= 0, Disable= 0) Outputs DO with safe-value or <i>PWM</i> when host/slave timeout.
Enable Safe Value (Enable Watchdog)	00339 - 00332	<input type="text" value="0x0"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Safe Value	00274 - 00267	<input type="text" value="0x0"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Power-On Value	00242 - 00235	<input type="text" value="0x0"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Digital Input	Modbus Address	Setting
Enable Latched DI	00150	<input type="text" value="0"/> (Disable All= 0, Enable All= 1)
Clear Latched Status (High)	00032	<input type="text" value="0"/> (No Operation= 0, Clear All= 1)
Clear Latched Status (Low)	00033	<input type="text" value="0"/> (No Operation= 0, Clear All= 1)
DI Filter Level	-	<input type="text" value="0"/> (1 ~ 6500 ms, Default= 0, Disable= 0)
Digital Counter	Modbus Address	Setting
Enable Digital Counter	00158 - 00151	<input type="text" value="0x0"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Clear Digital Counter	00041 - 00034	<input type="text" value="0x0"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Preset Counter Value	40065 - 40050	Ch 07: <input type="text" value="0"/> Ch 06: <input type="text" value="0"/> Ch 05: <input type="text" value="0"/> Ch 04: <input type="text" value="0"/> Ch 03: <input type="text" value="0"/> Ch 02: <input type="text" value="0"/> Ch 01: <input type="text" value="0"/> Ch 00: <input type="text" value="0"/>
Frequency Measurement (DI)	Modbus Address	Setting
Enable Frequency Measurement	00197 - 00190	<input type="text" value="0x0"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Scan Mode	40150	Single pulse ▾ 1000 ms: 1 Hz ~ 3 kHz (+/- 1 Hz error). 100 ms: 100 Hz to 3 kHz (+/- 10 Hz error). Single-pulse: 0.01 Hz ~ 1 Hz (+/- 0.01 Hz error), for stable signal only. Note: ET-2254P supports counter/frequency up-to 2.5 kHz.
Moving Average	40200	<input type="text" value="1"/> ▾
Universal DIO	Modbus Address	Setting
Force DI/DO Mode	00299 00307 - 00300	Dynamic ▾ Static: By configuration. Dynamic: Depends on DO requests. <input type="text" value="0xFFFF"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) (0=DO, 1=DI; for ET-2254 Only)

The table describes the parameters contained in the "DI/DO Configuration" section.


Item	Description
Digital Output	
Host/Slave Watchdog Timeout	This parameter is used to configure the Host Watchdog timeout value. If there is no Modbus TCP communication activity for the specified period (the timeout), then the Host Watchdog will activate an alarm.
Enable Safe Value (Enable Watchdog)	This parameter is used to enable the watchdog on each DO channels.

Item	Description
Safe Value	This parameter is used to define the DO safe value for the ET-2200 module. If the Host Watchdog alarm is activated, the DO will be set to the user-defined safe value.
Power-On Value	This parameter is used to define the DO Power-on value. On boot up, the DO is set to the user-defined Power-on value.
Digital Input	
Enable Latched DI	This parameter is used to enable the latch function on all DI channels. The status of the DI will be recorded if it has been flagged as either high or low. 0 = Disable All; 1 = Enable All
Clear Latched Status (High)	This parameter is used to clear the status of all high latched D/I. 0 = No Operation; 1 = Clear All
Clear Latched Status (Low)	This parameter is used to clear the status of all low latched D/I. 0 = No Operation; 1 = Clear All
DI Filter Level	The DI filter is a function that eliminates high-frequency noise from inputs. Settings range value: 1 ~ 6500 (ms); 0 = Disable (Default). Refer to Appendix A.4 "What is Digital-Input Filter (DI Filter)" for more details.
Digital Counter	
Enable Digital Counter	This parameter is used to enable the digital counter on each DI channels.
Clear Digital Counter	This parameter is used to clear the values of each DI counters.
Preset Counter Value	This parameter is used to set the default value for each DI counters.
Frequency Measurement (DI)	
Enable Frequency Measurement	This parameter is used to enable the frequency measurement function on each DI channels.

Item	Description
Scan Mode	<p>This parameter is used to define the scan mode for the frequency measurement.</p> <p>1000 ms: This mode provides a normal update rate and normal accuracy. The acceptable frequency range for the input signal is 1 Hz to 3 kHz (± 1 Hz error). This mode can be used when the pulse width (signal source) contains small errors, since the measurement is based on the pulse count.</p> <p>100 ms: This mode provides fast update rate, but the accuracy is low. The acceptable frequency range for the input signal is 100 Hz to 3 kHz (± 10 Hz error). This mode can be used when the pulse width (signal source) contains small errors, since the measurement is based on the pulse count.</p> <p>Single-pulse: This mode provides the highest accuracy but can only be used for stable signal. The data update rate depends on the signal frequency and the acceptable signal frequency range for the input signal is 0.01 Hz to 3.5 kHz (± 0.01 Hz error). This mode can only be used when the pulse width (signal source) is stable, since the measurement is based on the width of a single pulse.</p>
Moving Average	<p>1 ==> No Average is used 2 ==> Uses the average of 2 continuous sample values 4 ==> Uses the average of 4 continuous sample values 8 ==> Uses the average of 8 continuous sample values</p>
Universal DIO	
Force DI/DO Mode For ET-2254(P) only	<p>Dynamic: Dynamic I/O type based on DO requests.</p> <p>Static: Static I/O type by configuration (web or Modbus). <input type="text" value="0xf100"/> Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)</p> <p>This parameter is used to set the Universal DIO channels to DI or DO Port. 1 ==> DI; 0 ==> DO</p>
Update Settings	Click this button to save the revised settings to the ET-2200 module.

4.4.3 Analog Input Channel

Note: The content in Section 4.4.3 to 4.4.6 is available for AI modules.

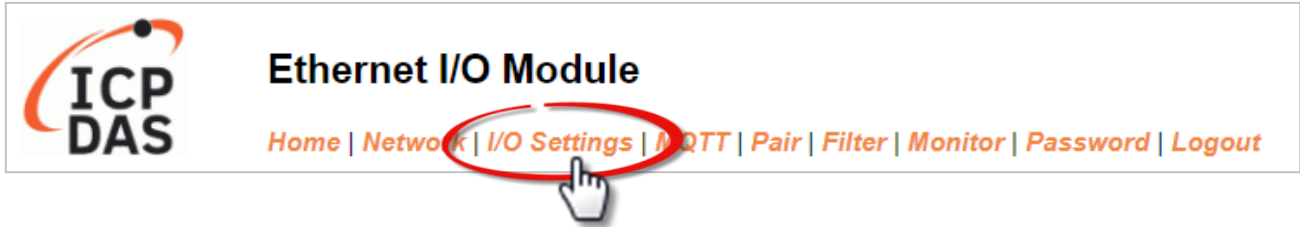

Analog Input Configuration

Analog Input	Modbus Address	Setting
Data Format	00268	Hex
Sampling Rates	00270	10 Hz
Analog Input Channel	Modbus Address	Range Setting
AI0	40096	08 +/-10V
AI1	40097	08 +/-10V
AI2	40098	08 +/-10V
AI3	40099	08 +/-10V
AI4	40100	08 +/-10V
AI5	40101	08 +/-10V
AI6	40102	08 +/-10V
AI7	40103	08 +/-10V

05 +/-2.5V
 06 +/-20mA
 07 +4mA to +20mA
 08 +/-10V
 09 +/-5V
 0A +/-1V
 0D +/-20mA
 1A 0mA to +20mA

The table describes the parameters contained in the "Analog Input Configuration" section.

Item	Description
Analog Input	
Data Format	Set the data format, e.g., Hex or Engineering.
Sampling Rates	Set the sampling rate, e.g., 10 Hz or 200 Hz.
Analog Input Channel	
AI0 ~ AI7	Set the data range for each channel.
Update Settings	Click this button to save the revised settings to the ET-2200 module.

4.4.4 Analog Input Calibration

Analog Input Calibration

Analog Input Channel	Range	Zero Calibration Voltage/Current	Span Calibration Voltage/Current
AI0	05: +/-2.5 V	0 V	+2.5 V
AI1	06: +/-20 mA	0 mA	+20 mA
AI2	07: +4 mA to +20 mA	0 mA	+20 mA
AI3	08: +/-10 V	0 V	+10 V
AI4	09: +/-5 V	0 V	+5 V
AI5	0A: +/-1 V	0 V	+1 V
AI6	0D: +/-20 mA	0 mA	+20 mA
AI7	1A: 0 mA to +20 mA	0 mA	+20 mA
AI Channel	AI0 ▾	Type	Zero ▾
Calibrate			
Reload Factory Calibration Parameters		Reload	

The table describes the parameters contained in the "Analog Input Calibration" section.


Item	Description
Analog Input Channel	
AI0 ~ AI7	Display the data range and the Zero or Span calibration voltage/current.
AI Channel	Select an AI channel to perform calibration.
Type	Select the type of calibration, e.g., Zero or Span.
Calibrate	Click the Calibrate button to perform calibration

➤ Reload Factory Calibration Parameters

Follow the steps to load the factory default settings.

Step 1: Click the "Reload" button to load the calibration parameters.

Step 2: Click the "OK" button in the dialog box to complete the setting.

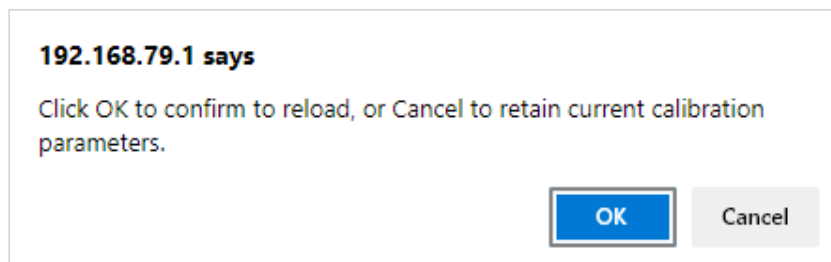

4.4.5 RTC

The function is used to set the system time and click the “Update Settings” button to save the revised setting to the ET-2200 module.

RTC

Year	<input type="text" value="2021"/> (2000 to 2159)
Month	<input type="text" value="9"/> (1 to 12)
Date	<input type="text" value="3"/> (1 to 31)
Hour	<input type="text" value="16"/> (0 to 23)
Minute	<input type="text" value="46"/> (0 to 59)
Second	<input type="text" value="10"/> (0 to 59)

4.4.6 Data Logger

Data Logger

Status	Stopped	
Change Logging	<input type="text" value="Stop"/> ▼	
Overwrite on Full	<input type="text" value="No"/> ▼	
Sampling Interval - Second	<input type="text" value="1"/> (0 to 65535)	
Sampling Interval - Millisecond	<input type="text" value="0"/> (0 to 1000, in 5 ms step)	
Period Start - Year	<input type="text" value="2014"/> (2000 to 2159)	
Period Start - Month	<input type="text" value="6"/> (1 to 12)	
Period Start - Date	<input type="text" value="1"/> (1 to 31)	
Period Start - Hour	<input type="text" value="0"/> (0 to 23)	
Period Start - Minute	<input type="text" value="0"/> (0 to 59)	
Period Start - Second	<input type="text" value="0"/> (0 to 59)	
Period End - Year	<input type="text" value="2014"/> (2000 to 2159)	
Period End - Month	<input type="text" value="6"/> (1 to 12)	
Period End - Date	<input type="text" value="2"/> (1 to 31)	
Period End - Hour	<input type="text" value="0"/> (0 to 23)	
Period End - Minute	<input type="text" value="0"/> (0 to 59)	
Period End - Second	<input type="text" value="0"/> (0 to 59)	

Reset data logger to empty

The table describes the parameters contained in the "**Data Logger**" section.

Item	Description
Status	Display the current status of data logging.
Change Logging	Set the status of data logging. It can be set to Stop, Run, Period, Pause, and Continue.
Overwrite on Full	Whether to overwrite data when it is full. It can be set to Yes or No.
Sampling Interval - Second	The time interval for logging data. (Range: 0-65535, Unit: second)
Sampling Interval - Millisecond	The time interval for logging data. (Range: 0-1000, in 5 ms step)
Period Start- Year, Month, Date, Hour, Minute, Second	The start time for logging data. (Year/Month/Date/Hou/Minute/ Second).
Period End- Year, Month, Date, Hour, Minute, Second	The end time for logging data. (Year/Month/Date/Hou/Minute/ Second).

➤ **Reset data logger to empty**

Click the "Reset Data Logger" button to remove data.

4.5 Sync

Note: The function is available for DIO modules.



The **DIO Synchronization** section on the **Sync** page allows you to configure the Synchronous DIO, Min-switching time of DO and Auto-off Time of DO for the ET-2200 series module, each of which will be described in more detail below.

4.5.1 DIO Synchronization

DIO Synchronization

Synchronous DIO (Local Mirror)	Modbus Address	Setting																
Level Sync (DO=DI)	00403 - 00396	Dx0: <input type="checkbox"/> CH7-CH4: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> CH3-CH0: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Set the DO state to the same as the DI state.																
Rising Active (DO=ON)	00419 - 00412	Dx0: <input type="checkbox"/> CH7-CH4: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> CH3-CH0: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Turn ON DO when DI is changed from OFF to ON.																
Falling Active (DO=ON)	00435 - 00428	Dx0: <input type="checkbox"/> CH7-CH4: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> CH3-CH0: <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> Turn ON DO when DI is changed from ON to OFF.																
Additional Controls	Modbus Address	Setting																
Min-Switching Time of DO (0 to 65535 Seconds)	40283 - 40268	<table border="1"> <tr> <td>DO 15:0</td><td>DO 14:0</td><td>DO 13:0</td><td>DO 12:0</td></tr> <tr> <td>DO 11:0</td><td>DO 10:0</td><td>DO 09:0</td><td>DO 08:0</td></tr> <tr> <td>DO 07:0</td><td>DO 06:0</td><td>DO 05:0</td><td>DO 04:0</td></tr> <tr> <td>DO 03:0</td><td>DO 02:0</td><td>DO 01:0</td><td>DO 00:0</td></tr> </table>	DO 15:0	DO 14:0	DO 13:0	DO 12:0	DO 11:0	DO 10:0	DO 09:0	DO 08:0	DO 07:0	DO 06:0	DO 05:0	DO 04:0	DO 03:0	DO 02:0	DO 01:0	DO 00:0
DO 15:0	DO 14:0	DO 13:0	DO 12:0															
DO 11:0	DO 10:0	DO 09:0	DO 08:0															
DO 07:0	DO 06:0	DO 05:0	DO 04:0															
DO 03:0	DO 02:0	DO 01:0	DO 00:0															
Auto-off Time of DO (0 to 65535 Seconds)	40299 - 40284	<table border="1"> <tr> <td>DO 15:0</td><td>DO 14:0</td><td>DO 13:0</td><td>DO 12:0</td></tr> <tr> <td>DO 11:0</td><td>DO 10:0</td><td>DO 09:0</td><td>DO 08:0</td></tr> <tr> <td>DO 07:0</td><td>DO 06:0</td><td>DO 05:0</td><td>DO 04:0</td></tr> <tr> <td>DO 03:0</td><td>DO 02:0</td><td>DO 01:0</td><td>DO 00:0</td></tr> </table>	DO 15:0	DO 14:0	DO 13:0	DO 12:0	DO 11:0	DO 10:0	DO 09:0	DO 08:0	DO 07:0	DO 06:0	DO 05:0	DO 04:0	DO 03:0	DO 02:0	DO 01:0	DO 00:0
DO 15:0	DO 14:0	DO 13:0	DO 12:0															
DO 11:0	DO 10:0	DO 09:0	DO 08:0															
DO 07:0	DO 06:0	DO 05:0	DO 04:0															
DO 03:0	DO 02:0	DO 01:0	DO 00:0															
<input type="button" value="Update Settings"/>																		

The table describes the parameters contained in the "DIO Synchronization" section.

Item	Description
Synchronous DIO (Local Mirror)	
<p>Note: ET-2254 supports these functions when low 8-bit are DI0 to DI7 and high 8-bit are DO8 to DO15.</p>	
Level Sync (DO = DI)	This parameter is used to enable the synchronization operation in Digital Input/Output function.
Rising Active (DO = ON)	This parameter is used to enable rising active in Digital Input function. When the specified DI state changed from OFF to ON, the corresponding DO will be set to ON.
Falling Active (DO = ON)	This parameter is used to enable falling active in Digital Input function. When the specified DI state changed from ON to OFF, the corresponding DO will be set to ON.
Additional Controls	
Min-Switch Time of DO (0 to 65535 Seconds)	This parameter is used to set the minimum switching time between the ON and OFF state of the Digital Output. This protects some machines from being damaged by too many ON/OFF switches in a short time.
Auto-off Time of DO (0 to 65535 Seconds)	This parameter is used to set the auto-off time of the Digital Output. If the Digital Output is ON, the Digital Output will be auto-off based on the configured time value.
Update Settings	Click this button to save the revised settings of DIO configuration to the ET-2200 module.

4.6 PWM

Note: The function is available for DIO modules.



The **PWM Configuration** section on the **PWM** page allows you to enable and configure the PWM parameters for the ET-2200 series module, including the PWM Alarm and duty cycle, etc., each of which will be described in more detail below.

Note: Because of the characteristics of the relay functions, it is recommended that the PWM on ET-2260/2261/2268 module (i.e., modules with relay functions) is not used for extended periods of time.

4.6.1 PWM Configuration


PWM Configuration:

PWM Functions	Modbus Address	Setting
Enable PWM	00107 - 00100	0x0 Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>)
Enable PWM Alarm	00371 - 00364	0x0 Ch 7~4(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) Ch 3~0(<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>) (Activates the PWM outputs when Host/Slave Watchdog Timeout)
Duty Cycle	40115 - 40100	DO 07: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 06: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 05: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 04: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 03: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 02: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 01: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) DO 00: (<input type="text" value="1000"/> , <input type="text" value="1000"/>) (High, Low: 10 ~ 65535 ms, 0= Disable)
		<input type="button" value="Update Settings"/>

The table describes the parameters contained in the "PWM Configuration" section.

Item	Description	Defaults
Enable PWM	This parameter is used to enable the PWM output function.	0
Enable PWM Alarm	This parameter is used to enable the PWM output alarm function when Host/Slave watchdog timeout.	0
Duty Cycle	This parameter is used to set the duty cycle for the DO channels. Two values are required for each DO channel. The first value is the high pulse width, while the second is the low pulse width. The duty cycle is in 1 ms units, and the resolution is approximately 5 ms. (10 to 65535 ms). A value of 0 will disable the duty cycle functions for that channel.	1000 (ms)
Update Settings	Click this button to save the revised settings to the ET-2200 module.	

4.7 MQTT (AI)

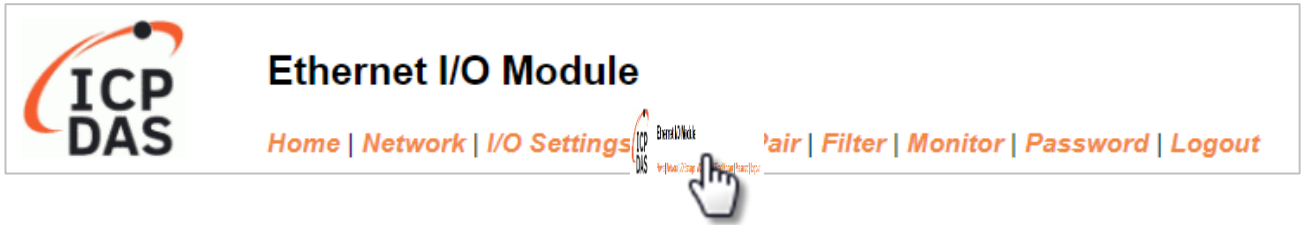

➤ Connectivity Settings

Refer to [Section 4.13.1 Connectivity Settings](#) for more details about the setting.

➤ Publication Settings

Refer to [Section 4.13.2 Publication Settings](#) for more details about the setting.

➤ Analog Inputs

Refer to [Section 4.16 MQTT-AI](#) for more details about the setting.

➤ Restore Factory Defaults


Refer to [Section 4.13.3 Restore Factory Defaults](#) for more details about the setting.

4.8 Pair Connection

Note: The function is available for AIO and DIO modules.

The **I/O Pair Connection Settings** section on the **Pair** page allows you to enable and configure the DI-to-DO pair connections for the ET-2200 series module via the Modbus TCP (Ethernet) protocol.

4.8.1 I/O Pair-Connection Settings

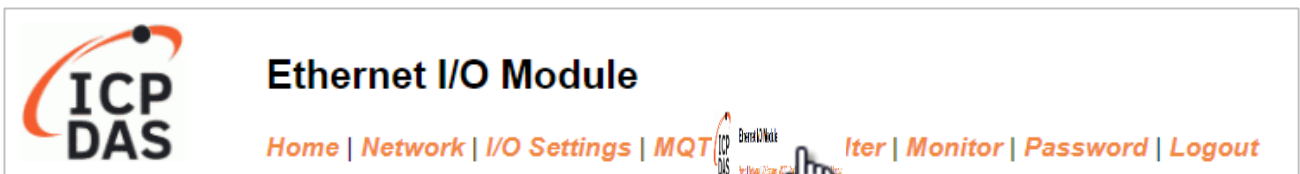

Pair-Connection Settings:

AI 模組

PULL Mode: (Remote AI -> Local AO)

PUSH Mode: (Local AI -> Remote AO)

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP	Remote Port	Net ID	Scan Time	AI Count	AI Addr	AO Addr	TCP/UDP	Update
01	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
02	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
03	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
04	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
05	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit

Pair-Connection Settings:

DI/DO 模組

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |


#	Mode	Remote IP	Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
02	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
03	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
04	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit
05	Disable ▾	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP ▾	Submit

The table describes the parameters contained in the "**I/O Pair-Connection Settings**" section.

Item	Description	Defaults
Mode	This parameter is used to define the Server mode for the ET-2200 series module. Disable: Server mode (Slave). PULL: Pull remote AI (DI) to local AO (DO) in the Client mode (Master). PUSH: Push local AI (DI) to remote AO (DO) in the Client mode (Master).	Disable
Remote IP	The IP address of the remote device to access.	0
Remote Port	The TCP port number of the remote device to access. Range: 0 to 65535.	502
Net ID	The Modbus Net ID of the remote device to access. Range: 1 to 247.	1
Scan Time	For " PULL " mode, the module will update the I/O states based on the time period of the Scan Time parameter. For " PUSH " mode, the module will update remote AO (DO) state when the local AI (DI) state is changed. The module will also force update remote AO (DO) when the local AI (DI) is no change during the time period of the Scan Time parameter. Range: 1000 to 42949672965 ms.	1000 ms
AI (DI) Count	This parameter specifies how many I/O channels are mapped. Range: 1 to 16; 0= Disable.	0
AI (DI) Addr	For " PULL " mode, this parameter specifies the base address of the Remote AI (DI) device that will be mapped to the Local AO (DO) register. The range depends on the type of remote device being used. For " PUSH " mode, this parameter specifies the base address of the Local AI (DI) register that will be mapped to the Remote AO (DO) device. The range depends on the type of ET-2200 module being used.	0
AO (DO) Addr	For " PULL " mode, this parameter specifies the base address of the Local AO (DO) register that will be mapped to the Remote AI (DI) device . The range depends on the type of the ET-2200 module being used. For " PUSH " mode, this parameter specifies the base address of the Remote AO (DO) device that will be mapped to the Local AI (DI) register . The range depends on the type of remote device being used.	0
TCP/UDP	This parameter is used to set the type of Modbus protocol to be used and can be either TCP or UDP for the "PUSH" mode only.	TCP
Update	Click " Submit " button to save the revised settings to the ET-2200 module.	

4.9 Filter

Note: The function is available for AIO and DIO modules.

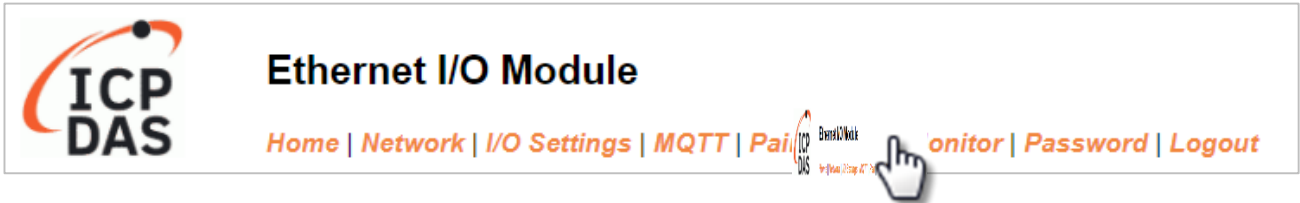

The **Filter Settings** section on the **Filter** page allows you to configure the IP Filter list for the ET-2200 series module, which will be described in more detail below.

4.9.1 Filter Settings

The **Filter Settings** function is used to query or set the IP Filter List (Available IP) for the ET-2200 series module. Only Clients whose IP address is specified in the list will be able to access the ET-2200 series module.

Filter Settings:

Available IP List	IP Address
IP1:	0.0.0.0
IP2:	0.0.0.0
IP3:	0.0.0.0
IP4:	0.0.0.0
IP5:	0.0.0.0


Add . . . To The List
 Delete IP#
 Delete ALL
 Save to Flash

The table describes the parameters contained in the "IP Address Configuration" section.

Item	Description
Add "IP" to the List	Used to add an IP address to the Available IP List.
Delete IP # "number"	Used to delete IP# address from the Available IP List.
Delete All	Used to delete all IP address current contained in the Available IP List.
Save to Flash	Used to save the updated Available IP List to the Flash memory.
Submit	Click this button to save the revised settings to ET-2200 module.

4.10 Monitor

Note: The function is available for AIO and DIO modules.

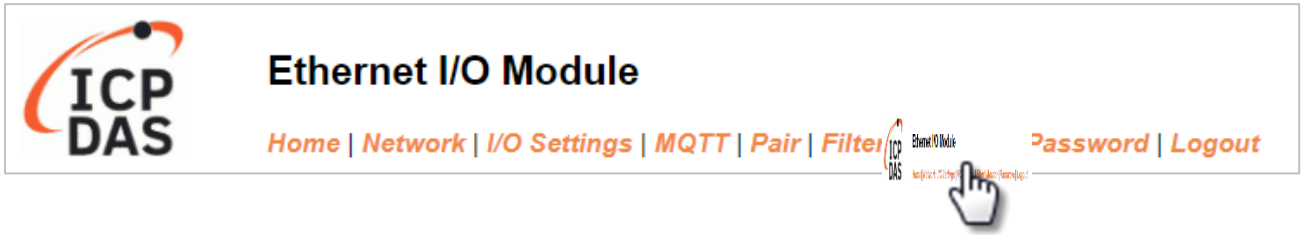


After clicking the **Monitor** tab, the user can check the connection status of the ET-2200 series module on the **Current Connection Status** section.

Current Connection Status:	
Server Mode	Server
Connected IP1:	0.0.0.0
IP2:	0.0.0.0
IP3:	0.0.0.0
IP4:	0.0.0.0
IP5:	0.0.0.0
IP6:	0.0.0.0
Available Connections:	32

4.11 Change Password

Note: The function is available for AIO and DIO modules.

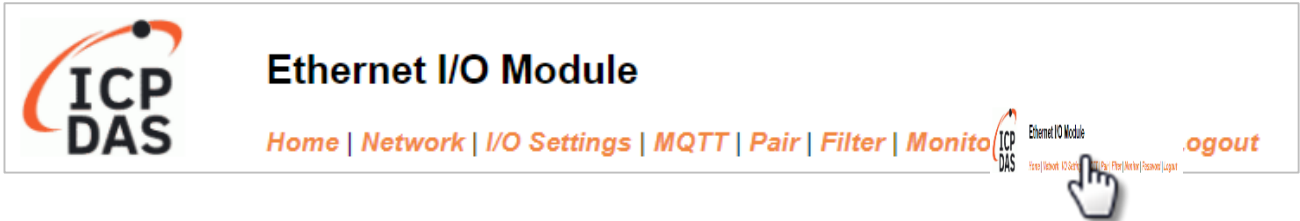


The **Change Password** section on the **Password** page allows you to change the change, follow the steps.

- Step1: Enter the old password in the **“Current password”** field (use the default password **“Admin”**).
- Step2: Enter a new password in the **“New password”** field.
(please enter 1 to 12 digits of numbers or characters).
- Step3: Re-enter the new password in the **“Confirm new password”** field.
- Step4: Click the **“Submit”** button to update the password.


Change Password
The length of the password is 12 characters maximum.

Current password:	<input type="password" value="....."/>
New password:	<input type="password" value="...."/>
Confirm new password:	<input type="password" value="...."/>
	<input type="button" value="Submit"/>


 **Note:** If you forgot your password, please refer to Appendix A1. How do I restore the web password for the module to the factory default password?

4.12 Logout

Note: The function is available for AIO and DIO modules.

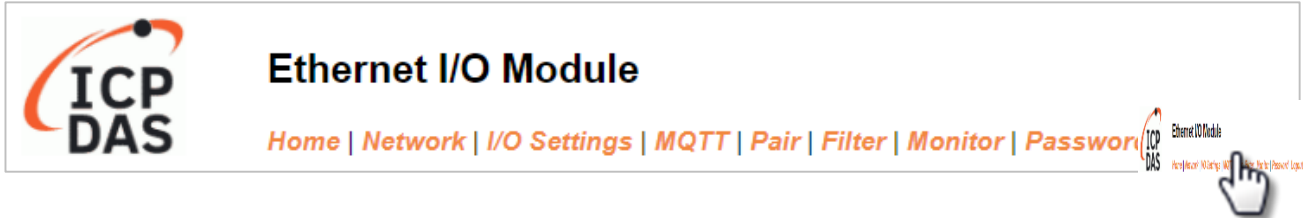


Clicking the **Logout** tab will immediately log you out from the system and return you to the login page.

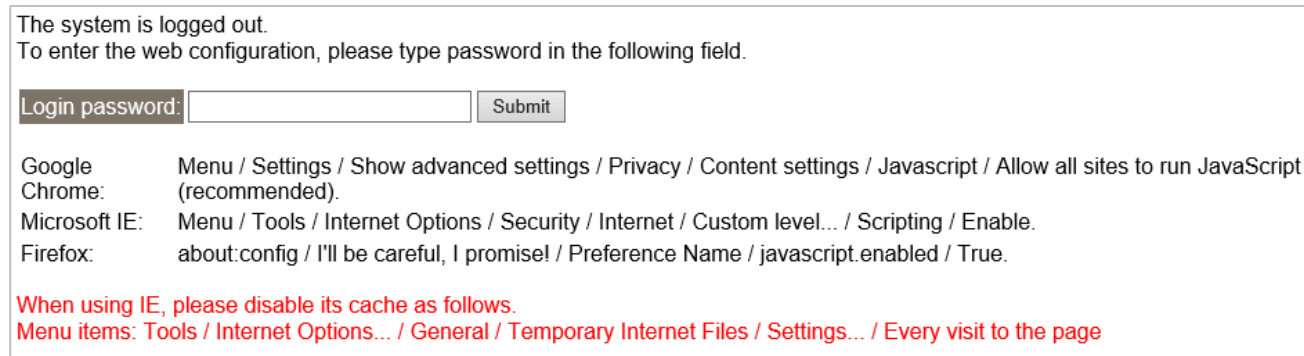


4.13 MQTT

Note: The function is available for AIO and DIO modules.

AI Module

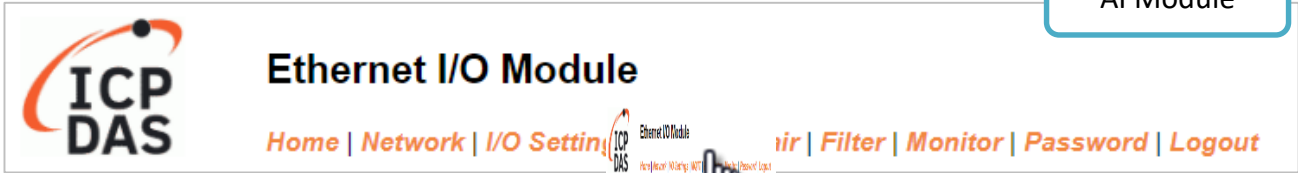


DI/DO Module

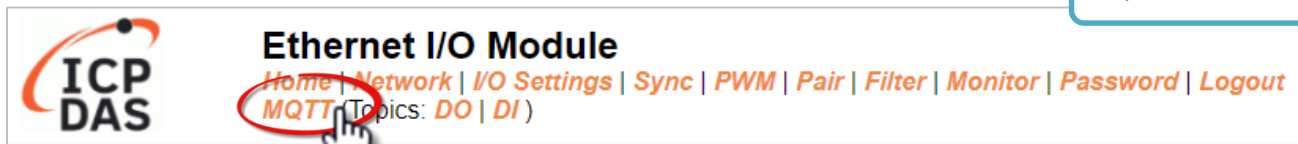

Chapter	DIO	AIO
4.13.1 Connectivity Settings	✓	✓
4.13.2 Publication Settings	✓	✓
4.13.3 Publication Settings	✓	✓
4.14 MQTT-DO	✓	-
4.15 MQTT-DI	✓	-
4.16 MQTT-AI	-	✓

MQTT is a Client Server Publish/Subscribe messaging transport protocol. It is simple, light-weight, and open, and is designed to be easy to implement. These characteristics make it ideal for use in many situations, including constrained environments such as for communication in Machine-to-Machine (M2M) and Internet of Things (IoT) contexts where a small code footprint is required and/or network bandwidth is at a premium.

MQTT is a protocol consisting of a Publish/Subscribe mechanism where the Client only needs to know the IP address for the Broker. The Broker then acts as a central location to handle the sending and receiving of all messages between a Publisher and a Subscriber. The Publisher is the entity that publishes the topic and message, the Subscriber is the entity that receives the updated messages from the Broker. When the Publisher updates a message related to a specific-topic, it is transmitted to the Broker, which will then send the message to all Subscribers that have subscribed to that particular topic. Neither the Publisher and nor the Subscriber need to know the status of the other.

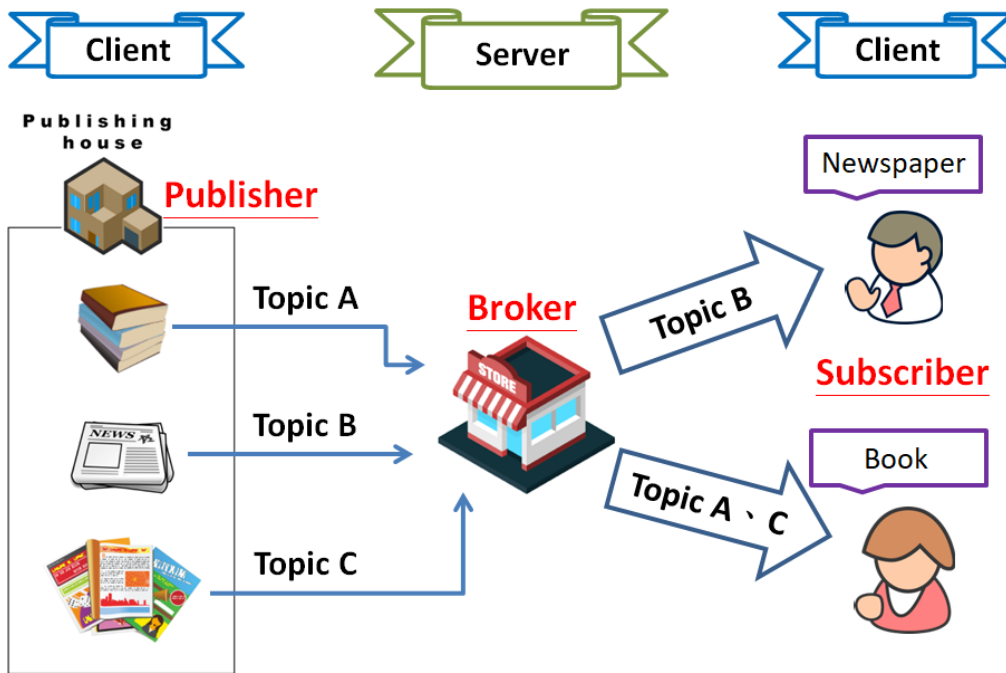

The above is a schematic diagram of the system. Publishers are similar to various forms of publishing house, and focus on updating commodities for different topics such as novels, newspapers, and magazines, etc. Subscribers are similar to consumers, who purchase, or subscribe to designated commodities in a bookstore (Broker), which presents the latest information that has been designated by the Subscriber.

4.13.1 Connectivity Settings

Connectivity Settings

MQTT	Disable ▾	
Broker	<input checked="" type="radio"/> IP: 10 . 0 . 8 . 1	
	<input type="radio"/> Host Name (Max. 127 chars) N/A	
Broker Port	1883	(Default= 1883)
Client Identifier	ET-2242U_E24203	
User Name	N/A	(Max. 63 chars)
Password	...	(Max. 63 chars)
Reconnection Interval	10	(5 ~ 65000 s, Default= 10)
Keep Alive Interval	20	(5 ~ 65000 s, Default= 20)
Main Topic Name	N/A	(Max. 126 chars)
Update Settings		

The table describes the parameters contained in the "**Connectivity Settings**" section.

Item	Description	Defaults
MQTT	Enables or Disables the MQTT connection function.	Disabled
Broker	The IP address or the Host Name for the MQTT broker.	N/A
Broker Port	The port number for the MQTT broker.	1883
Client Identifier	The client identifier uniquely identifies the MQTT client to the MQTT broker, and consists of the "module name" + "_" (underscore character) + "the last 6 digits of the MAC address" and cannot be changed.	
User Name	This parameter is used when the MQTT broker requires authentication. The length should be no more than 63 characters.	N/A
Password	This parameter is used when the MQTT broker requires authentication. The length should be no more than 63 characters.	N/A
Reconnection Interval	The time interval between attempts by the ET-2200 module to connect to the broker if a connection failure occurs. The valid range is 5 to 65000 seconds	10(s)
Keep Alive Interval	The keep-alive mechanism is provided to ensure that both the client and the broker are alive and the connection is still open. If a Client doesn't send any messages during the Keep Alive period, it must send a PINGREQ packet to the broker to confirm its availability. The broker must reply with a PINGRESP packet to also indicate its availability. The broker will disconnect a client, which doesn't send a PINGREQ packet or any other message within one and a half times of the Keep Alive Interval. The valid range is 5 to 65000 seconds.	20(s)
Main Topic Name	The Topic Name is a combination of the Main Topic Name and the Sub Topic Name. The Main Topic Name can be empty. The same part of the Topic Names can be entered in the Main Topic Name field to improve the processing efficiency of all Topic Names. A shorter Topic Name also improves processing efficiency.	N/A
Update Settings	Click this button to save any revised settings to the ET-2200 device.	

4.13.2 Publication Settings

Publication Settings

Publication	
Retain	<input type="checkbox"/>
Cycle	9000 (100 ~ 2147483000 ms, in 10 ms step, Default= 9000)
All Information	
Enable	Disable ▾
Sub Topic Name	info (Max. 63 chars)
Last Will and Testament	
Enable	<input type="checkbox"/>
Retain	<input type="checkbox"/>
QoS	0 - At most once ▾
Topic	N/A (Max. 63 chars)
Message	N/A (Max. 63 chars)
Update Settings	

The table describes the parameters contained in the "Publication Settings" section.

Item	Description	Defaults
Publication		
Retain	Check this option to ensure that the message is retained once it is published.	Disabled
Cycle	The time interval that the ET-2200 module periodically publishes data. The valid range is 100 to 2147483000 milliseconds in intervals of 10 millisecond.	9000(ms)
All Information		
Enable	This option is used to enable or disable the All Information function. The All Information adopt Periodic Publish, which includes the Module Name, the MAC address, DI and DO states. The publishing period depends on the Cycle setting.	Disabled
Sub Topic Name	The Topic Name is a combination of the Main Topic Name and the Sub Topic Name. A shorter Topic Name improves processing efficiency.	info

Item	Description	Defaults
Last Will and Testament		
Enable	Check this option to enable the Last Will and Testament function.	Disabled
Retain	Check this option to ensure that the Last Will and Testament message is retained once it is published.	Disabled
QoS	The QoS for the Last Will and Testament message.	0 - At most once
Topic	The Topic Name for the last will and Testament message. The length should be no more than 63 characters	N/A
Message	The Last Will and Testament message. The length should be no more than 63 characters.	N/A
Update Setting	Click this button to save any revised settings to the ET-2200 device.	

4.13.3 Restore Factory Defaults


Restore Factory Defaults

Restore MQTT factory settings	<input type="button" value="Restore Defaults"/>
Restart MQTT service	<input type="button" value="Restart Service"/>

The table describes the parameters contained in the "**Restore Factory Defaults**" section.

Item	Description
Restore MQTT factory settings	Click this button to reset all MQTT settings to the default factory settings.
Restart MQTT service	Click this button to restart the MQTT service. This function should be used to reconnect with the Broker after adjusting the MQTT settings.

4.14 MQTT-DO



Ethernet I/O Module
[Home](#) | [Network](#) | [I/O Settings](#) | [Sync](#) | [PWM](#) | [Pair](#) | [Filter](#) | [Monitor](#) | [Password](#) | [Logout](#)
MQTT (Topics: [DO](#) | [DI](#))

The DO page is where you can set a full Topic Name, which is a combination of the Sub Topic Name and the Main Topic name. The Publish and Subscribe functions for each DO channel can be enabled or disabled in this page. You can use either a single-channel (DO0...) or multiple channels (ALL) to process the Topic operations. Multi-channel operation is more recommended, because it can help reduce the amount of network traffic.

In single-channel operation, the values 0 and 1 correspond the OFF and ON settings, respectively. In multi-channel operation, a hexadecimal value represents the settings for all channels. For example, the value 0xFF00 indicates that channels 0 to 7 are OFF and channels 8 to 15 are ON. Please turn off unused Topics to reduce unnecessary processing, as it will affect operational efficiency.

4.14.1 MQTT – Digital Outputs

MQTT - Digital Outputs Show Hide

Digital Output	Power-on Publish	Subscribe	Sub Topic Name (Max. 63 chars)
ALL	<input type="checkbox"/>	<input type="checkbox"/>	do_all
Digital Output	<input type="checkbox"/> Power-on Publish	<input type="checkbox"/> Subscribe	Sub Topic Name (Max. 63 chars)
DO0	<input type="checkbox"/>	<input type="checkbox"/>	do00
DO1	<input type="checkbox"/>	<input type="checkbox"/>	do01
DO2	<input type="checkbox"/>	<input type="checkbox"/>	do02
DO3	<input type="checkbox"/>	<input type="checkbox"/>	do03
DO4	<input type="checkbox"/>	<input type="checkbox"/>	do04
DO5	<input type="checkbox"/>	<input type="checkbox"/>	do05
DO6	<input type="checkbox"/>	<input type="checkbox"/>	do06
DO7	<input type="checkbox"/>	<input type="checkbox"/>	do07
Update			

The table describes the parameters contained in the "**MQTT – Digital Outputs**" section.

Item	Description	Defaults
Power-on Publish	The DO status will be published when the module is Powered-on. Check: Enabled ; Uncheck: Disabled	Disabled
Subscribe	The DO states depend on the updating message of corresponding Topic. Check: Enabled ; Uncheck: Disabled	Disabled
Sub Topic Name	The Topic Name is a combination of the Main Topic Name and the Sub Topic Name. A shorter Topic Name improves processing efficiency.	Corresponding DO
Update	Click this button to save the revised settings to the ET-2200 device.	

4.14.2 Readbacks of the Digital Outputs


Readbacks of the Digital Outputs

Readback	State-Change Publish	Periodic Publish	Sub Topic Name (Max. 63 chars)
ALL	<input type="checkbox"/>	<input type="checkbox"/>	rb_all
Readback	<input type="checkbox"/> State-Change Publish	<input type="checkbox"/> Periodic Publish	Sub Topic Name (Max. 63 chars)
DO0	<input type="checkbox"/>	<input type="checkbox"/>	rb00
DO1	<input type="checkbox"/>	<input type="checkbox"/>	rb01
DO2	<input type="checkbox"/>	<input type="checkbox"/>	rb02
DO3	<input type="checkbox"/>	<input type="checkbox"/>	rb03
DO4	<input type="checkbox"/>	<input type="checkbox"/>	rb04
DO5	<input type="checkbox"/>	<input type="checkbox"/>	rb05
DO6	<input type="checkbox"/>	<input type="checkbox"/>	rb06
DO7	<input type="checkbox"/>	<input type="checkbox"/>	rb07

The table describes the parameters contained in the "Readbacks of the Digital Outputs" section.

Item	Description	Default Value
State-Change Publish	A message will be published when the state of the corresponding DO is changed. Check: Enabled ; Uncheck: Disabled	Disabled
Periodic Publish	Used to enable or disable the Periodic Publish function. The publishing period depends on the Cycle settings. Check: Enabled ; Uncheck: Disabled	Disabled
Sub Topic Name	The Topic Name is a combination of the Main Topic Name and the Sub Topic Name. A shorter Topic Name improves processing efficiency.	Corresponding DO
Update	Click this button to save the revised settings to the ET-2200 device.	

4.15 MQTT-DI

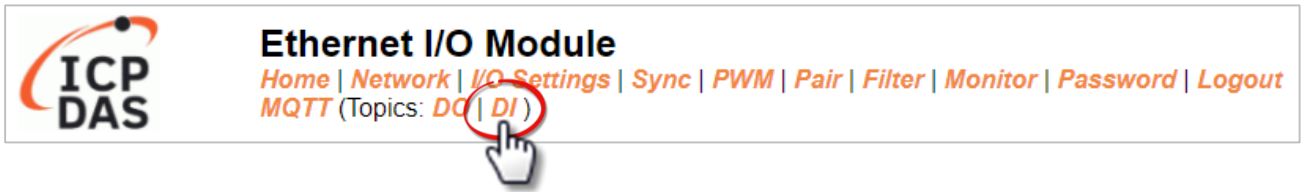

The DI page is where you can set the Topic Name, which is a combination of the Sub Topic Name and the Main Topic name. The Publish function for each DI channel can also be either enabled or disabled on this page. You can use either a single-channel (DI0...) or multiple-channels (ALL) to process the Topic operations. Multi-channel operation is more recommended, because it can help reduce the amount of network traffic.

In single-channel operation, the values 0 and 1 correspond the OFF and ON settings, respectively. In multi-channel operation, a hexadecimal value represents the settings for all channels. For example, the value 0xFF00 indicates that channels 0 to 7 are OFF, and channels 8 to 15 are ON. Please turn off (uncheck the checkbox) unused Topics to reduce unnecessary processing, as it will affect operational efficiency.

4.15.1 MQTT – Digital Inputs


MQTT - Digital Inputs

Digital Input	State-Change Publish	Periodic Publish	Sub Topic Name (Max. 63 chars)
ALL	<input type="checkbox"/>	<input type="checkbox"/>	di_all
Digital Input	<input type="checkbox"/> State-Change Publish	<input type="checkbox"/> Periodic Publish	Sub Topic Name (Max. 63 chars)
DI0	<input type="checkbox"/>	<input type="checkbox"/>	di00
DI1	<input type="checkbox"/>	<input type="checkbox"/>	di01
DI2	<input type="checkbox"/>	<input type="checkbox"/>	di02
DI3	<input type="checkbox"/>	<input type="checkbox"/>	di03
DI4	<input type="checkbox"/>	<input type="checkbox"/>	di04
DI5	<input type="checkbox"/>	<input type="checkbox"/>	di05
DI6	<input type="checkbox"/>	<input type="checkbox"/>	N/A
DI7	<input type="checkbox"/>	<input type="checkbox"/>	N/A
<input type="button" value="Update"/>			

The table describes the parameters contained in the "**MQTT – Digital Inputs**" section.

Item	Description	Default Value
State-Change Publish	A message will be published when the state of the corresponding DI is changed. Check: Enabled ; Uncheck: Disabled	Disabled
Periodic Publish	to enable or disable the Periodic Publish function. The publishing period depends on the Cycle settings. Check: Enabled ; Uncheck: Disabled	Disabled
Sub Topic Name	The Topic Name is a combination of the Main Topic Name and the Sub Topic Name. A shorter Topic Name improves processing efficiency.	Corresponding DI
Update	Click this button to save the revised settings to the ET-2200 device.	

4.16 MQTT-AI

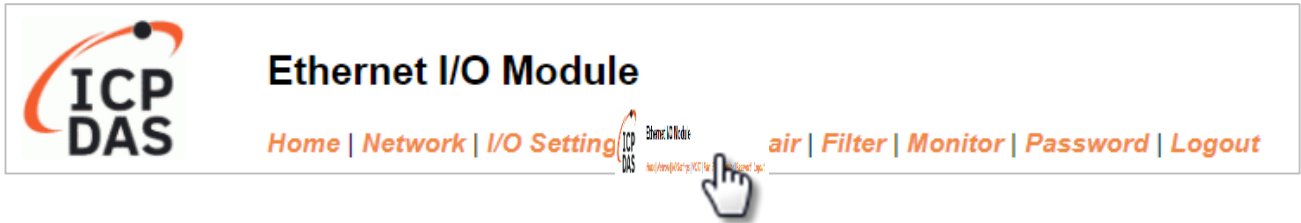

Analog Inputs

Analog Input	<input type="checkbox"/> Periodic Publish	Sub Topic Name (Max. 63 chars)
AI0	<input checked="" type="checkbox"/>	ai00
AI1	<input checked="" type="checkbox"/>	ai01
AI2	<input checked="" type="checkbox"/>	ai02
AI3	<input checked="" type="checkbox"/>	ai03
AI4	<input checked="" type="checkbox"/>	ai04
AI5	<input checked="" type="checkbox"/>	ai05
AI6	<input checked="" type="checkbox"/>	ai06
AI7	<input checked="" type="checkbox"/>	ai07
<input type="button" value="Update"/>		

The table describes the parameters contained in the "MQTT – Analog Inputs" section.

Item	Description	Defaults
Periodic Publish	to enable or disable the Periodic Publish function. The publishing period depends on the Cycle settings. Check: Enabled ; Uncheck: Disabled	Disabled
Sub Topic Name	The Topic Name is a combination of the Main Topic Name and the Sub Topic Name. A shorter Topic Name improves processing efficiency.	Corresponding AI
Update	Click this button to save the revised settings to the ET-2200 device.	



4.17 MQTT- Realization

This section described how to use the open-source software Mosquitto and MQTTLens to demonstrate the usage of MQTT protocol in conjunction with the ET-2200 series module.


4.17.1 Set up Mosquitto

Mosquitto is an open-source software application which allows you to create an MQTT Broker, and can be installed on Windows, MacOS, and Linux, etc.

Step 1 Download the Installer (V1.6.4) from the official Mosquitto [website](#) and install the application.

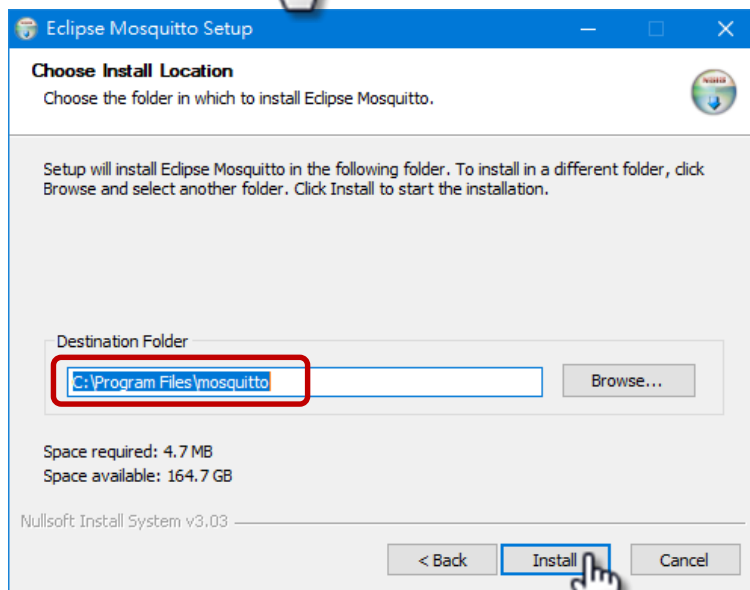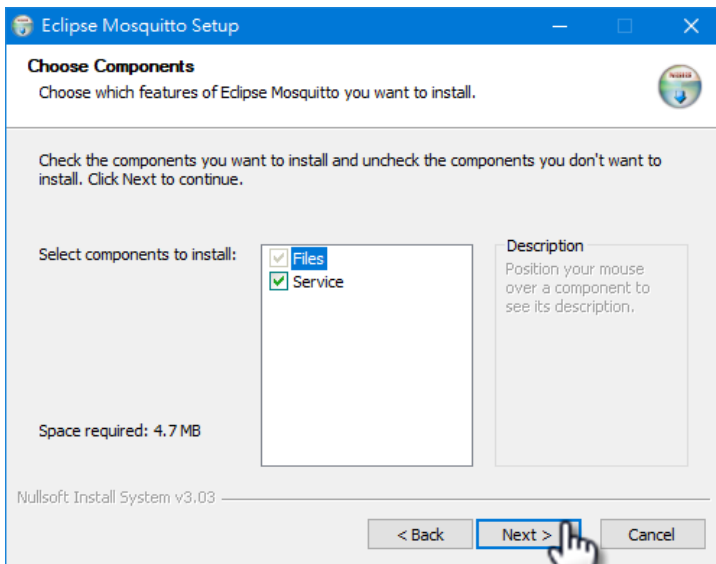

Step 2 Locate the "mosquitto.exe" file in the default installation path and double-click it to enable the Mosquitto server.

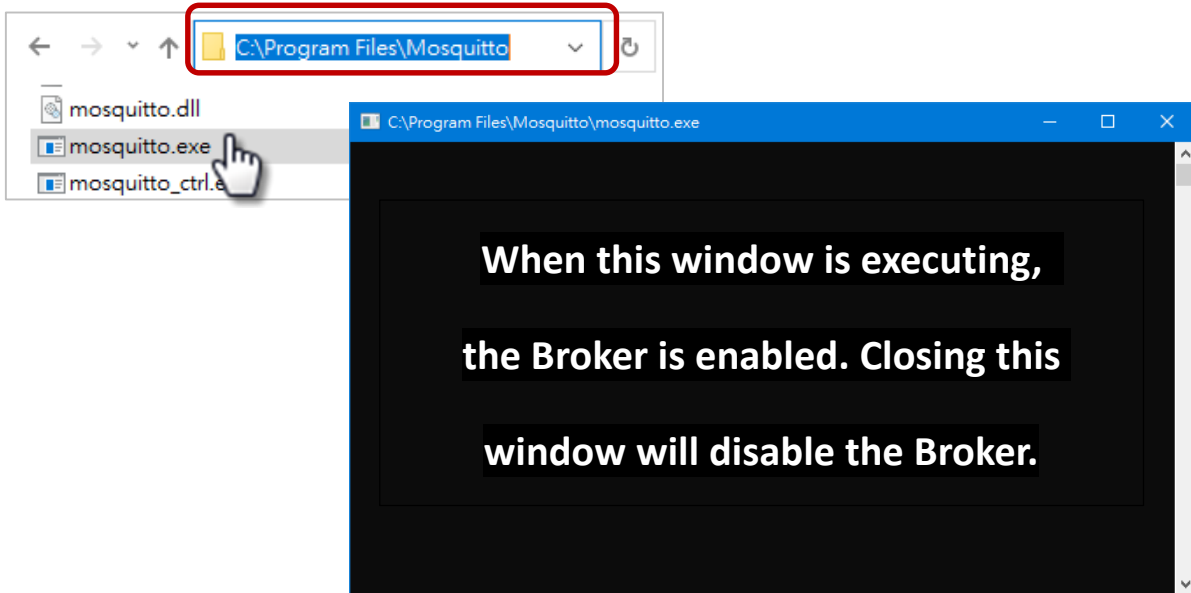


⚠ Why can't I open "mosquitto.exe" or why does it crash?



Once the Mosquitto installation is complete, **the Broker server will be automatically enabled by default when the computer boots**. Therefore, the Broker is already enabled after the computer reboots. At this time, clicking the "mosquitto.exe" file again will be the same as attempting to enable an already enabled-Broker server, and the attempt will be blocked.

To prevent the broker from automatically opening, you can change the settings in the Windows Services application. If it is not necessary to set, go to the Step3.

Open the Services application by searching for "Services".

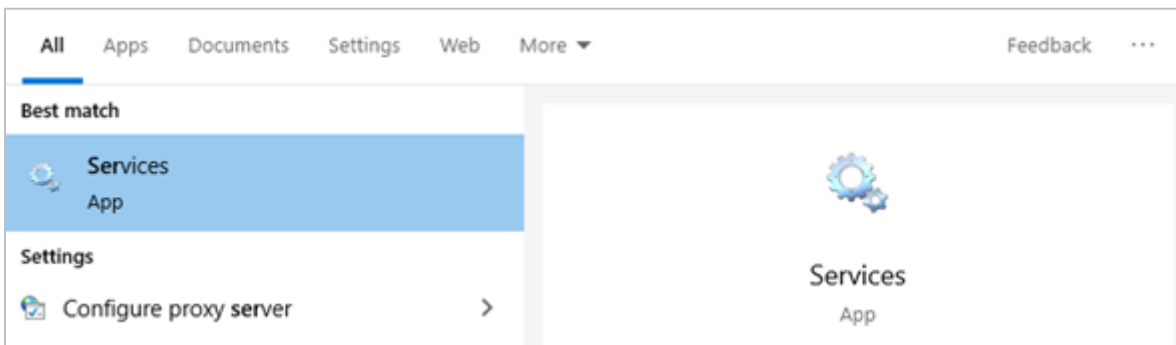


In the Services application, locate the "Mosquitto Broker" item and double-click the name to open the Properties dialog. Click the **Stop** button and set the **Startup type** to **Manual**. Click **OK** to save your changes.

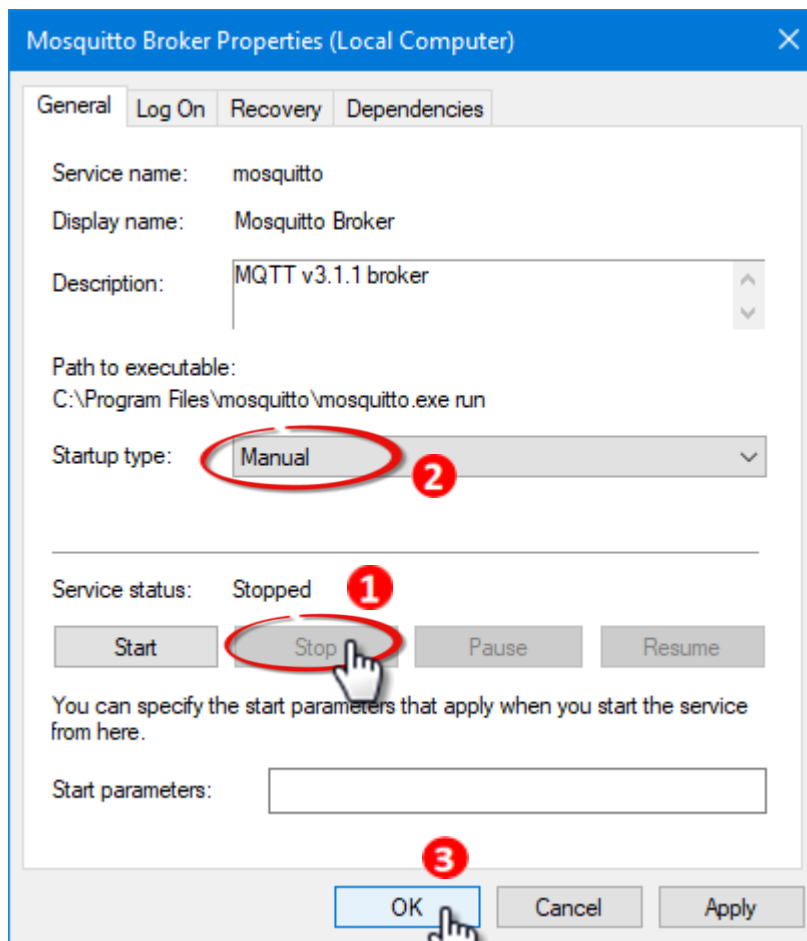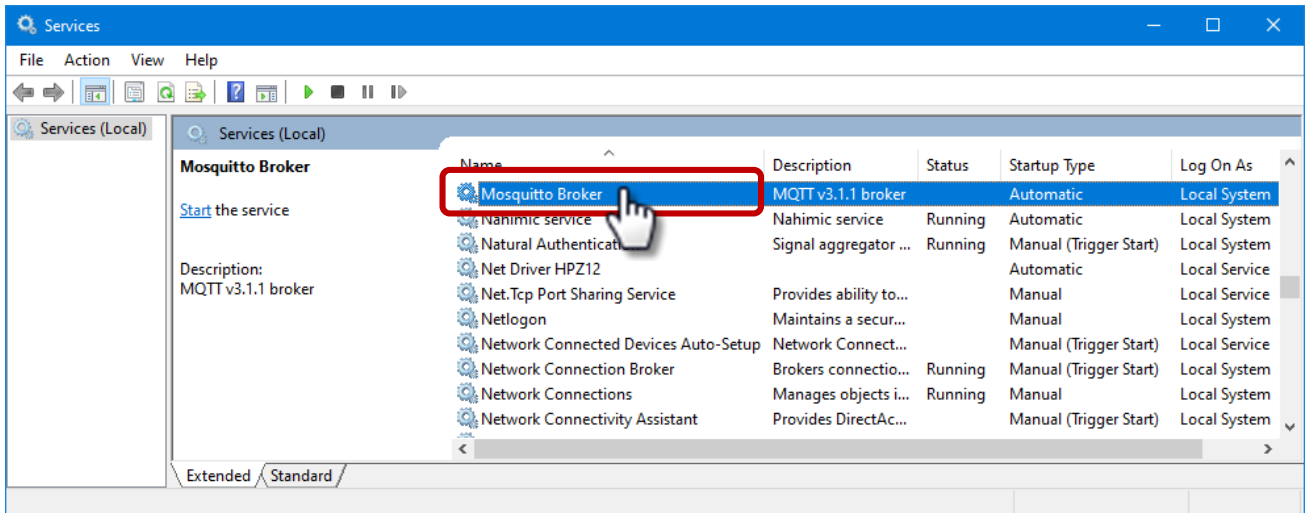


Step 3 Open Windows Port 1883 (the default Port for the MQTT)


3.1 Open the **Advanced Settings** section for the Windows Firewall.

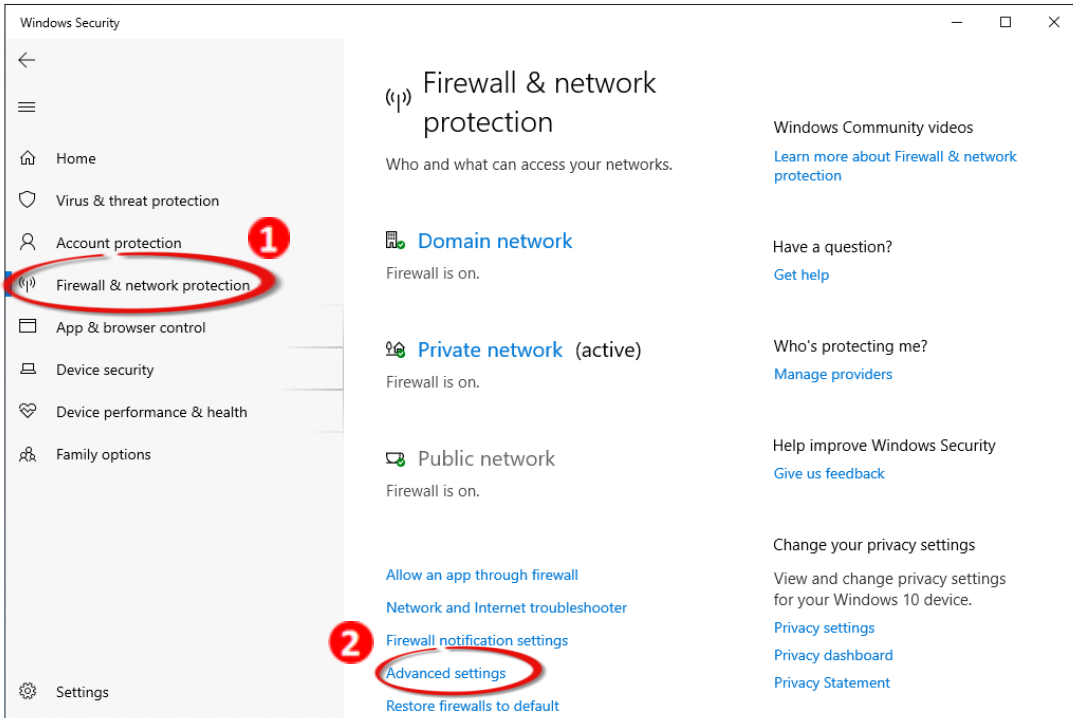


3.2 Add a new rule. Click **Inbound Rules** and **New Rule**, and then select the **Port** option. Click the **Next** button to continue.

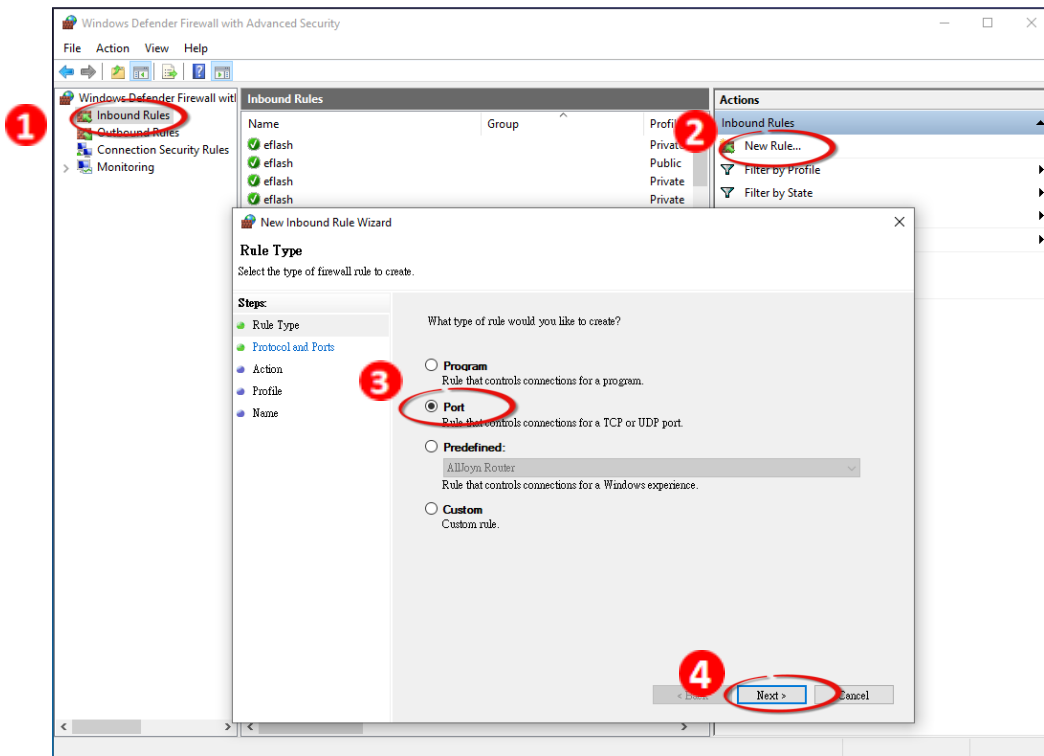


- 3.3 Select the **TCP** option and then select **Specific local ports** and enter the value **1883**. Click the **Next** button to continue.

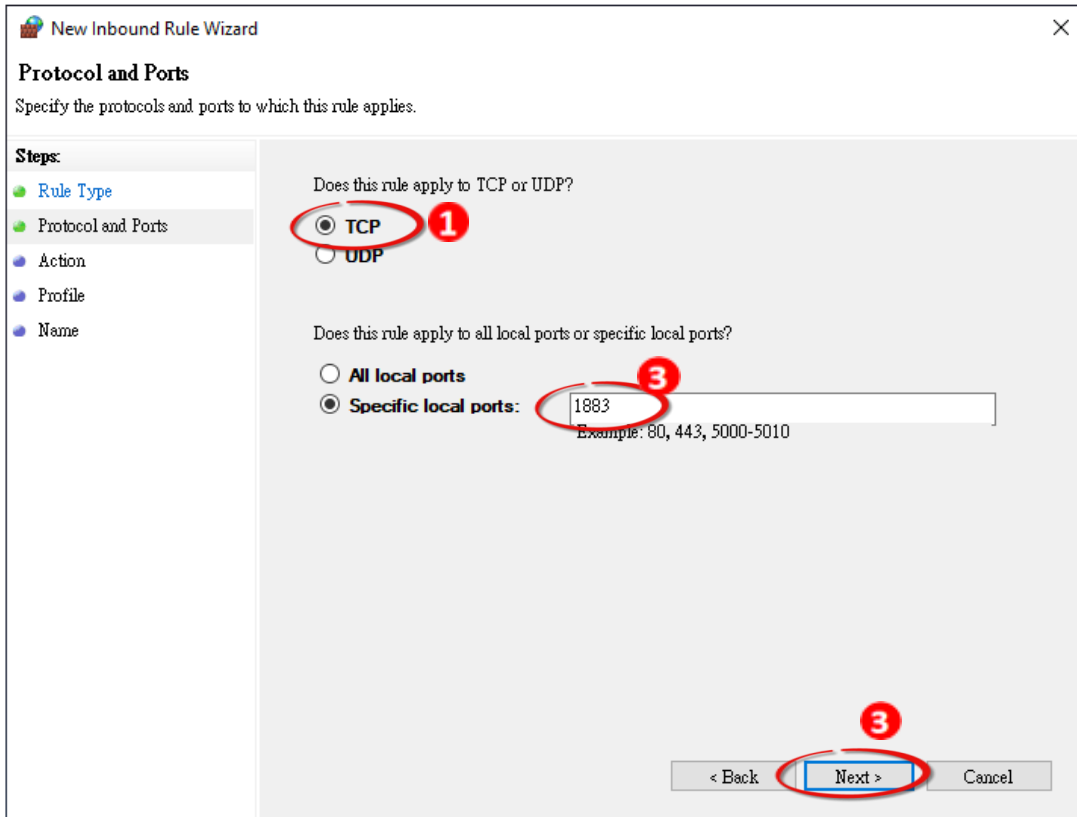


- 3.4 Select the **Allow the connection** option and then click the **Next** button to continue.

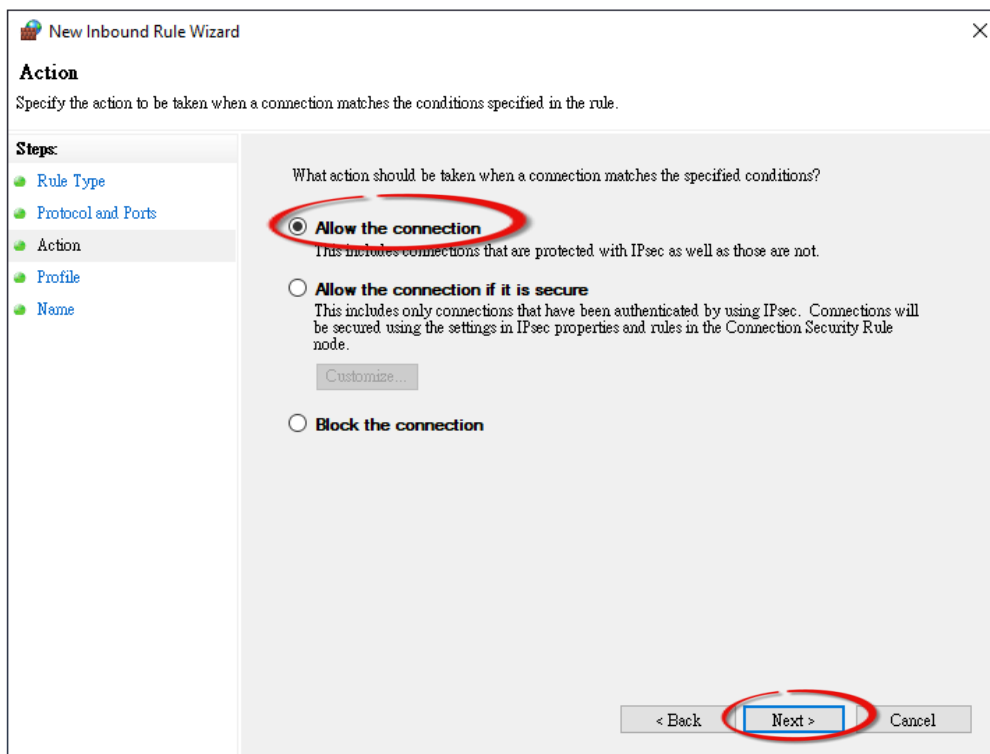

3.5 Select the **Domain** checkbox and click the **Next** button to continue.

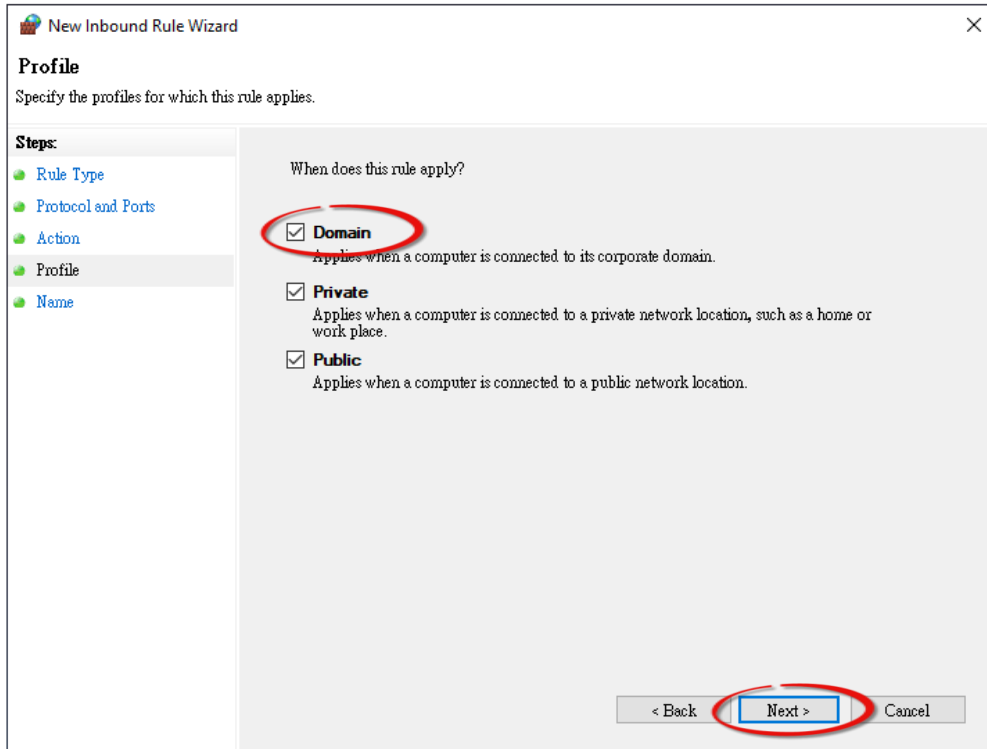

3.6 Enter the name of the rule and then click the **Finish** button to create the rule. Enter the notes if desired.

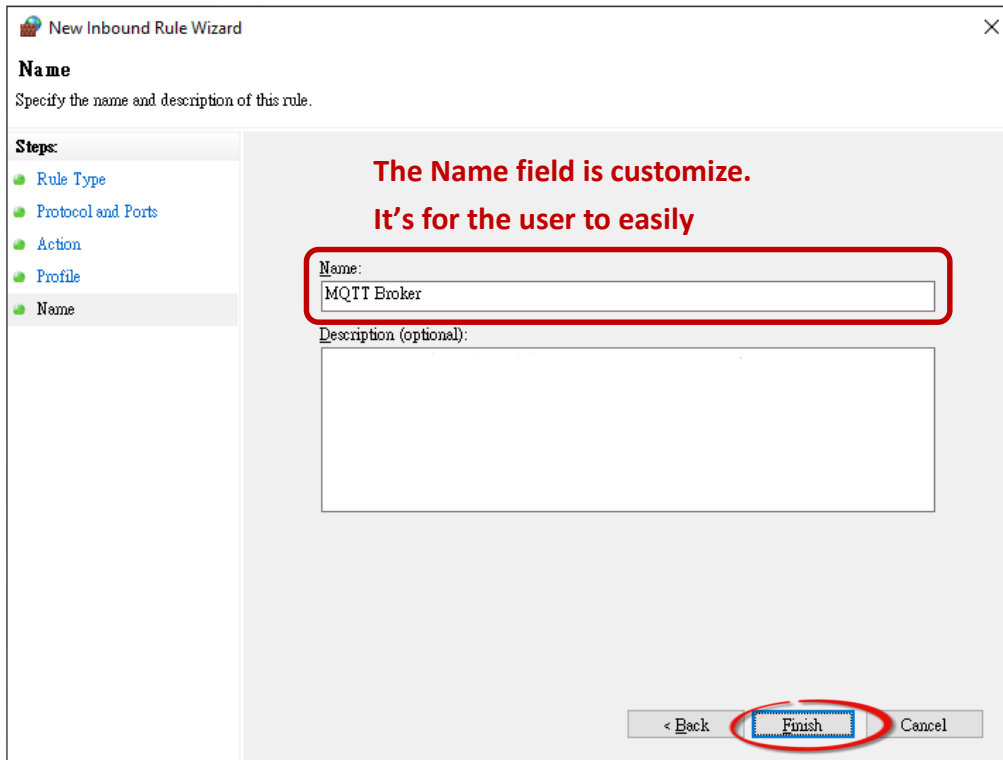


4.17.2 Introduction to MQTTLens

MQTTLens is a free application that is available for the Chrome browser, and can be found in the Chrome Web Store. This program enables you to publish a topic to the Broker and subscribe to a topic from the Broker. This section will use MQTTLens to implement the basic architecture for MQTT on Windows.

Step 1 Install MQTTLens

Open the Chrome and search for the 'MQTTLens chrome web store'. Click the 'Add to Chrome' button to install it on your system.

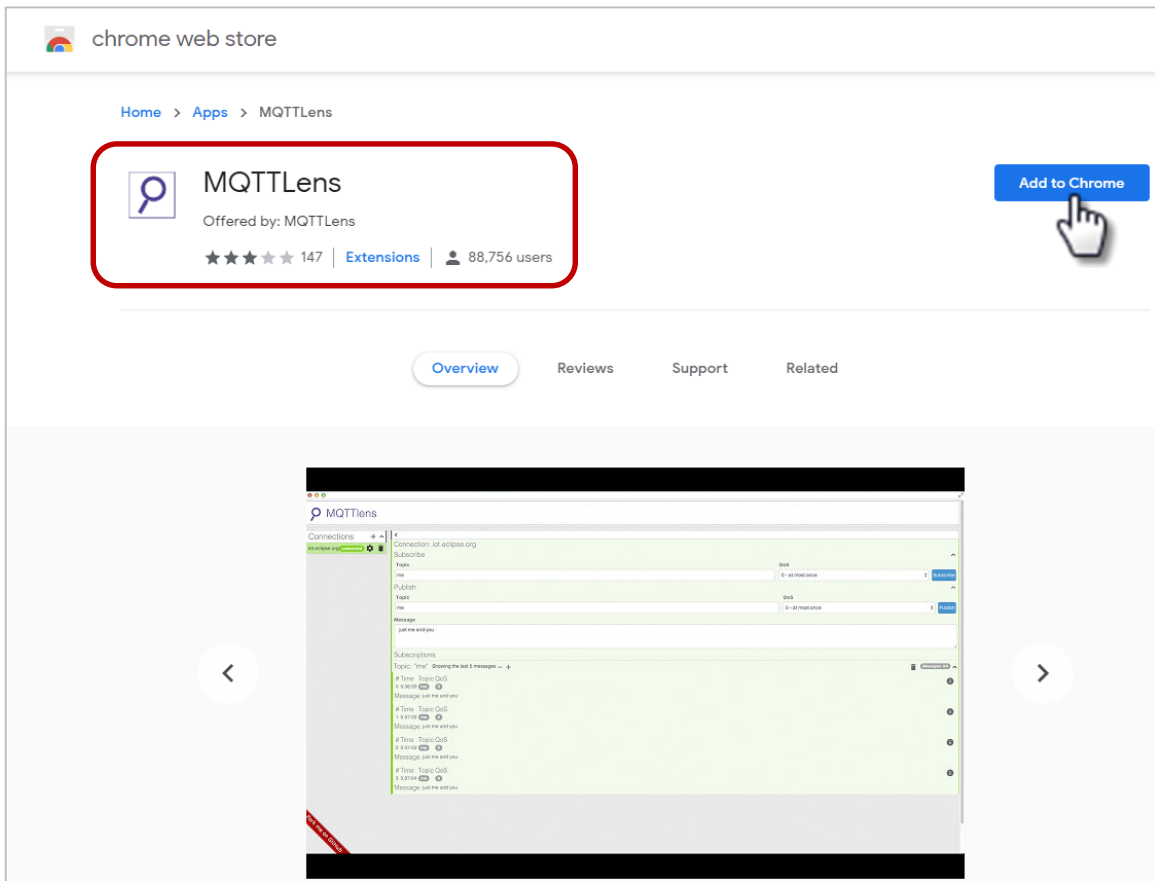


Step 2 Connect the Broker


Execute MQTTLens on Chrome. Click the "+" button to add a connection and enter the IP address for the Broker, i.e., the IP address for the computer where the MQTT server is located. click the **Create Connection** button to continue.

 **What is a Broker?**

A Broker is a Server in the MQTT architecture. Refer to Section [4.12 MQTT](#) for more details.

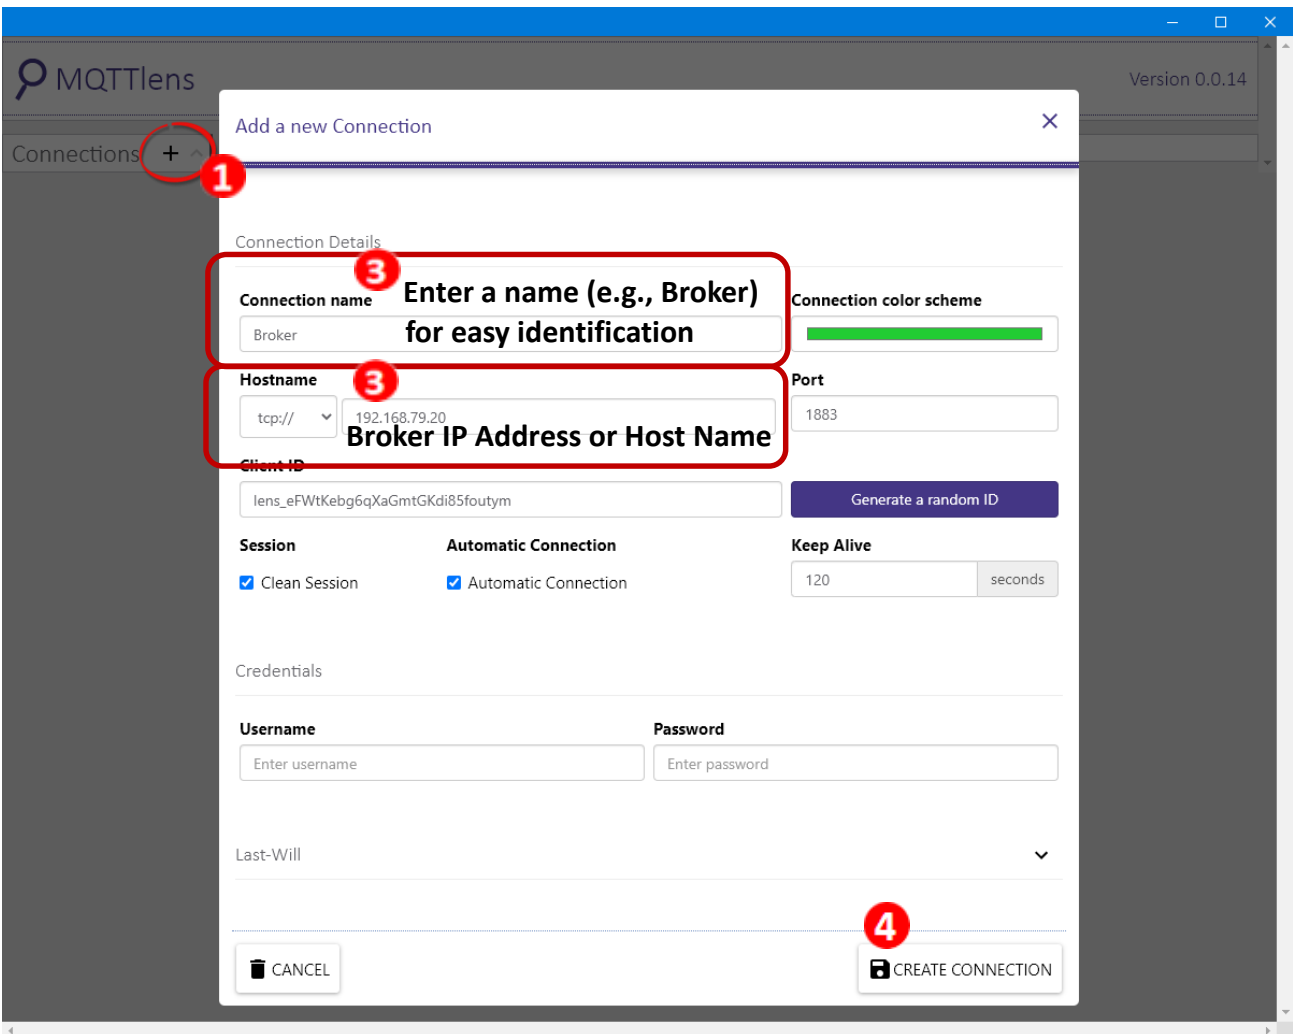

Step 3 Try to subscribe a topic and publish a message. If the connection is operating normally, you will receive a message related to the defined topic, as follows.

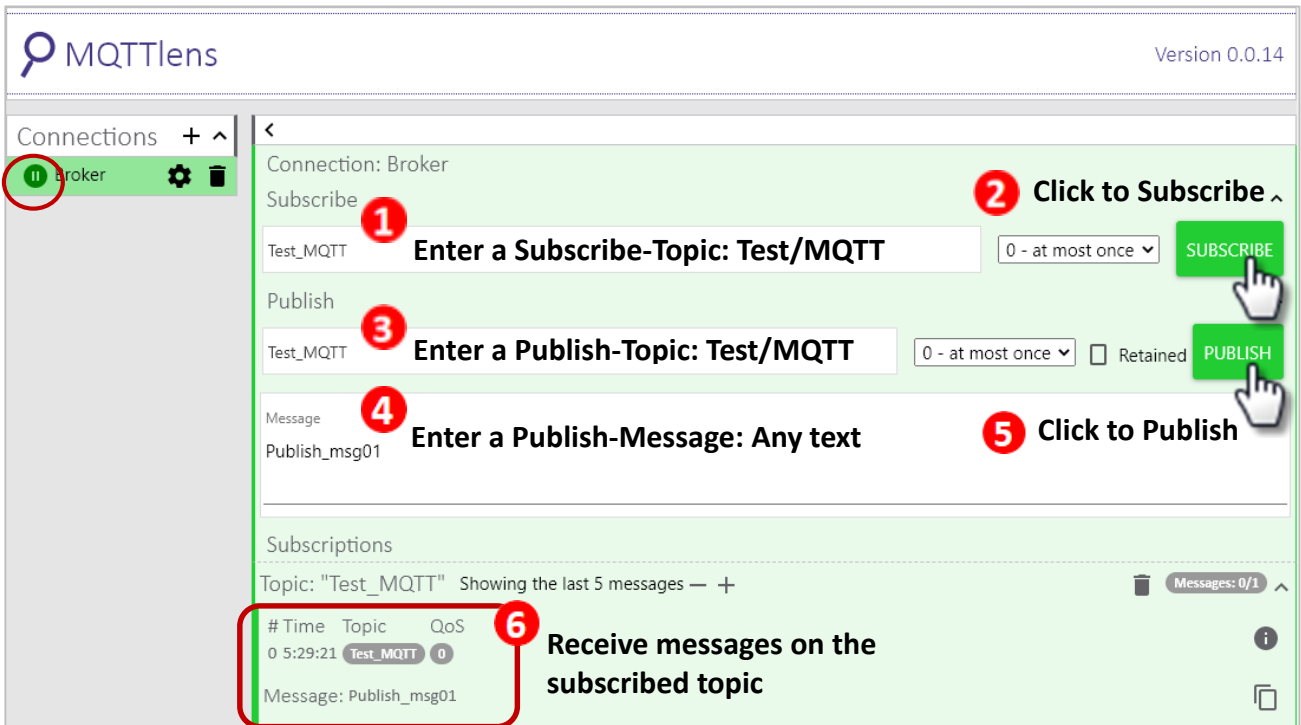


4.17.3 ET-2200 Periodic Publish Realization


Step 1 Refer [Set up Mosquitto](#) to install a Broker and refer the [Introduction to MQTTLens](#) to subscribe the "ICPDAS/info" Topic.



Step 2 Log into the ET-2200 Web Server and click the [MQTT](#) page. Set the MQTT option to Enable and enter the IP address for the Broker.

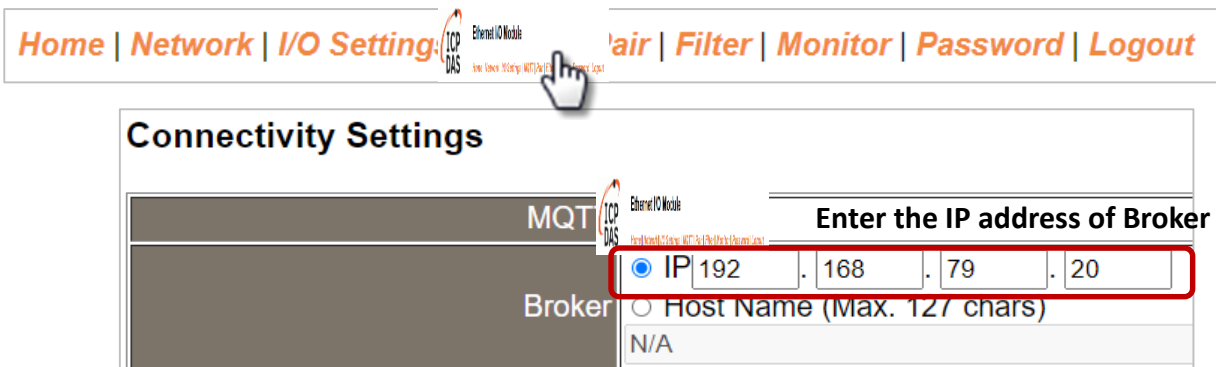

Step 3 Enter "ICPDAS/" in the Main Topic Name field and then click the **Update Settings** button.

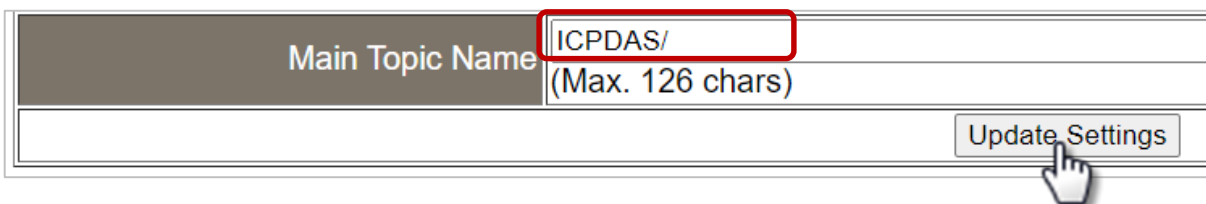

Step 4 Set the Enable field in the All Information section to **Enable** on the Publication Settings page, and then click the **Update Settings** button. Click the **Restart Service** button to restart the MQTT services.

Publication Settings

Publication	
Retain	<input type="checkbox"/>
Cycle	9000 (100 ~ 2147483000 ms, in 10 ms step, Default= 9000)
All Information	
Enable	Enable
Sub Topic Name	info (Max. 63 chars)
Last Will and Testament	
Enable	<input type="checkbox"/>
Retain	<input type="checkbox"/>
QoS	0 - At most once
Topic	N/A (Max. 63 chars)
Message	N/A (Max. 63 chars)
Update Settings	

Restore Factory Defaults

Restore MQTT factory settings	Restore Defaults
Restart MQTT service	Restart Service

Step 5 Return to MQTTLens, the updated message for the subscription, including Module name, Mac Address, DO State, and DI State, has been received every 9000 ms (default cycle).

Subscriptions

Topic: "ICPDAS/info" Showing the last 5 messages — + Messages: 0/5

#	Time	Topic	QoS
0	6:02:16	ICPDAS/info	0
<pre>ICPDAS:{"Module Name":"ET-2260","MacAddress":"000DE065CFD3","DO":"0x0","DI":"0x0"}</pre>			
JSON			
1	6:02:25	ICPDAS/info	0
<pre>ICPDAS:{"Module Name":"ET-2260","MacAddress":"000DE065CFD3","DO":"0x0","DI":"0x0"}</pre>			
JSON			
2	6:02:34	ICPDAS/info	0
<pre>ICPDAS:{"Module Name":"ET-2260","MacAddress":"000DE065CFD3","DO":"0x0","DI":"0x0"}</pre>			
JSON			

! What if no messages are received by MQTTLens?

Confirm that the settings for the Windows firewall and antivirus software are correct. Close the software to test if they are affecting your connection.

5. I/O Pair Connection Applications

The ET-2200 series modules can be used to create DI-to-DO pair connections via the Ethernet. Once the configuration is complete, the modules can then poll the status of the local DI channels and then use the Modbus/TCP protocol to continuously write to a remote DO device in the background. This is useful when connecting Digital I/O devices that do not themselves have Ethernet capability. The following will describe how to correctly configure the I/O pair-connection function.

5.1 One Module Polling the Remote DI/DO (1-to-1, Pull / Push Mode)

Step 1: Connect the device to a Network, a PC and a Power supply.

Confirm that the ET-2200 series modules are functioning correctly. Refer to [Chapter 3 “Getting Started”](#) for more details. An example configuration shown below:

Note that ET-2260 module is used in this example.

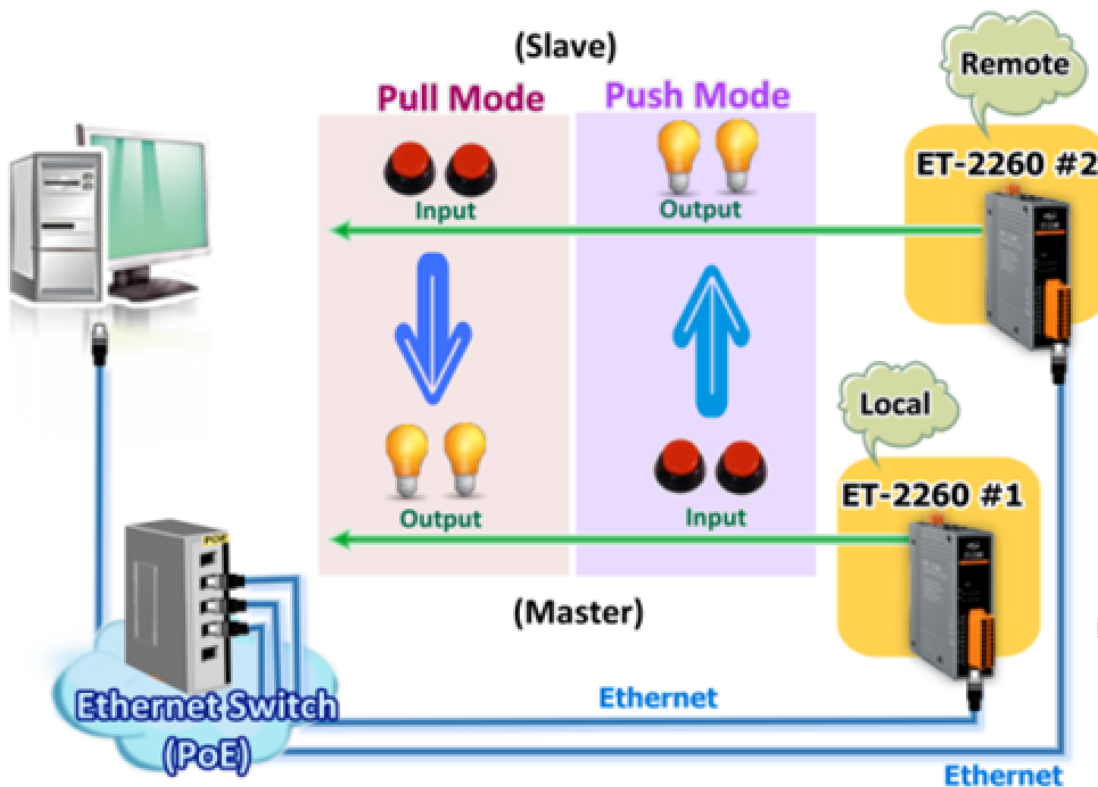


Figure 5-1.1

Step 2: Configure the Ethernet Settings

Contact your Network Administrator to obtain the correct network configuration information for the ET-2200 series modules (e.g., ET-2260 #1 and #2), such as the IP Address, Subnet Mask, and Gateway details. Refer to Section 3.3 “Configuring the Network Settings” for more details.

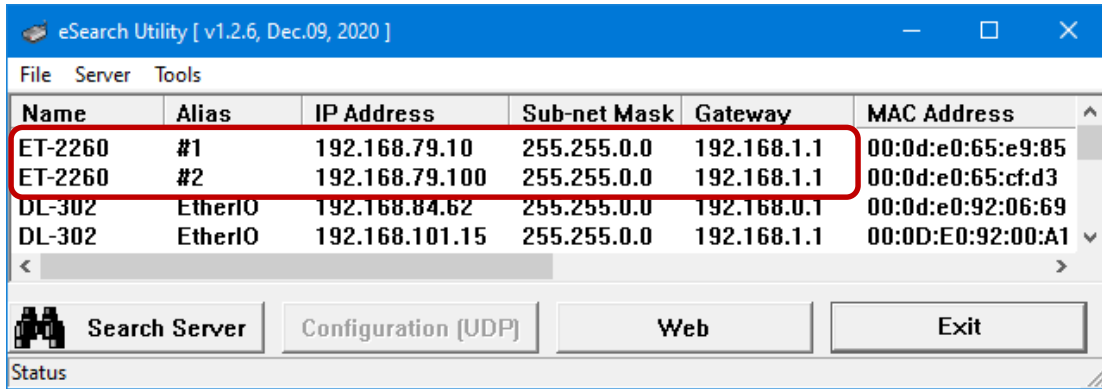


Figure 5-1.2

Step 3: Configure the I/O Pair connection on the Web Server

1. In the eSearch Utility, select **ET-2260 #1 module** and then click the “**Web**” button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the “**Submit**” button to display the configuration page.



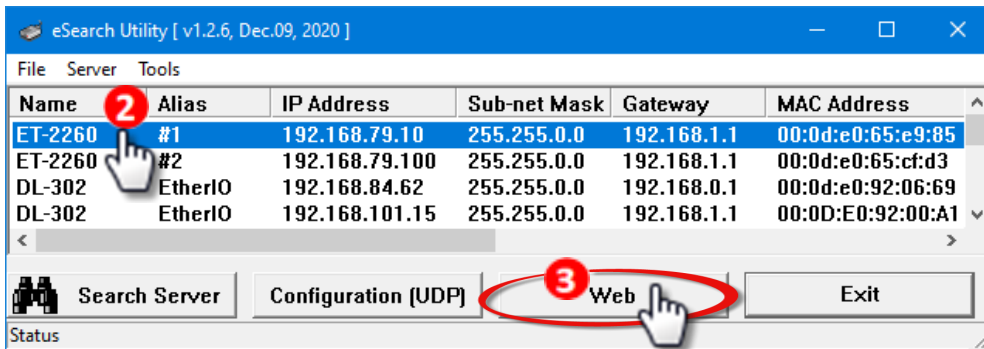


Figure 5-1.3

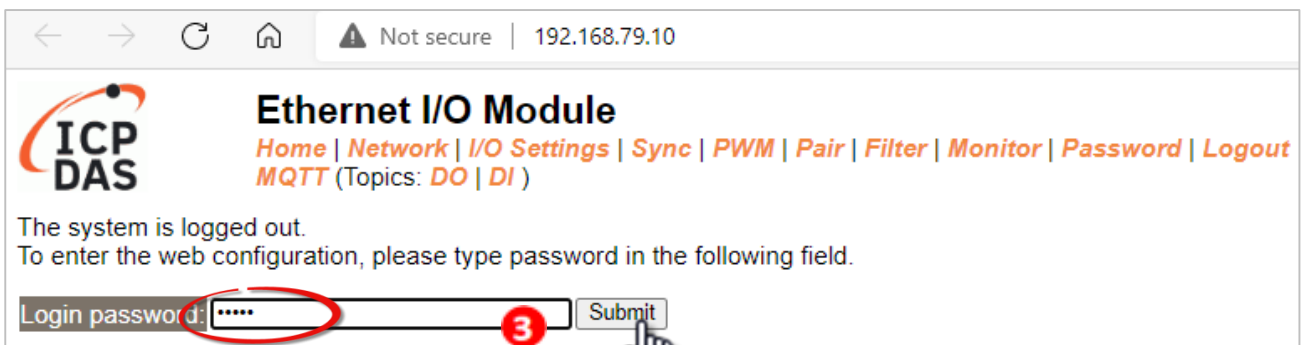

3. Click the **“Pair”** tab to display the I/O Pair-connection Settings page.

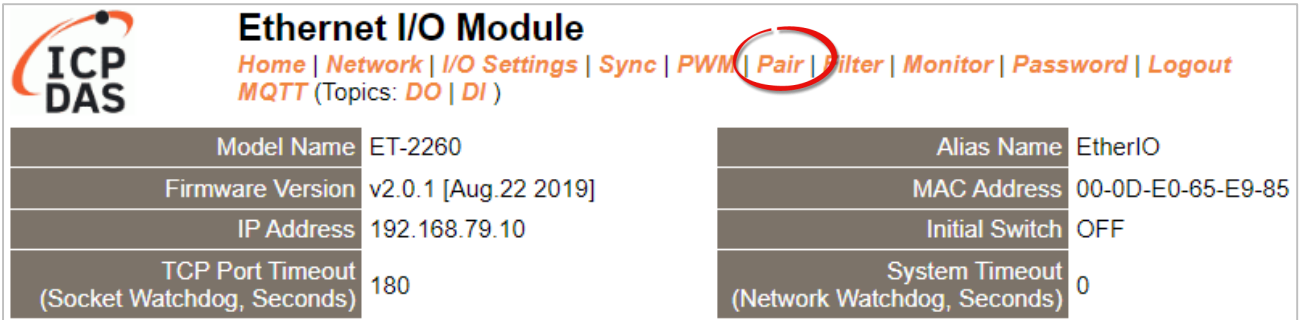

Ethernet I/O Module
[Home](#) | [Network](#) | [I/O Settings](#) | [Sync](#) | [PWM](#) | [Pair](#) | [Filter](#) | [Monitor](#) | [Password](#) | [Logout](#)
 MQTT (Topics: [DO](#) | [DI](#))

Model Name	ET-2260	Alias Name	EtherIO
Firmware Version	v2.0.1 [Aug.22 2019]	MAC Address	00-0D-E0-65-E9-85
IP Address	192.168.79.10	Initial Switch	OFF
TCP Port Timeout (Socket Watchdog, Seconds)	180	System Timeout (Network Watchdog, Seconds)	0

Figure 5-1.4

5.1.1 Pull Mode

4. In the “Pair-connection Settings”, select **“PULL”** from the **“Mode”** drop-down options.
5. Enter the **IP address for ET-2260 #2 module** in the **“Remote IP”** field.
6. Enter the **TCP Port for ET-2260 #2 module** in the **“Remote Port”** field.
7. Enter a **DI Count Value for ET-2260 #2 module** in the **“DI Count”** field (Remote DI to Local DO).

The following is an example of a **pull mode** configuration:
 Enter **“2”** in the **“DI Count”** field. This means **DI x 2 of ET-2260 #2 module** is mapped to **DO x 2 of ET-2260 #1 module**.

8. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:
 PULL Mode: (Remote DI -> Local DO)
 PUSH Mode: (Local DI -> Remote DO)
 Function in "BLUE" text available in "PUSH" Mode Only
 | 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP	Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PULL	192 168 79 100	502	1	1000 ms	2	0	0	TCP	Submit
02	Disable	0 0 0 0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0 0 0 0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0 0 0 0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0 0 0 0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-1.5

5.1.2 Push Mode

1. In the “Pair-connection Settings”, select “**PUSH**” from the “**Mode**” drop-down options.
2. Enter the **IP address for ET-2260 #2 module** in the “**Remote IP**” field.
3. Enter the **TCP Port for ET-2260 #2 module** in the “**Remote Port**” field.
4. Enter a **DI Count Value for ET-2260 #1 module** in the “**DI Count**” field.
(Local DI to Remote DO).

The following is an example of a **Push mode** configuration:
 Enter “**2**” in the “**DI Count**” field. This means **DI x 2 of ET-2260 #1 module** is mapped to **DO x 2 of ET-2260 #2 module**.

5. Select **Modbus protocol (e.g., “TCP”)** from the “**TCP/UDP**” drop-down options.
6. Click the “**Submit**” button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP				Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PULL	192	168	79	100	502	1	1000 ms	2	0	0	TCP	Submit
02	PUSH	192	168	79	100	502	1	1000 ms	2	0	0	TCP	Submit
03	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-1.6

5.2 Two Modules Pushing the Local DI to each other (1-to-1, Push Mode)

Step 1: Connect the device to a Network, a PC and a Power supply.

Confirm that the ET-2200 series modules are functioning correctly. Refer to [Chapter 3 “Getting Started”](#) for more details. An example configuration shown below:

Note that ET-2260 module is used in this example.

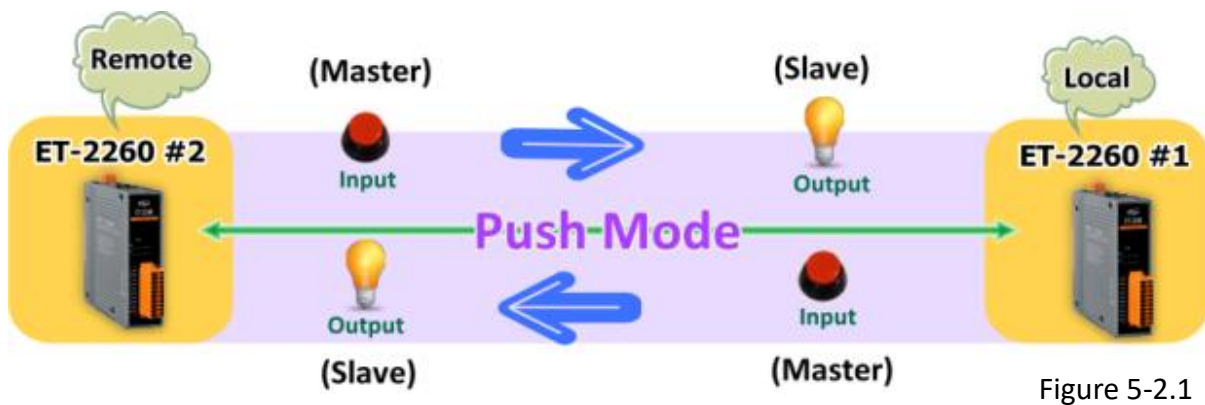


Figure 5-2.1

Step 2: Configure the Ethernet Settings

Contact your Network Administrator to obtain the correct network configuration information for the ET-2200 series modules (e.g., ET-2260 #1 and #2), such as the IP Address, Subnet Mask, and Gateway details. Refer to [Section 3.3 “Configuring the Network Settings”](#) for more details.

Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Address
ET-2260	#1	192.168.79.10	255.255.0.0	192.168.1.1	00:0d:e0:65:e9:85
ET-2260	#2	192.168.79.100	255.255.0.0	192.168.1.1	00:0d:e0:65:cf:d3
DL-302	EtherIO	192.168.84.62	255.255.0.0	192.168.0.1	00:0d:e0:92:06:69
DL-302	EtherIO	192.168.101.15	255.255.0.0	192.168.1.1	00:0D:E0:92:00:A1

Figure 5-2.2

Step 3: Configure the I/O Pair connection on the ET-2260 #1 module

1. In the eSearch Utility, select **ET-2260 #1 module** and then click the **“Web”** button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the **“Submit”** button to display the configuration page.
3. Click the **“Pair”** tab to display the I/O Pair-connection Settings page.

Refer to [Figures 5-1.3 to 5-1.4](#) for illustrations of how to perform the above procedure.

4. In the “Pair-connection Settings”, select **“PUSH”** from the **“Mode”** drop-down options.
5. Enter the **IP address for ET-2260 #2 module** in the **“Remote IP”** field.
6. Enter the **TCP Port for ET-2260 #2 module** in the **“Remote Port”** field.
7. Enter a **DI Count Value for ET-2260 #1 module** in the **“DI Count”** field (Local DI to Remote DO).

For example, enter **“1”** in the **“DI Count”** field. This means **DI x1 of ET-2260 #1 module** is mapped to **DO1 x of ET-2260 #2 module**.

8. Select **Modbus protocol (e.g., “TCP”)** from the **“TCP/UDP”** drop-down options.
9. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP				Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PUSH	192	168	79	100	502	1	1000 ms	1	0	0	TCP	Submit
02	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-2.3

Step 4: Configure the I/O Pair connection on the ET-2260 #2 module

1. In the eSearch Utility, select **ET-2260 #2 module** and then click the **“Web”** button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the **“Submit”** button to display the configuration page.
3. Click the **“Pair”** tab to display the I/O Pair-connectionSettings page.

Refer to [Figures 5-1.3 to 5-1.4](#) for illustrations of how to perform the above procedure.

4. In the “Pair-connection Settings”, select **“PUSH”** from the **“Mode”** drop-down options.
5. Enter the **IP address for ET-2260 #1 module** in the **“Remote IP”** field.
6. Enter the **TCP Port for ET-2260 #1 module** in the **“Remote Port”** field.
7. Enter a **DI Count Value for ET-2260 #2 module** in the **“DI Count”** field (Local DI to Remote DO).

For example, enter **“1”** in the **“DI Count”** field. This means **DI x1 of ET-2260 #2 module** is mapped to **DO1 x of ET-2260 #1 module**.

8. Select **Modbus protocol (e.g., “TCP”)** from the **“TCP/UDP”** drop-down options.
9. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP				Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PUSH	192	168	79	10	502	1	1000 ms	1	0	0	TCP	Submit
02	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-2.4

5.3 Several Modules Pulling the Remote DI (M-to-1) (Pull Mode)

Step 1: Connect the device to a Network, a PC and a Power supply.

Confirm that the ET-2200 series modules and remote slave device are functioning correctly. Refer to Chapter 3 “Getting Started” for more details. An example configuration shown below:

Note that ET-2260 and ET-7255 module are used in this example.

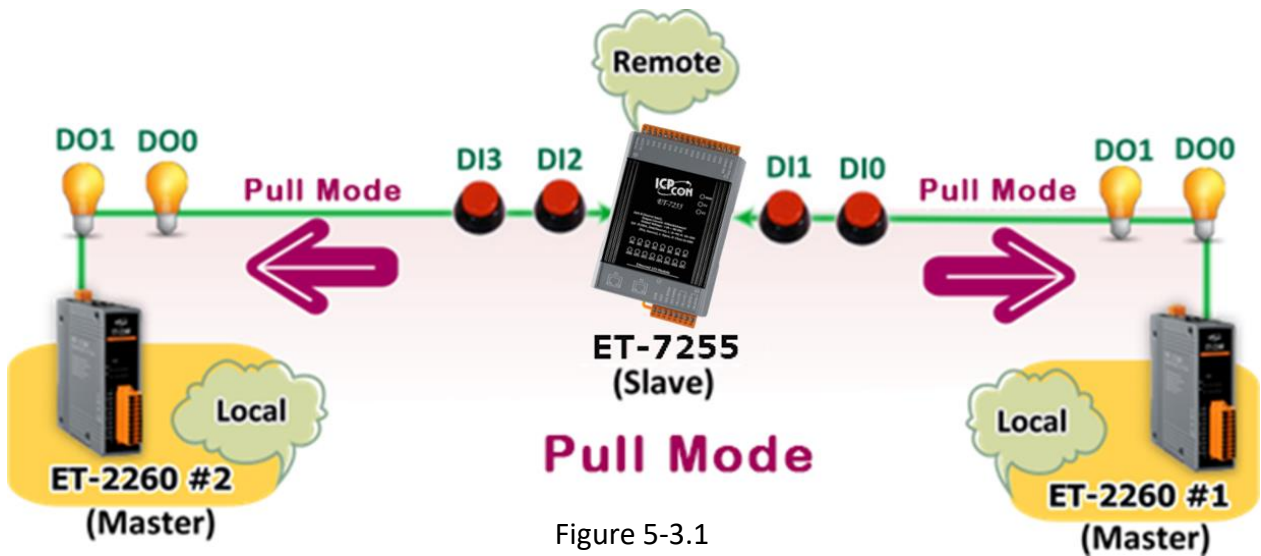


Figure 5-3.1

Step 2: Configure the Ethernet Settings

Contact your Network Administrator to obtain the correct network configuration information for the ET-2200 series modules and remote slave device (e.g., ET-2260 #1, #2 and ET-7255), such as the IP Address, Subnet Mask, and Gateway details. Refer to Section 3.3 “Configuring the Network Settings” for more details.

Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Address
ET-2260	#1	192.168.79.10	255.255.0.0	192.168.1.1	00:0d:e0:65:e9:85
ET-2260	#2	192.168.79.100	255.255.0.0	192.168.1.1	00:0d:e0:65:cf:d3
DL-302	EtherIO	192.168.84.62	255.255.0.0	192.168.0.1	00:0d:e0:92:06:69
DI-302	EtherIO	192.168.101.15	255.255.0.0	192.168.1.1	00:0d:e0:92:00:a1
ET-7255/PET-7255	Slave	192.168.79.55	255.255.0.0	192.168.1.1	00:0d:e0:65:ed:d1

Figure 5-3.2

Step 3: Configure the I/O Pair connection on the ET-2260 #1 module

1. In the eSearch Utility, select **ET-2260 #1 module** and then click the **“Web”** button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the **“Submit”** button to display the configuration page.
3. Click the **“Pair”** tab to display the I/O Pair-connectionSettings page.

Refer to [Figures 5-1.3 to 5-1.4](#) for illustrations of how to perform the above procedure.

4. In the “Pair-connection Settings”, select **“PULL”** from the **“Mode”** drop-down options.
5. Enter the **IP address for remote slave device (e.g., ET-7255)** in the **“Remote IP”** field.
6. Enter the **TCP Port for remote slave device (e.g., ET-7255)** in the **“Remote Port”** field.
7. Enter a **DI Count Value for remote slave device (e.g., ET-7255)** in the **“DI Count”** field (Remote DI to Local DO).

For example, enter **“2”** in the **“DI Count”** field. This means **DI x 2 of the ET-7255 module** is mapped to **DO x 2 of ET-2260 #1 module**.

8. Enter the DI address for remote slave device (e.g., ET-7255) in the **“DI Addr”** field. (Remote DI to Local DO).

For example, enter **“0”** in the **“DI Addr”** field. This means DI addresses **DI0 and DI1 of the ET-7255 module** are mapped to **DO x 2 of ET-2260 #1 module**.

9. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP				Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PULL	192	168	79	55	502	1	1000 ms	2	0	0	TCP	Submit
02	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-3.3

Step 4: Configure the I/O Pair connection on the ET-2260 #2 module

1. In the eSearch Utility, select **ET-2260 #2 module** and then click the **“Web”** button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the **“Submit”** button to display the configuration page.
3. Click the **“Pair”** tab to display the I/O Pair-connection Settings page.

Refer to [Figures 5-1.3 to 5-1.4](#) for illustrations of how to perform the above procedure.

4. In the “Pair-connection Settings”, select **“PULL”** from the **“Mode”** drop-down options.
5. Enter the **IP address for remote slave device (e.g., ET-7255)** in the **“Remote IP”** field.
6. Enter the **TCP Port for remote slave device (e.g., ET-7255)** in the **“Remote Port”** field.
7. Enter a **DI Count Value for remote slave device (e.g., ET-7255)** in the **“DI Count”** field. (Remote DI to Local DO).

For example, enter **“2”** in the **“DI Count”** field. This means **DI x2 of the ET-7255 module** is mapped to **DO x2 of ET-2260 #2 module**.

8. Enter the **DI address for remote slave device (e.g., ET-7255)** in the **“DI Addr”** field. (Remote DI to Local DO).

For example, enter **“2”** in the **“DI Addr”** field. This means DI addresses **DI2 and DI3 of the ET-7255 module** are mapped to **DO x2 of ET-2260 #2 module**.

9. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP				Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PULL	192	168	79	55	502	1	1000 ms	2	2	0	TCP	Submit
02	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-3.4

5.4 Several Modules Pushing the Local DI (M-to-1) (Push Mode)

Step 1: Connect the device to a Network, a PC and a Power supply.

Confirm that the ET-2200 series modules and remote slave device are functioning correctly. Refer to [Chapter 3 “Getting Started”](#) for more details. An example configuration shown below:

Note that ET-2260 and ET-7255 module are used in this example.

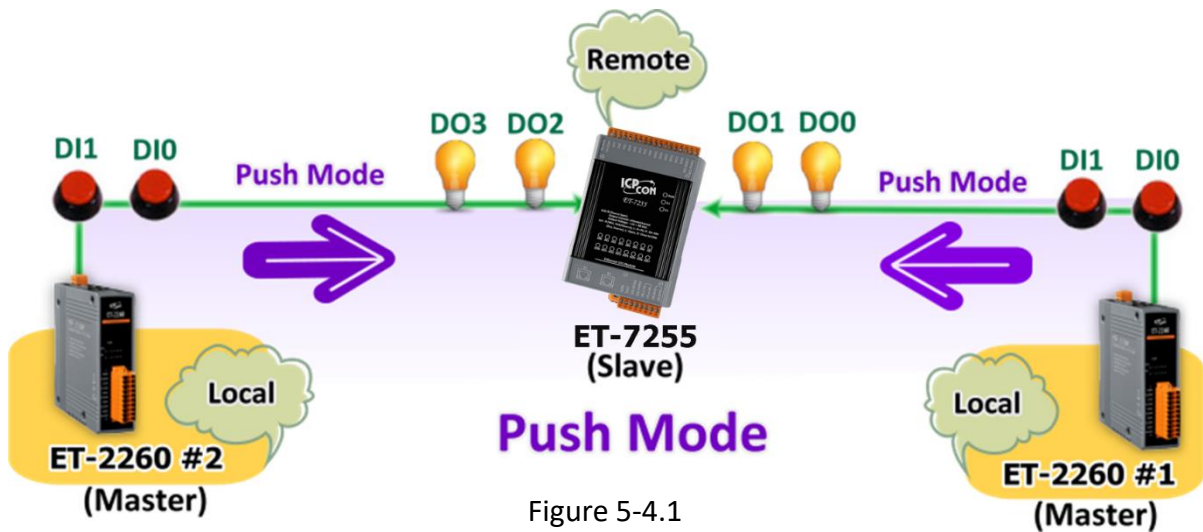


Figure 5-4.1

Step 2: Configure the Ethernet Settings

Contact your Network Administrator to obtain the correct network configuration information for the ET-2200 series modules and remote slave device (e.g., ET-2260 #1, #2 and ET-7255), such as the IP Address, Subnet Mask, and Gateway details. Refer to [Section 3.3 “Configuring the Network Settings”](#) for more details.

Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Address
ET-2260	#1	192.168.79.10	255.255.0.0	192.168.1.1	00:0d:e0:65:e9:85
ET-2260	#2	192.168.79.100	255.255.0.0	192.168.1.1	00:0d:e0:65:cf:d3
DL-302	EtherIO	192.168.64.62	255.255.0.0	192.168.0.1	00:0d:e0:32:06:69
DL-302	EtherIO	192.168.101.15	255.255.0.0	192.168.1.1	00:0D:E0:92:00:A1
ET-7255/PET-7255	Slave	192.168.79.55	255.255.0.0	192.168.1.1	00:0d:e0:65:ed:d1

The screenshot shows the eSearch Utility interface with a table of network configurations. The table has columns for Name, Alias, IP Address, Sub-net Mask, Gateway, and MAC Address. The rows represent different modules: ET-2260 #1, ET-2260 #2, DL-302 EtherIO, DL-302 EtherIO, and ET-7255/PET-7255 Slave. The ET-2260 #1, #2, and ET-7255/PET-7255 Slave rows are highlighted with a red box. The interface also shows buttons for Search Server, Configuration (UDP), Web, and Exit.

Figure 5-4.2

Step 3: Configure the I/O Pair connection on the ET-2260 #1 module

1. In the eSearch Utility, select **ET-2260 #1 module** and then click the **“Web”** button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the **“Submit”** button to display the configuration page.
3. Click the **“Pair”** tab to display the I/O Pair-connection Settings page.

Refer to [Figures 5-1.3 to 5-1.4](#) for illustrations of how to perform the above procedure.

4. In the “Pair-connection Settings”, select **“PSUH”** from the **“Mode”** drop-down options.
5. Enter the **IP address for remote slave device (e.g., ET-7255)** in the **“Remote IP”** field.
6. Enter the **TCP Port for remote slave device (e.g., ET-7255)** in the **“Remote Port”** field.
7. Enter a **DI Count Value for ET-2260 #1 module** in the **“DI Count”** field.
(Local DI to Remote DO).

For example, enter **“2”** in the **“DI Count”** field. This means **DI x2 of the ET-2260 #1 module** is mapped to **DO x2 of the ET-7255 module**.

8. Enter the **DO address for remote slave device (e.g., ET-7255)** in the **“DO Addr”** field
(Local DI to Remote DO).

For example, enter **“0”** in the **“DO Addr”** field. This means DO addresses **DO0** and **DO1 of the ET-7255 module** are mapped to **DI x2 of ET-2260 #1 module**.

9. Select **Modbus protocol (e.g., “TCP”)** from the **“TCP/UDP”** drop-down options.
10. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP	Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PUSH	192 . 168 . 79 . 55	502	1	1000 ms	2	0	0	TCP	Submit
02	Disable	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0 . 0 . 0 . 0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-4.3

Step 4: Configure the I/O Pair connection on the ET-2260 #2 module

1. In the eSearch Utility, select **ET-2260 #2 module** and then click the **“Web”** button to launch the browser program and connect to the web server.
2. Enter the password in the Login password field (**the default password is “Admin”**), and then click the **“Submit”** button to display the configuration page.
3. Click the **“Pair Connection”** tab to display the I/O Pair-connectionSettings page.

Refer to [Figures 5-1.3 to 5-1.4](#) for illustrations of how to perform the above procedure.

4. In the “Pair-connection Settings”, select **“PSUH”** from the **“Mode”** drop-down options.
5. Enter the **IP address for remote slave device (e.g., ET-7255)** in the **“Remote IP”** field.
6. Enter the **TCP Port for remote slave device (e.g., ET-7255)** in the **“Remote Port”** field.
7. Enter a **DI Count Value for ET-2260 #2 module** in the **“DI Count”** field (Local DI to Remote DO).

For example, enter **“2”** in the **“DI Count”** field. This means **DI x2 of the ET-2260 #2 module** is mapped to **DO x2 of the ET-7255 module**.

8. Enter the **DO address for remote slave device (e.g., ET-7255)** in the **“DO Addr”** field. (Local DI to Remote DO).

For example, enter **“2”** in the **“DO Addr”** field. This means DO addresses **DO2 and DO3 of the ET-7255 module** are mapped to **DI x2 of ET-2260 #2 module**.

9. Select **Modbus protocol (e.g., “TCP”)** from the **“TCP/UDP”** drop-down options.
10. Click the **“Submit”** button to complete the configuration.

Pair-Connection Settings:

PULL Mode: (Remote DI -> Local DO)

PUSH Mode: (Local DI -> Remote DO)

Function in "BLUE" text available in "PUSH" Mode Only

| 1~5 | 6~10 | 11~12 |

#	Mode	Remote IP				Remote Port	Net ID	Scan Time	DI Count	DI Addr	DO Addr	TCP/UDP	Update
01	PUSH	192	168	79	55	502	1	1000 ms	2	0	2	TCP	Submit
02	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
03	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
04	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit
05	Disable	0	0	0	0	502	1	1000 ms	0	0	0	TCP	Submit

Figure 5-4.4

6. Modbus Information

The ET-2200 series is a family of IP-based Modbus I/O devices that allow you to remotely control DI/DO terminals via an Ethernet connection and uses a master-slave communication technique in which only one device (the master) can initiate a transaction (called queries), while other devices (slaves) respond by either supplying the requested data to the master, or by taking the action requested in the query.

Most SCADA (Supervisory Control and Data Acquisition) and HMI software, such as Citect (Schneider Electric), ICONICS, iFIX, InduSoft, Intouch, Entivity Studio, Entivity Live, Entivity VLC, Trace Mode, Wizcon (EIUTIONS), and Wonderware, etc. can be used to easily integrate serial devices via the Modbus protocol.

6.1 What is Modbus TCP/IP?

Modbus is a communication protocol that was developed by Modicon Inc. in 1979. Detailed information regarding the Modbus protocol can be found at: <http://www.modbus.org>.

The different versions of the Modbus protocol used today include Modbus RTU, which is based on serial communication interfaces such as RS-485 and RS-232, as well as Modbus ASCII and Modbus TCP, which uses the Modbus RTU protocol embedded into TCP packets.

Modbus TCP is an internet protocol. The protocol embeds a Modbus frame into a TCP frame so that a connection oriented approach is obtained, thereby making it more reliable. The master queries the slave and the slave responds with a reply. The protocol is open and, hence, highly scalable.

6.2 Modbus Message Structure

Modbus devices communicate using a master-slave (client-server) technique in which only one device (the master/client) can initiate transactions (called queries). The other devices (slaves/servers) respond by either supplying the requested data to the master, or by taking the action requested in the query.

A query from a master will consist of a slave, or broadcast, address, a function code defining the requested action, any required data, and an error checking field. A response from a slave consists of fields confirming the action taken, any data to be returned, and an error checking field.

➤ The Modbus/TCP Message Structure

Bytes 00 - 05	Bytes 06 - 11
6-byte header	RTU Data

➤ The Leading 6 bytes of a Modbus/TCP Protocol Query

Byte 00	Byte 01	Byte 02	Byte 03	Byte 04	Byte 05
Transaction Identifier		Protocol Identifier		Length Field (upper byte)	Length Field (lower byte)

- ✓ **Transaction identifier** = Assigned by the Modbus/TCP master (client)
- ✓ **Protocol identifier** = 0
- ✓ **Length field (upper byte)** = 0 (since all messages are smaller than 256)
- ✓ **Length field (lower byte)** = The number of following RTU data bytes

➤ Modbus RTU Data Structure

Byte 06	Byte 07	Bytes 08 - 09	Bytes 10 - 11
Net ID (Station Number)	Function Code	Data Field	
		Reference Number (Address Mapping)	Number of Points

- ✓ **Net ID:** Specifies the address of the receiver (i.e., the Modbus/TCP slave).
- ✓ **Function Code:** Specifies the message type.
- ✓ **Data Field:** The data block.

Net ID (Station Number)

The first byte in the frame structure of a Modbus RTU query is the address of the receiver. A valid address is in the range from 0 to 247. Address 0 is used for general broadcast purposes, while addresses 1 to 247 are assigned to individual Modbus devices.

Function Code

The second byte in the message structure of a Modbus RTU query is the function code, which describes what the slave device is required to do. Valid function codes range between 1 and 255. To answer the query, the slave device uses the same function code as contained in the request. The highest bit of the function code will only be set to '1' if an error occurs in the system. In this way, the master device will know whether or not the message has been correctly transmitted.

Code	Function	Reference (Address)
01 (0x01)	Read the Status of the Coils (Read DO Readback values)	0xxxx
02 (0x02)	Read the Status of the Input (Read DI values)	1xxxx
03 (0x03)	Read the Holding Registers (Read AO Readback values)	4xxxx
04 (0x04)	Read the Input Registers (Read AI values)	3xxxx
05 (0x05)	Force a Single Coil (Write DO value)	0xxxx
06 (0x06)	Set a Single Register (Write AO value)	4xxxx
15 (0x0F)	Force Multiple Coils (Write DO values)	0xxxx
16 (0x10)	Set Multiple Registers (Write AO values)	4xxxx

Data Field

Data is transmitted in 8-, 16- and 32-bit format. The data for 16-bit registers is transmitted in high-byte first format. For example: 0x0A0B will be transmitted as 0x0A, 0x0B. The data for 32-bit registers is transmitted as two 16-bit registers, and is low-word first. For example: 0x0A0B0C0D will be transmitted as 0x0C, 0x0D, 0x0A, 0x0B.

The data field for messages sent between a master device and a slave device contains additional information about the action to be taken by the master, or any information requested by the slave. If the master does not require this information, the data field can be empty.

Reference (Address)	Description
0xxxx	<p><u>Read/Write Discrete Outputs or Coils.</u></p> <p>An 0x reference address is used to output device data to a Digital Output channel.</p>
1xxxx	<p><u>Read Discrete Inputs.</u></p> <p>The ON/OFF status of a 1x reference address is controlled by the corresponding Digital Input channel.</p>
3xxxx	<p><u>Read Input Registers.</u></p> <p>A 3x reference register contains a 16-bit value received from an external source, e.g. an analog signal.</p>
4xxxx	<p><u>Read/Write Output or Holding Registers.</u></p> <p>A 4x register is used to store 16 bits of numerical data (binary or decimal), or to send data from the CPU to an output channel.</p>



Note:

For more details regarding the address mapping, refer to [Section 6.3 \(DIO\)](#) or [Section 6.4 \(AIO\)](#) “Modbus Register Table”.

6.2.1 01(0x01) Read the Status of the Coils (Read DO Readback values)

This function code is used to read either the current status of the coils or the current Digital Output readback value from the ET-2200 series module.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x01
02-03	Starting DO Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte Byte 03 = low byte
04-05	Number of Points (Channels)	2 Bytes	Byte 04 = high byte Byte 05 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x01
02	Byte Count	1 Byte	Byte Count of the Response ($n = (\text{Points}+7)/8$)
03	Data	n Bytes	n= 1; Byte 03 = data bit 7 to 0 n= 2; Byte 04 = data bit 15 to 8 n= m; Byte m+2 = data bit (8m-1) to 8(m-1)

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x81
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details

Example: Function 01 (0x01), Readback DOs

➤ Reads the Digital Output value

	[Leading 6 bytes]	[Request]
Command:	<u>01 02 00 00 00 06</u>	<u>01 01 00 00 00 02</u>
	[Leading 6 bytes]	[Response]
Response:	<u>01 02 00 00 00 04</u>	<u>01 01 01 03</u>

➤ A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
	Bytes 00-03	01 02 00 00 (Message Number)
	Bytes 04-05	00 06 (Number of bytes remaining in this frame)
	[Request]	
	Byte 00	01 (Net ID)
	Byte 01	01 (Function Code)
	Byte 02-03	00 00 (Starting DO Address)
	Byte 04-05	00 02 (Number of Points)

Response:	[Leading 6 bytes]	
	Bytes 00-03	01 02 00 00 (Message Number)
	Bytes 04-05	00 04 (Number of bytes remaining in this frame)
	[Response]	
	Byte 00	01 (Net ID)
	Byte 01	01 (Function Code)
	Byte 02	01 (Byte Count of the Response)
	Byte 03	03 (Value for DO0 to DO1)

6.2.2 02(0x02) Read the Status of the Input (Read DI values)

This function code is used to read the current Digital Input value from the ET-2200 series module.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x02
02-03	Starting DI Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte Byte 03 = low byte
04-05	Number of Points (Channels)	2 Bytes	Byte 04 = high byte Byte 05 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x02
02	Byte Count	1 Byte	Byte Count of Response ($n = (\text{Points} + 7) / 8$)
03	Data	n Bytes	n= 1; Byte 03 = data bit 7 to 0 n= 2; Byte 04 = data bit 15 to 8 n= m; Byte m+2 = data bit(8m-1) to 8(m-1)

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x82
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details

Example: Function 02 (0x02), ReadDIs

➤ Reads the Digital Input value

Command:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Request] <u>01 02 00 00 00 02</u>
Response:	[Leading 6 bytes] <u>01 02 00 00 00 04</u>	[Response] <u>01 02 01 03</u>

➤ A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	02	(Function Code)
Byte 02-03	00 00	(Starting DI Address)
Byte 04-05	00 02	(Number of Points)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 04	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	02	(Function Code)
Byte 02	01	(Byte Count of the Response)
Byte 03	03	(Value for DI0 to DI1)

6.2.3 03(0x03) Read the Holding Registers (Read AO Readback values)

This function code is used to readback either the current values in the holding registers or the Analog Output value from the ET-2200 series module. These registers are also used to store the preset values for the Digital Counter, the host watchdog timer, the module name and the TCP timeout, etc.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x03
02-03	Starting AO Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address.. Byte 02 = high byte ; Byte 03 = low byte
04-05	Number of 16-bit Registers (Channels)	2 Bytes	Word Count Byte 04 = high byte ; Byte 05 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x03
02	Byte Count	1 Byte	Byte Count of the Response (n=Points x 2 Bytes)
03~	Register Values	n Bytes	Register Values n= 2; Byte 03 = high byte Byte 04 = low byte n= m; Byte m+1 = high byte Byte m+2 = low byte

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x83
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details

Example: Function 03 (0x03), Read AOs

- Reads the name of the module for the ET-2260

	[Leading 6 bytes]	[Request]
Command:	<u>01 02 00 00 00 06</u>	<u>01 03 01 03 00 01</u>
	[Leading 6 bytes]	[Response]
Response:	<u>01 02 00 00 00 05</u>	<u>01 03 02 22 60</u>

- A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	03	(Function Code)
Byte 02-03	01 03	(Starting AO Address)
Byte 04-05	00 01	(Number of Points)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 05	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	03	(Function Code)
Byte 02	02	(Byte Count of the Response)
Byte 03-04	22 60	(Module Name)

6.2.4 04(0x04) Read the Input Registers (Read AI values)

This function code is used to read either the input registers or the current analog input value from the ET-2200 series module. These registers are also used to store the current value for the digital counter, the number of DI channels and the number of DO channels, etc.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x04
02-03	Starting AI Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte Byte 03 = low byte
04-05	Number of 16-bit Registers (Channels)	2 Bytes	Word Count Byte 04 = high byte Byte 05 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x04
02	Byte Count	1 Byte	Byte Count of the Response (n=Points x 2 Bytes)
03~	Register Values	n Bytes	Register Values n= 2; Byte 03 = high byte Byte 04 = low byte n= m; Byte m+1 = high byte Byte m+2 = low byte

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x84
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details.

Example: Function 04 (0x04), Read AIs

- Reads the number of the DI channels on the ET-2260

	[Leading 6 bytes]	[Request]
Command:	<u>01 02 00 00 00 06</u>	<u>01 04 00 64 00 01</u>
	[Leading 6 bytes]	[Response]
Response:	<u>01 02 00 00 00 05</u>	<u>01 04 02 00 02</u>

- A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	04	(Function Code)
Byte 02-03	0064	(Starting AI Address)
Byte 04-05	00 01	(Number of 16-bit Registers)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 05	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	04	(Function Code)
Byte 02	02	(Byte Count of the Response)
Byte 03-04	00 02	(Number of DI channels on the ET-2260)

6.2.5 05(0x05) Force a Single Coil (Write DO value)

This function code is used to set the status of a single coil or a single Digital Output value for the ET-2200 series module.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x05
02-03	DO Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte ; Byte 03 = low byte
04-05	Output Value	2 Bytes	0xFF 00 sets the output to ON. 0x00 00 sets the output to OFF. All other values are invalid and will not affect the coil. Byte 04 = high byte ; Byte 05 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x05
02-03	DO Address	2 Bytes	The value is the same as Bytes 02-03 of the Request
04-05	Output Value	2 Bytes	The value is the same as Bytes 04-05 of the Request

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x85
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details.

Example: Function 05 (0x05), WriteDO

➤ **Sets channel DO1 to ON**

Command:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Request] <u>01 05 00 01 FF 00</u>
Response:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Response] <u>01 05 00 01 FF 00</u>

➤ **A description of the command and response is as follows:**

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	05	(Function Code)
Byte 02-03	0001	(DO Address)
Byte 04-05	FF 00	(Sets the output to ON)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	05	(Function Code)
Byte 02-03	00 01	(DO Address)
Byte 04-05	FF 00	(Indicates that the DO has been set to ON)

6.2.6 06(0x06) Set a Single Register (Write AO value)

This function code is used to set a specific holding register to store the configuration values for the ET-2200 series module.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x06
02-03	AO Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte Byte 03 = low byte
04-05	Register Value	2 Bytes	Register Value Byte 04 = high byte Byte 05 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x06
02-03	AO Address	2 Bytes	The value is the same as Bytes 02-03 of the Request
04-05	Register Value	2 Bytes	The value is the same as Bytes 04-05 of the Request

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x86
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details.

Example: Function 06 (0x06), WriteAO

- Sets the system timeout to 60 seconds

Command:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Request] <u>01 06 01 08 00 3C</u>
Response:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Response] <u>01 06 01 08 00 3C</u>

- A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	06	(Function Code)
Byte 02-03	0108	(AO Address)
Byte 04-05	003C	(Sets the system timeout to 60 seconds)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	06	(Function Code)
Byte 02-03	01 08	(AO Address)
Byte 04-05	003C	(Indicates that the system timeout has been set to 60 seconds)

6.2.7 15(0x0F) Force Multiple Coils (Write DO values)

This function code is used to set the status of multiple coils or to write multiple Digital Output values for the ET-2200 series module.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x0F
02-03	Starting DO Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte ; Byte 03 = low byte
04-05	Number of Output Channels (Points)	2 Bytes	Byte 04 = high byte ; Byte 05 = low byte
06	Byte count	1 Byte	$n = (\text{Points} + 7) / 8$
07	Output value	n Bytes	A bit corresponds to a channel. A value of 1 for a bit denotes that the channel is ON, while a value of 0 denotes that the channel is OFF. n= 1; Byte 07 = data bit 7 to 0 n= 2; Byte 08 = data bit 15 to 8 n= m; Byte m+6 = data bit (8m-1) to 8 (m-1)

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x0F
02-03	Starting DO Address	2 Bytes	The value is the same as Bytes 02-05 of the Request
04-05	Number of Output Channels (Points)	2 Bytes	

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x8F
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details.

Example: Function 15 (0x0F), WriteDOs

➤ Sets the safe value (DO0 ~ DO1)

Command:	[Leading 6 bytes] <u>01 02 00 00 00 08</u>	[Request] <u>01 0F 01 0B 00 02 01 03</u>
Response:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Response] <u>01 0F 01 0B 00 02</u>

➤ A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 08	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	0F	(Function Code)
Byte 02-03	010B	(Starting DO Address)
Byte 04-05	0002	(Number of Output Channels)
Byte 06	01	(Byte Count)
Byte 07	03	(Output Value)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	0F	(Function Code)
Byte 02-03	01 0B	(Starting DO Address)
Byte 04-05	00 02	(Number of Input Channels)

6.2.8 16(0x10) Set Multiple Registers (Write AO values)

This function code is used to set multiple holding registers that are used to store the configuration values for the ET-2200 series module.

[Request]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x10
02-03	Starting AO Address	2 Bytes	Refer to Section 6.3 or 6.4 "Modbus Register Table" to find the address. Byte 02 = high byte ; Byte 03 = low byte
04-05	Number of 16-bit Registers (Channels)	2 Bytes	Word Count. Byte 04 = high byte ; Byte 05 = low byte
06	Byte Count	1 Byte	n = Points x 2 Bytes
07	Register Values	n Bytes	Register Values. n= 2; Byte 03 = high byte Byte 04 = low byte n= m; Byte m+1 = high byte Byte m+2 = low byte

[Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x10
02-03	Starting AO Address	2 Bytes	The value is the same as Bytes 02-03 of the Request
04-05	Number of 16-bit Registers (Channels)	2 Bytes	The value is the same as Bytes 04-05 of the Request

[Error Response]

Byte	Description	Size	Value
00	Net ID (Station Number)	1 Byte	1 to 247
01	Function Code	1 Byte	0x90
02	Exception Code	1 Byte	Refer to the Modbus Standard Specifications for more details.

Example: Function 16 (0x10), WriteAOs

- Sets the preset value for the digital counter

Command:	[Leading 6 bytes] <u>01 02 00 00 00 0B</u>	[Request] <u>01 10 00 32 0 001 02 03 E8 00 00</u>
Response:	[Leading 6 bytes] <u>01 02 00 00 00 06</u>	[Response] <u>01 10 00 32 00 01</u>

- A description of the command and response is as follows:

Command:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 0B	(Number of bytes remaining in this frame)
	[Request]	
Byte 00	01	(Net ID)
Byte 01	10	(Function Code)
Byte 02-03	0032	(Starting AO Address)
Byte 04-05	0001	(Number of 16-bit Registers)
Byte 06	02	(Byte Count)
Byte 07-10	03 E8 00 00	(Preset value for the digital counter)

Response:	[Leading 6 bytes]	
Bytes 00-03	01 02 00 00	(Message Number)
Bytes 04-05	00 06	(Number of bytes remaining in this frame)
	[Response]	
Byte 00	01	(Net ID)
Byte 01	10	(Function Code)
Byte 02-03	0032	(Starting AO Address)
Byte 04-05	00 01	(word count)

6.3 Modbus Register Table (For DIO Module)

Data from 16-bit registers is transmitted in high-byte first order. For example: 0x0A0B ==> 0x0A, 0x0B. Data from 32-bit registers is transmitted as two 16-bit registers, and is in low-word first order. For example: 0x0A0B0C0D ==> 0x0C, 0x0D, 0x0A, 0x0B.

6.3.1 Common Functions

➤ 0xxxx: DO Address (Base 0)

Starting Address	Points	Description	Bits per Point	Range	Access Type
127 (0x7F)	1	Restores all default web settings	1	1 = Restore	W (Pulse)
128 (0x80)	1	Default ID Settings	1	1 = Restore	W (Pulse)
133 (0x85)	1	Reboots the ET-2200 module	1	1 = Reboot	W (Pulse)
Notes	"W": Write				

➤ 3xxxx: AIAddress (Base 0)

Starting Address	Points	Description	Bits per Point	Range	Access Type
151 (0x97)	1	Firmware Version	16	"123" denotes that the version is 1.2.3	R
158 (0x9E)	1	Modbus Communication Status	16	0 = No Error 1 = Timeout	R
160 (0xA0)	1	Pair-Connection Status	16	0 = Normal 1 = Timeout 2 = Disconnected	R
Notes	"R": Read				

➤ **4xxx: AO Address (Base 0)**

Starting Address	Points	Description	Bits per Point	Range	Access Type
255 (0xFF)	1	CPU Reset Status	16	1 = Reset at Power-on 2 = Reset by the WDT 3 = Reset using the reset command	R/W
257 (0x101)	1	Setsthe Host Watchdog Timer (WDT)	16	<5: Disabled 5 to 65535: Enabled (units: seconds) 0:Default If the ET-2200 series module loses communication with the host PC for more than the period defined in the WDT settings, the DO channels will revert to their safe values and the Host WDT Events Counter will be increased by one.	R/W/F
258 (0x102)	1	Host WDT Events	16	Denotes how many Host WDT Events have occurred since the last CPU reset	R/W
259 (0x103)	1	Module Name	16	Module Name	R
263 (0x107)	1	Setsthe TCP Timeout Value	16	<5: Disabled 5 to 65535: Enabled (units: seconds) 0: Default	R/W/F
264 (0x108)	1	Setsthe System Timeout Value	16	<30: Disabled 30~65535: Enabled (unit: second) 0: default	R/W/F
Notes	<p>“R”: Read; “W”: Write; “F”: Setting is recorded in flash as default. Warning: Frequent writing to the Flash can cause it to become corrupt.</p>				

6.3.2 Specific Functions

The nDI and nDO parameters for each ET-2200 series module used in the following Modbus Address Tables are as follows:

Model Name	Universal DIO (UDIO)	Number of DO channels (nDO)	Number of DI channels (nDI)
ET-2242/ET-2242U	-	16	-
ET-2251	-	-	16
ET-2254/ET-2254P	16	Depend on your configuration	Depend on your configuration
ET-2255/ET-2255U	-	8	8
ET-2260	-	6	6
ET-2261	-	10	-
ET-2261-16	-	16	-
ET-2268	-	8	-

➤ 0xxxx: DOAddress (Base 0)

Starting Address	Points	Description	Bits per Point	Range	Access Type
0 (0x00)	1 to nDO	Digital Output Channels	1	0 = Off 1 = On	R/W
32 (0x20)	1	Clears the status of all high latched DI Channels	1	1 = Clear	W
33 (0x21)	1	Clears the status of all low latched DI Channels	1	1 = Clear	W
34 (0x22)	1 to nDI	Clears the high speed digital counter for all DI Channels	1	1 = Clear	W
60 (0x3C)	1	Saves specific data to Flash (The access type for some registers is labeled with an "E")	1	0: cannot be write 1: can be write	W
100 (0x64)	1 to nDO	Enables the PWM for all DO Channels	1	0 = Off 1 = On (Default= 0)	R/W
150 (0x96)	1	Enables the high and low latches for all DI Channels	1	0 = Disable 1 = Enable (Default= 0)	R/W/F

Starting Address	Points	Description	Bits per Point	Range	Access Type
151 (0x97)	1 to nDI	Enables the high speed digital counter for all DI Channels	1	0 = Disable 1 = Enable (Default= 0)	R/W/F
190 (0xBE)	1 to nDI	Enables frequency measurement for all DI Channels	1	0 = Disable 1 = Enable (Default= 0)	R/W/F
235 (0xEB)	1 to nDO	Sets the Power-on value for all DO Channels	1	0 = Off 1 = On (Default= 0)	R/W/F
267 (0x10B)	1 to nDO	Sets the Safe value for all DO Channels	1	0 = Off 1 = On (Default= 0)	R/W/F
299 (0x12B)	1	Force the DI/DO Mode. (for the ET-2254 only) 0 = Dynamic I/O type based on DO requests. 1 = Static I/O type by configuration (web or Modbus).	1	0 = Dynamic 1= Static	R/W
300 ~ 315 (0x12C ~ 0x13B)	1 to UDIO	Sets the Universal DIO channels to DI or DO Port. (for the ET-2254 only) 300 is the CH0 address, 301 is the CH1 address, and so on.	1	0 = DO type 1= DI type	R/W
Notes	<p>“R”: Read “W”: Write “F”: Settings are recorded in flash by default “E”: After writing DO[60] register, the data will be stored in flash. Warning: Frequency writing to the Flash can cause it to become corrupt.</p>				

**Note:**

Because of the characteristics of the relay functions, it is recommended that the PWM on ET-2260/2261/2268 series (i.e., modules with relay functions) is not used for extended periods of time.

➤ **1xxx: DIAddress (Base 0)**

Starting Address	Points	Description	Bits per Point	Range	Access Type
0 (0x00)	1 to nDI	The status of all Digital Input Channels	1	0 = Off 1 = On	R
32 (0x20)	1 to nDI	The status of all high latched DI Channels	1	0 = None 1 = Latched	R
64 (0x40)	1 to nDI	The status of all low latched DI Channels	1	0 = None 1 = Latched	R
Notes	"R": Read				


➤ **3xxx: AI Address (Base 0)**

Starting Address	Points	Description	Bits per Point	Value	Access Type
16 (0x10)	1 to nDI	The Digital Counter Value	32	0 to 4294967296	R
64 (0x40)	1 to nDI	The frequency Value * 1,000. (Note: The Client must first divide the value by 1,000.)	32	0 to 4294967296	R

Note: 


The "DI Counter (0x10)" and "DI Frequency (0x40)" that the records data as 32-bit value and is transmitted as two 16-bit registers. Consequently, the register address has an offset of 2, i.e., the address of the second channel will be at starting-address +2, and so on. You can refer to "[FAQ_How do I read DI Counter for the PETL/t\(P\)ET/ET-2200 Series Modules correctly](#)" for more detailed information.

Example: Reads the 6 DI Counter on the ET-2260.

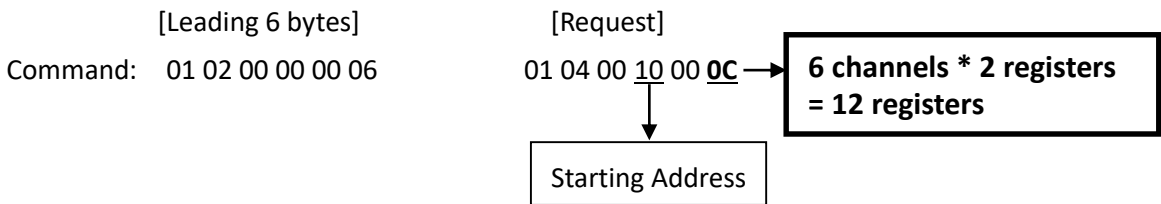

100 (0x64)	1	Number of DI Channels	16	nDI	R
110 (0x6E)	1	Number of DO Channels	16	nDO	R
121 (0x79)	1	Number of high-speed counters	16	nDI	R
Notes	"R": Read				

➤ **4xxx: AO Address (Base 0)**

Starting Address	Points	Description	Bits per Point	Range	Access Type
50 (0x32)	1 to nDI	The preset value for the high speed digital counter	32	0 to 4294967296	R/W/E
<p> Note: “Preset DI Counter Value (0x32)” that the records data as 32-bit value and is transmitted as two 16-bit registers. Consequently, the register address has an offset of 2, i.e., the address of the second channel will be at starting-address +2, and so on. You can refer to “FAQ_How do I read DI Counter for the PETL/t(P)ET/ET-2200 Series Modules correctly” for more detailed information.</p> <p>Example: Reads the preset value of 6DI Counter on the ET-2260.</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="text-align: center; margin-right: 20px;"> <p>[Leading 6 bytes]</p> <p>Command: 01 02 00 00 00 06</p> </div> <div style="text-align: center; margin-right: 20px;"> <p>[Request]</p> <p>01 04 00 <u>32</u> 00 <u>0C</u></p> </div> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <p>6 channels * 2 registers = 12 registers</p> </div> </div> <div style="text-align: center; margin-top: 10px;"> <p>↓</p> <div style="border: 1px solid black; padding: 5px; display: inline-block;">Starting Address</div> </div>					
100 (0x64)	1 to nDO	The duty cycle for the DO PWM The first word (16-bit register) is the high pulse width, while the second word is the low pulse width. The units rein ms, and the resolution is about 10 ms.	32	0 to 65535; 0 to 65535;	R/W/E
150 (0x64)	1 to nDO	The Scan mode for the DI frequency measurement. Refer to Section 4.4.2 “DI/DO Configuration” for more details.	16	1000= 1000ms 100= 100ms 2000=Single pulse	R/W/F
200 (0x64)	1 to nDI	The moving average of the DI frequency measurement.	16	1= No average 2=Average 2 values 4=Average 4 values 8=Average 8 values	R/W/F
268 (0x10C)	1 to nDO	The Min-Switching Time for all DO Channels	16	1 to 65535 second	R/W/F
284 (0x11C)	1 to nDO	The Auto-off Time for all DO Channels	16	1 to 65535 second	R/W/F
Notes	<p>“R”: Read “W”: Write “F”: Settings are recorded in flash by default “E”: After writing the DO[60] register, the data will be stored in flash. Warning: Frequent writing to the Flash can cause it to become corrupt.</p>				

6.4 Modbus Register Table (For AIO Module)

Note that the addresses listed in following table are base 1. For example, the user can use the address 260 (Base 1) or 259 (Base 0) to read the module name.

➤ 3xxxx: AI Address / 4xxxx: AO Address (Base 1)

Address	Description	Attribute
30001 ~ 30008 40001 ~ 40008	Analog input values of channel 0 to 7	R
30101 40101	Number of the digital input channels	R
30111 40111	Number of the digital output channels	R
30121 40121	Number of the analog input channels	R
30131 40131	Number of the analog output channels	R
30152 40152	Firmware version	R
30181 ~ 30195 40181 ~ 40195	Alias name	R
40213 ~ 40220	Type codes of analog input channel 0 to 7	R/W
40258	Ethernet host watchdog timeout value, 5 to 65535, in second, 0 to disable.	R/W
30259 40259	Ethernet host watchdog timeout count.	R
30260 ~ 30261 40260 ~ 40261	Module name.	R
40264	TCP disconnection timeout value, 5 to 65535, in second, 0 to disable.	R/W
40265	Module reset timeout value, 30 to 65535, in second, 0 to disable.	R/W

Appendix A: Troubleshooting


A1. How do I restore the web password for the module to the factory defaults?

The instructions below outline the procedure for resetting the web password to the factory default value.

Note: Be aware that **ALL settings will be restored to the factory default values** after the module is reset.

Step 1

Locate the Init/Run switch that can be found on the top side of the ET-2200 module and set it to the "Init" position. Reboot the module to **load factory default settings** including default web password.

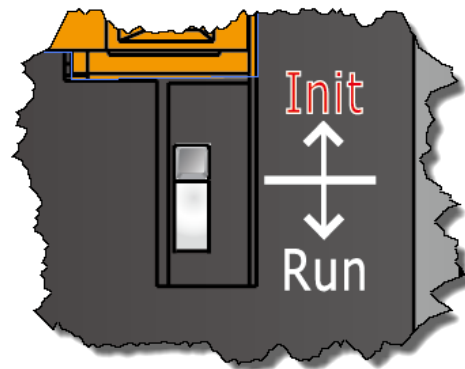


Step 2

Execute either the eSearch Utility or the VxComm Utility to search for any ET-2200 modules connected to the network. Verify that the ET-2200 has been reset to the original factory default settings. The default IP address is 192.168.255.1.

Name	Alias	IP Address	Sub-net Mask	Gateway	MAC Address
iDS-720	UA-Serie...	192.168.85.23	255.255.0.0	192.168.1.1	90:70:65:40:A0:C7
ET-2260	EtherIO	192.168.255.1	255.255.0.0	192.168.0.1	00:0d:e0:65:e9:85
ET-2260	#2	192.168.79.100	255.255.0.0	192.168.1.1	00:0d:e0:65:cf:d3
DL-302	EtherIO	192.168.84.62	255.255.0.0	192.168.0.1	00:0d:e0:92:06:69
DL-302	EtherIO	192.168.101.15	255.255.0.0	192.168.1.1	00:0D:E0:92:00:A1
ET-7255/PET-7255	Slave	192.168.79.55	255.255.0.0	192.168.1.1	00:0d:e0:65:ed:d1


Step 3

Double-click the name of the module to open the Configure Server (UDP) dialog box, and modify the basic settings as necessary, e.g., the IP, Mask and Gateway addresses, and then click the "OK" button to save the new settings.

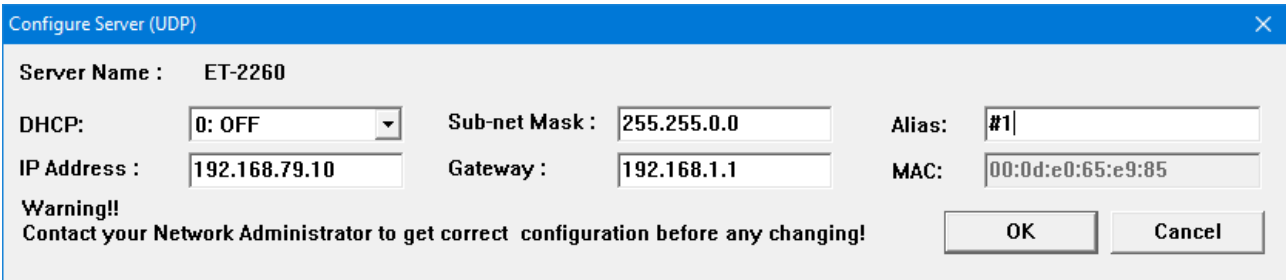


Step 4

Reset the Init/Run switch on the ET-2200 module to the "Run" position and reboot the device.

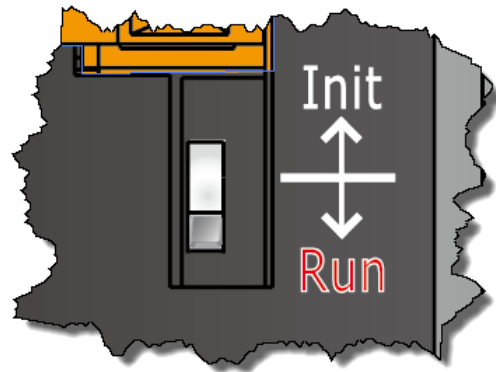

Step 5

Log in to the web configuration pages for the ET-2200 module, using the default web password, "Admin".

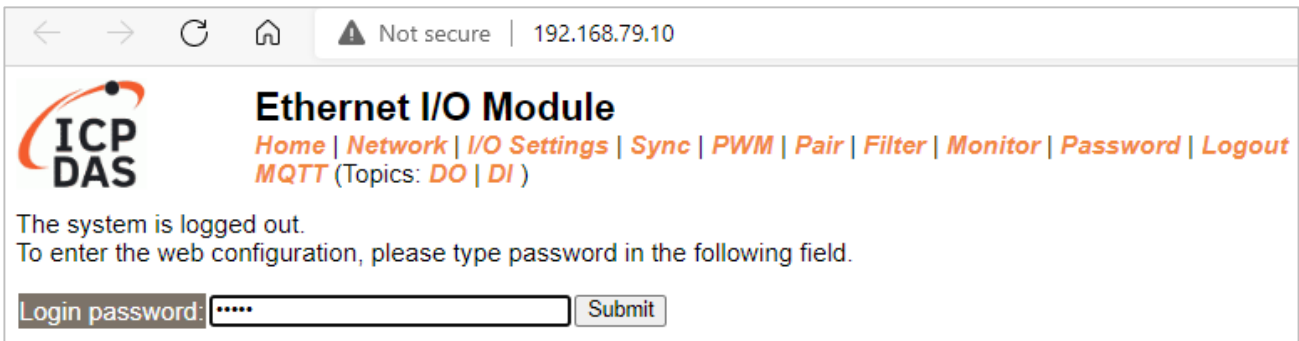

A2. How to update the firmware via Ethernet?


If the module is not functioning correctly (e.g. there is no response to a search request, or if the system LED is continuously displayed as either OFF or ON), download a new firmware from the ICPDAS web site. <http://www.icpdas.com/en/download/show.php?num=2626>

To update the Firmware for your ET-2200 module, connect ET-2200 module and PC in the same sub-network. Please note that there should be only one network card in the PC. Then, download and install the **eSearch Utility**:


http://www.icpdas.com/en/product/guide+Software+Utility_Driver+eSearch__Utility

Step1: Run the **eSearch utility** and click on the **Search Server** button to find the ET-2200 module.


Step2: Right-click on the module name and select **Firmware Update**.

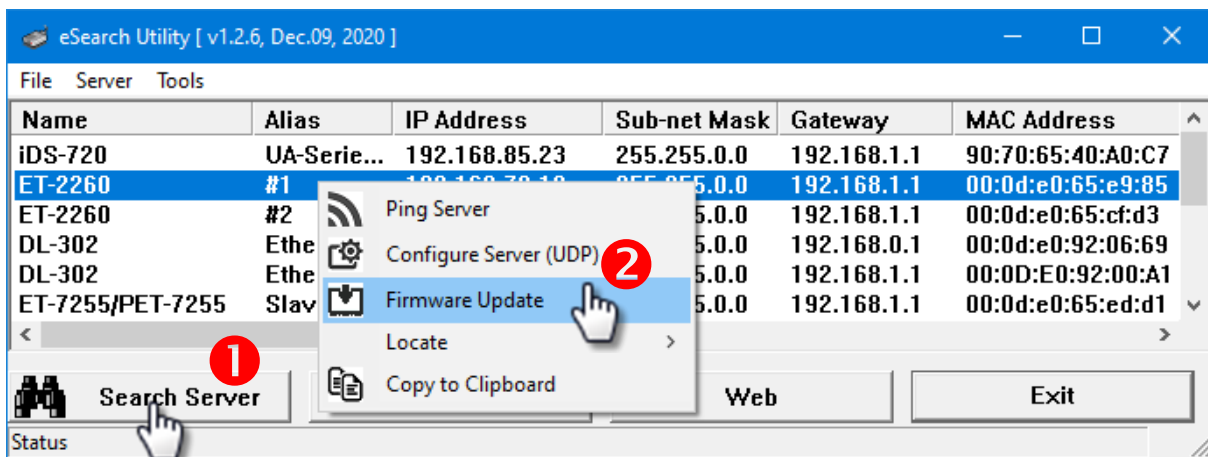


Step3: Select the firmware file and click on the **Open** button.

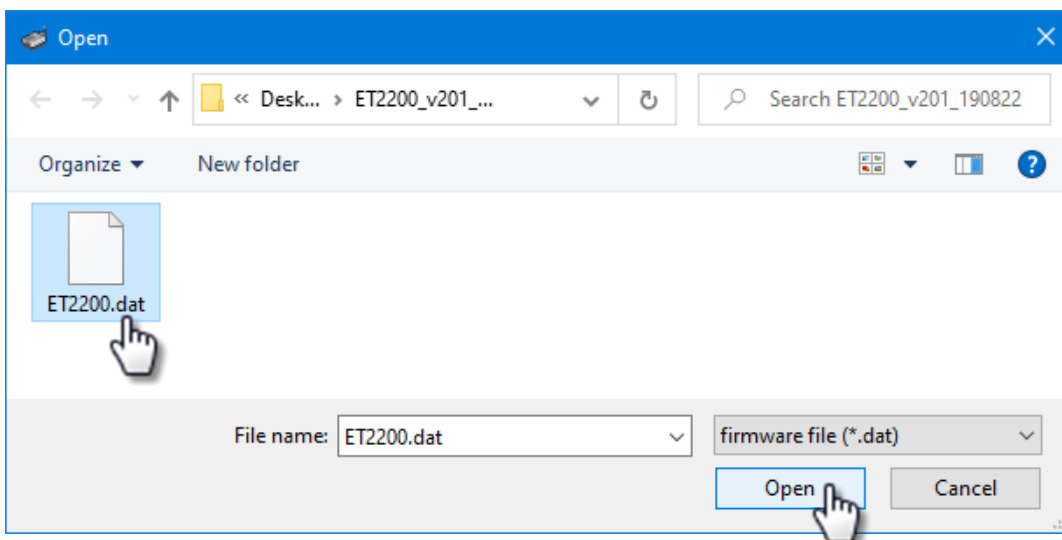

Step4: Make sure the IP address and MAC address are correct. Click on the OK button.

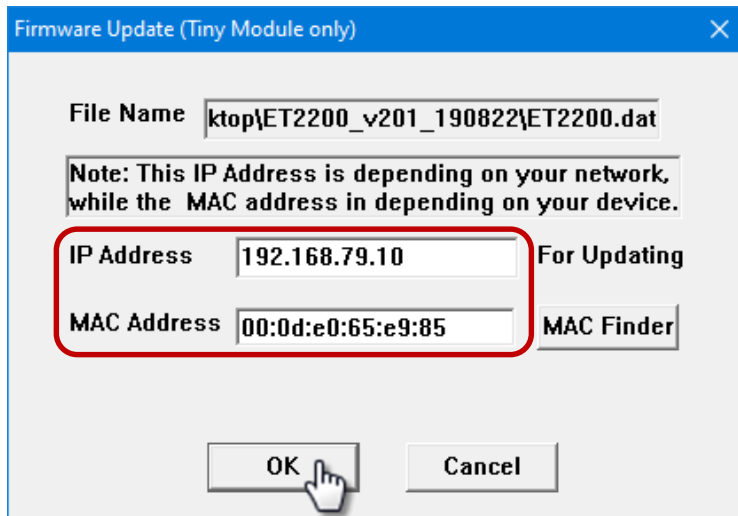

Step5: A command prompt window will be displayed to show the progress.

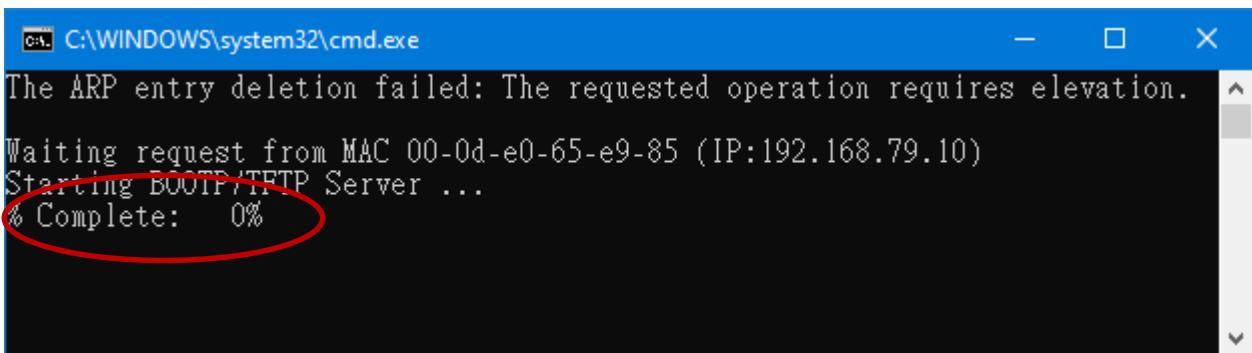



Method 1 - Local Update:

Set the Init/Run switch to the "Init" position and reboot the module to start the update.


Method 2 - Remote Update:

Click the **Web** button and log into the web page of the module, and then click the **Update** button on the **Network** page to start the update.

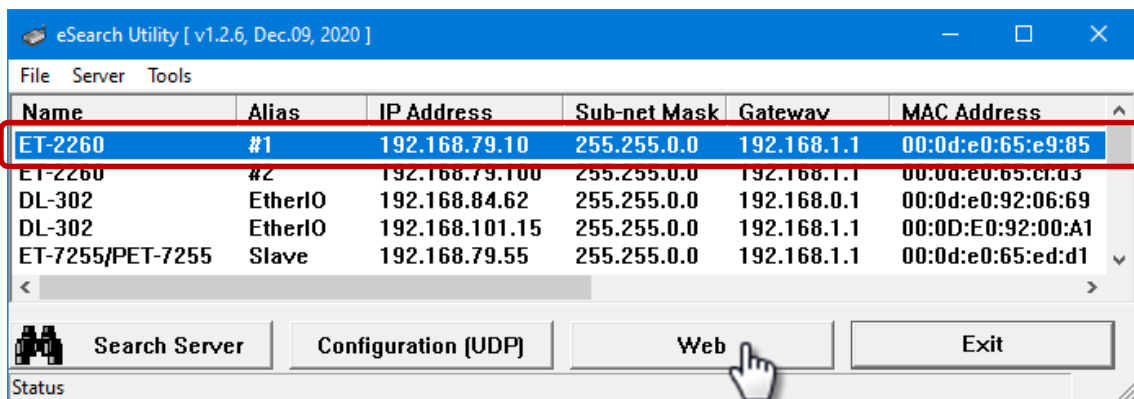


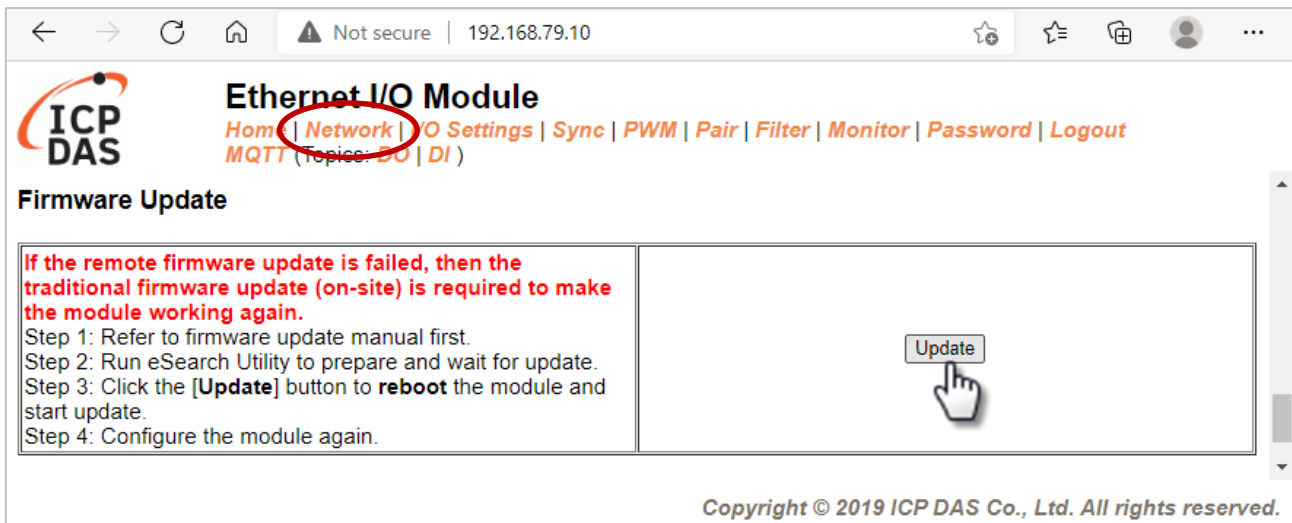


Step6: After the update is complete, press any key to close the window. For the local update, Set the Init/Run switch to the "Run" position and reboot the module.

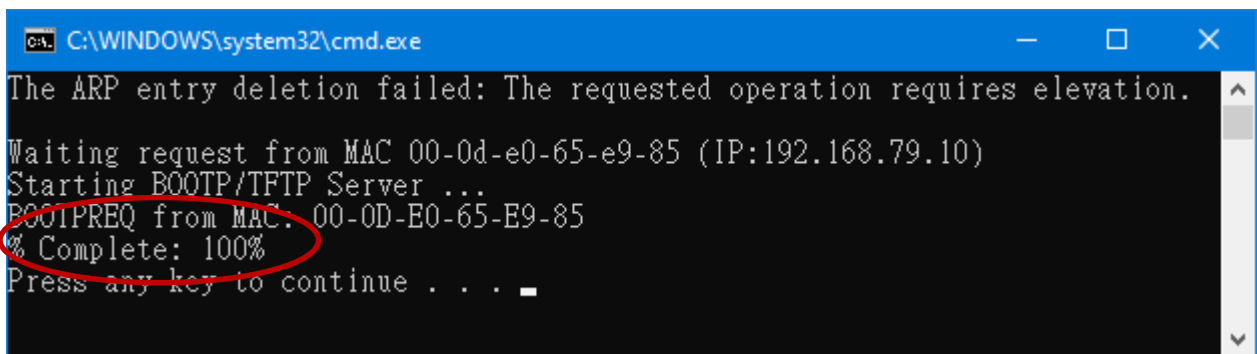

Step7: Search the module again and log into the web page by using the eSearch Utility. After that, the user can check the Firmware Version on the Home page.

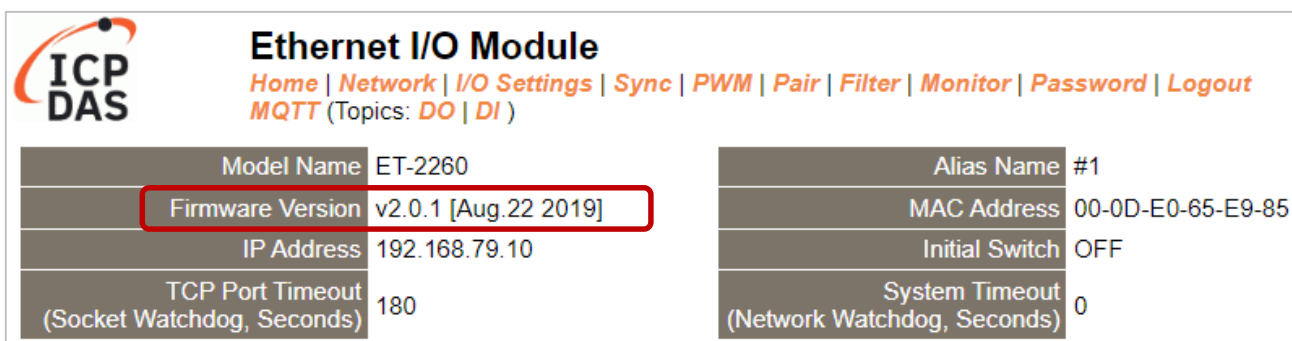

A.3 Why is the Host computer unable to ping or search for the ET-2200 module?

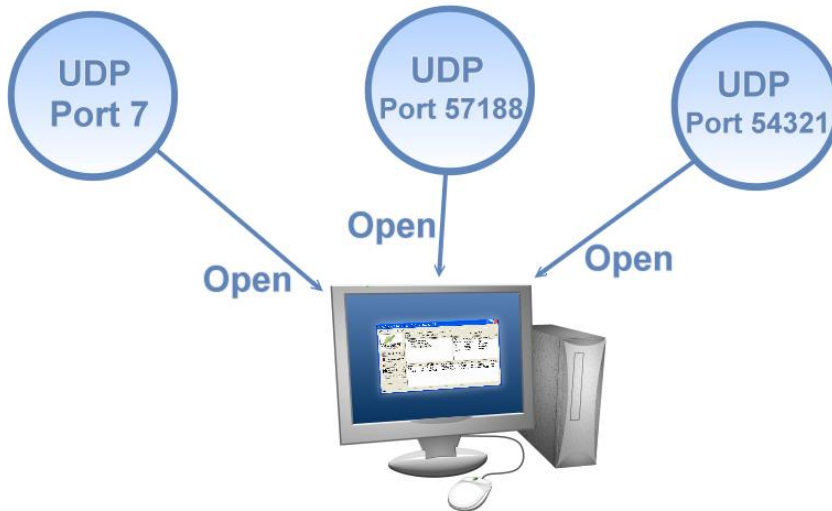

The Host computer can only establish a communication with a module through specific ports. Confirm with your network administrator that access to UDP Port 7, Port 57188 and Port 54321 is not being denied by another network device.

The following provides more detailed information related to TCP/UDP ports:

TCP Port:

Port Number	Description
80	HTTP (Hyper Text Transport Protocol)
502	Modbus Data Port

UDP Port:


Port Number	Description
7	Echo (Ping)
57188	UDP Search Request
54321	UDP Search Response

A.4 What is Digital-Input Filter (DI Filter)?

A: An input signal can come from a myriad of sources, such as buttons, switches, sensors, or relays, etc. Each of these types of mechanical device also contributes to a common problem - “**contact bounce**”.

The switch between Digital Input states is usually accompanied by a number of unwanted pulses, known as “switch bounce”. In certain environments and situations, these input signals may inevitably generate an unstable signal or noise, which can potentially cause incorrect data counting or operation failure. Consequently, it is imperative that these errors are removed from the input signals, especially if the signals are used in crucial applications.

A low-pass Digital Input filter is a software function that can be used to eliminate high-frequency interference from input signals. The input state will only be changed when the width of any new signal is greater than the value specified as the filtering time, meaning that short, high-frequency interference pulses will be ignored, as illustrated in the diagram below. This is especially useful when attempting to eliminate contact bounce.

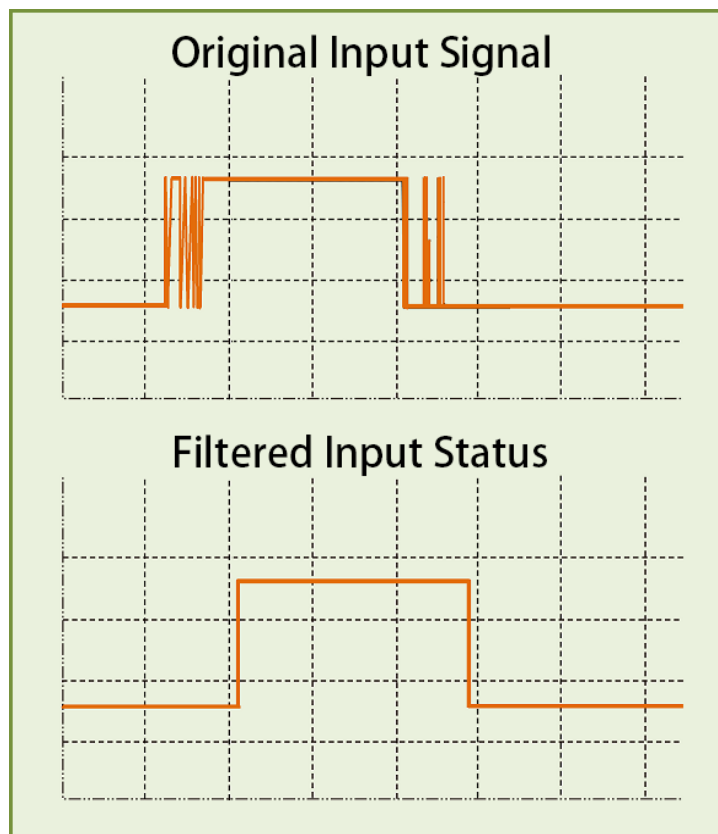

Appendix B: Revision History

This chapter provides revision history information to this document.

The table below shows the revision history.

Revision	Date	Description
1.6.0	Sep. 2021	<ol style="list-style-type: none"> 1. Add the information about ET-2217CI/ 2217CI-4 2. Add Chapter 6.4 Modbus Register (AIO) 3. Add Appendix A.2 ~ A.4
1.5.0	Jun. 2020	Modify the official website related links.
1.4.0	Sep. 2019	Added the information of MQTT function.
1.3.0	Jun. 2018	Added the hardware information about the ET-2261-16.
1.2.0	Jul. 2017	<ol style="list-style-type: none"> 1. Add the software and hardware information about the ET-2242U and ET-2255U. 2. Updated the information about the Firmware Version v1.4.6 [Jun.16, 2017] in Chapter 4 Web Configuration. 3. Add Chapter Appendix A:Troubleshooting. 4. Add Chapter Appendix B: Revision History.
1.1.3	Feb. 2016	<ol style="list-style-type: none"> 1. Added the software and hardware information about the ET-2254P, ET-2261 and ET-2268. 2. Updated the information about the Firmware Version v1.3.9 [Jan.20, 2016] in Chapter 4 Web Configuration.
1.1.0	Nov. 2015	Add the software and hardware information about the ET-2242, ET-2251 and ET-2255.
1.0.0	Sep. 2015	Initial issue